




...kroz život zajedno...

www.ambyenta.com

UPUTSTVO ZA MONTAŽU

KREVET "TOBY" 90x200 cm

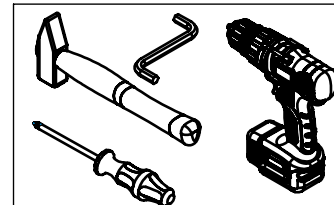

PAKET 1

- Noga 4 kom
- Bočna strana ljestvi 2 kom
- Gazište 2 kom







PAKET 2




- Bočna strana kreveta 2 kom
- Ograda duža 2 kom
- Ograda kraća 2 kom
- Veza uzglavlja/uznožja 4 kom
- Veza srednja uzglavlja/uznožja 2 kom
- Zavjesa 4 kom
- Garantni list 1 kom
- Okov
- Šema montaže 1 kom

PAKET 3


- Podnica 1 kom

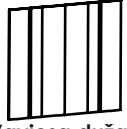


A  Noga 4 kom	B  Veza uzglavlja/uznožja 4 kom	C  Veza srednja uzglavlja/uznožja 2 kom	D  Bočna stranica 2 kom	E  Ograda duža 2 kom	F  Bočna strana ljestvi 2 kom (L+D)
G  Gazište za ljestve 2 kom	H  Ograda kraća 2 kom	I  Podnica 1 kom	J  Zavjesa kraća 3 kom	K  Zavjesa duža 1 kom	
1  Tipla 8x32 64 kom	2  Ljepilo 3 kom	3  Vijak spojni M6x90 18 kom	4  Navrtna poprečna M6 20 kom	5  Inbus ključ 2 kom	6  Vijak konfirmat(inbus) 4 kom
7  Pokrivna kapica 4 kom	8  Vijak spojni M6x65 2 kom	9  Vijak spojni M6x50 2 kom	10  Navojna kapa M6 2 kom	11  Vijak iveral 3,5x30 1 kom	12  Vijak iveral 4x35 6 kom

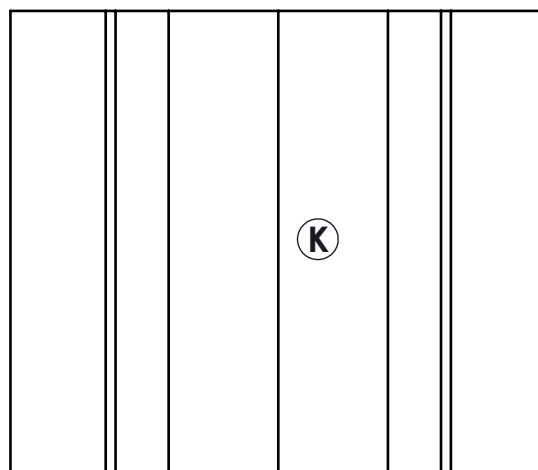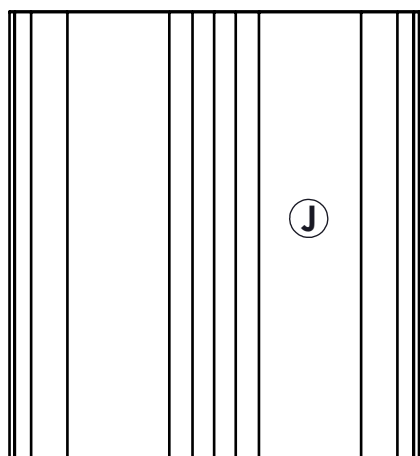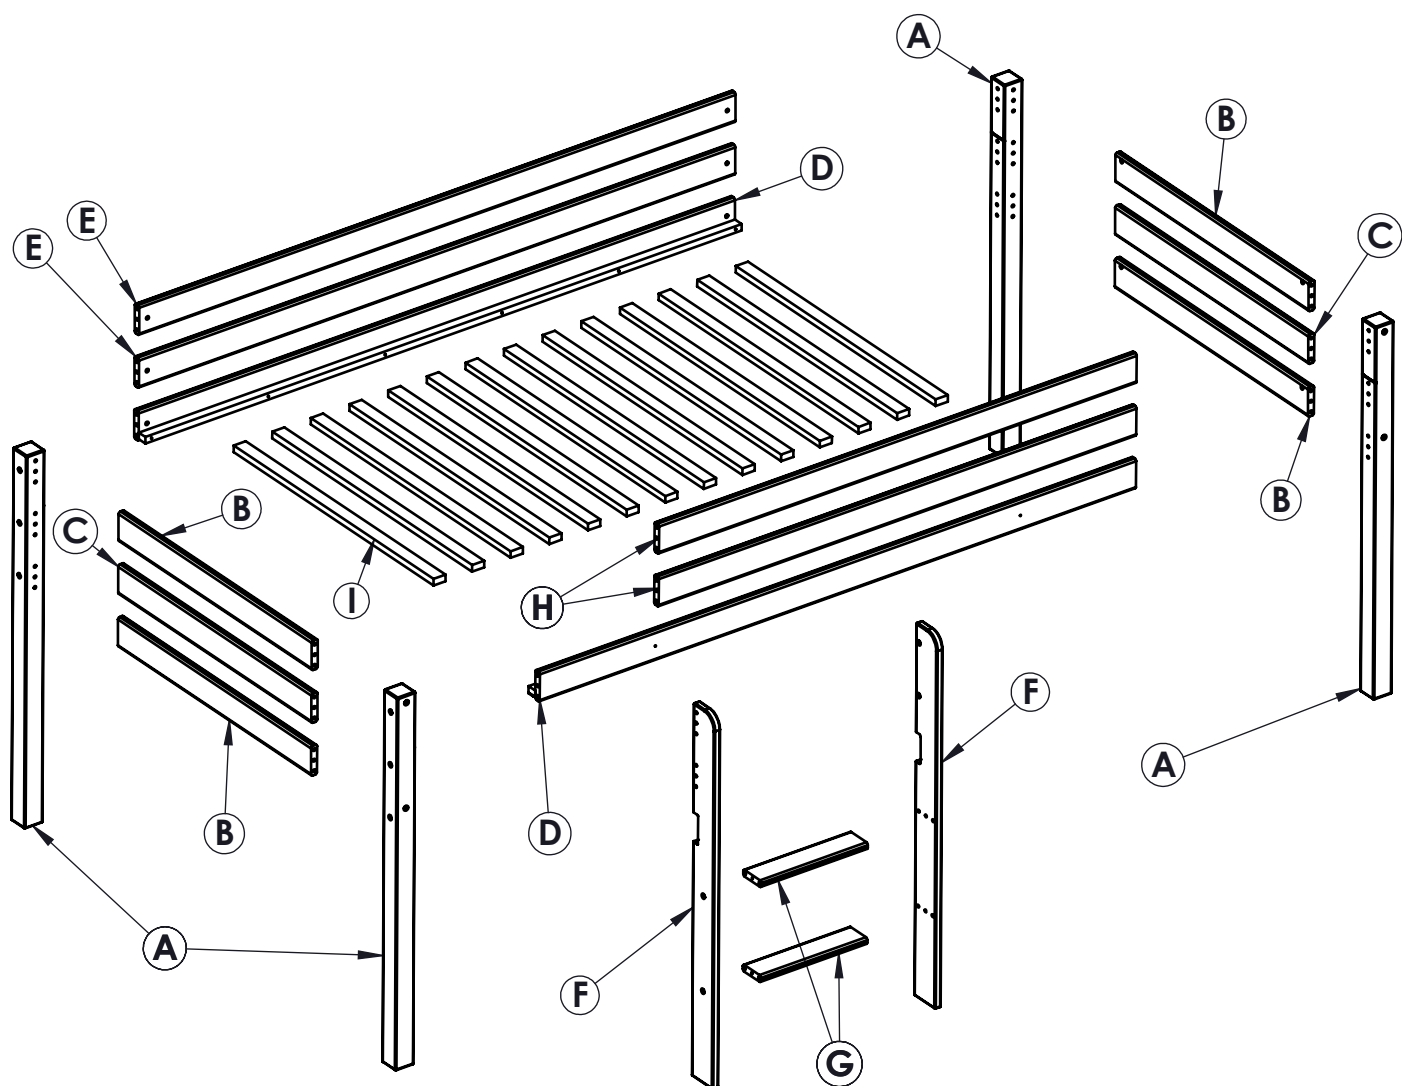



KORAK 1

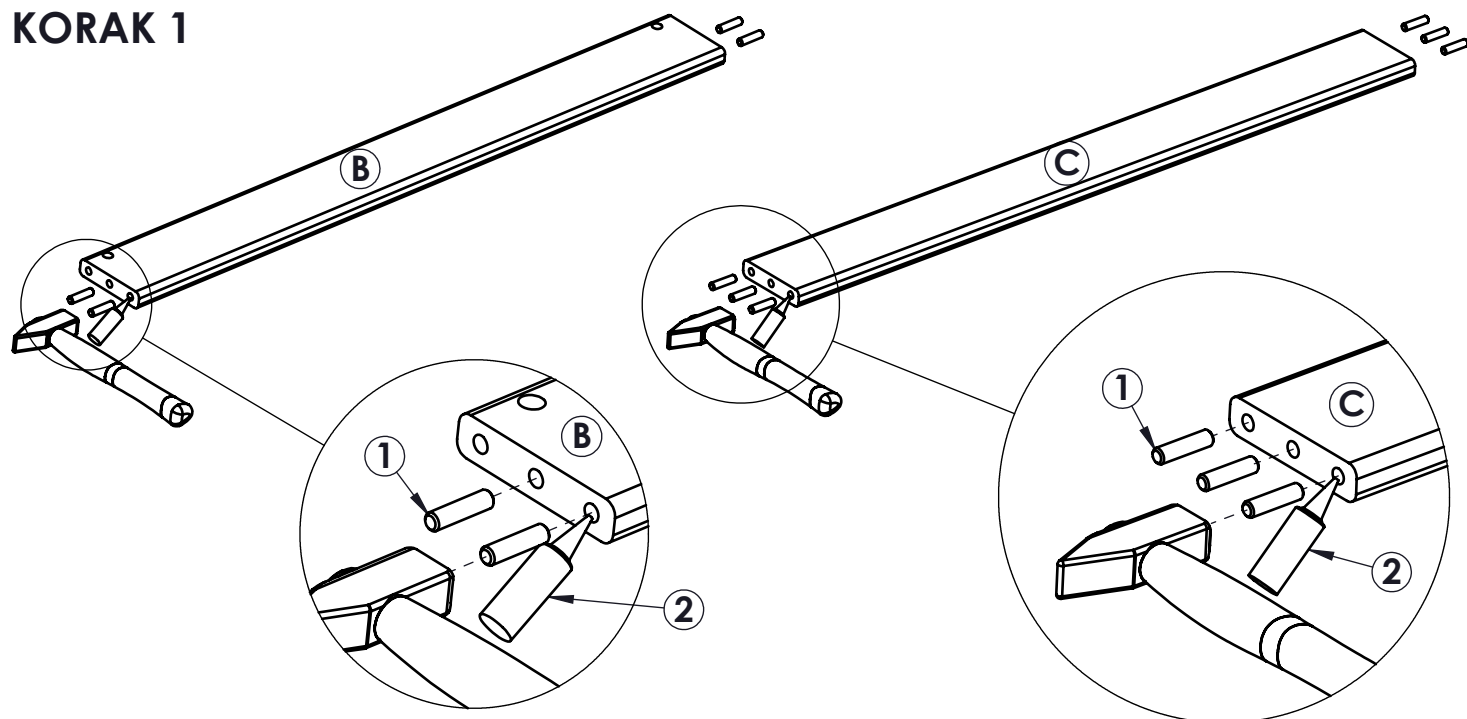


KORAK 2

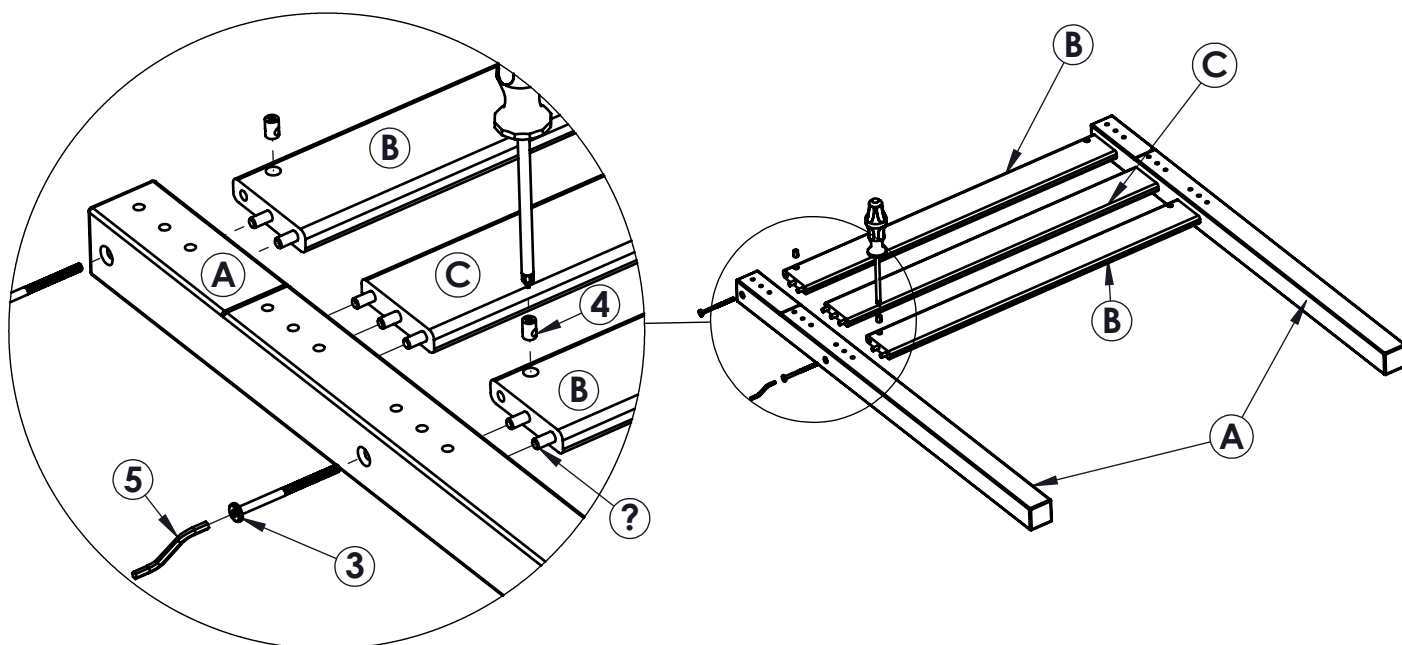


KORAK 3

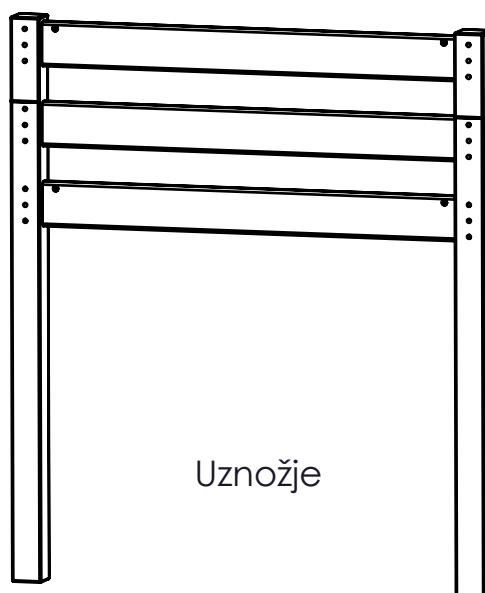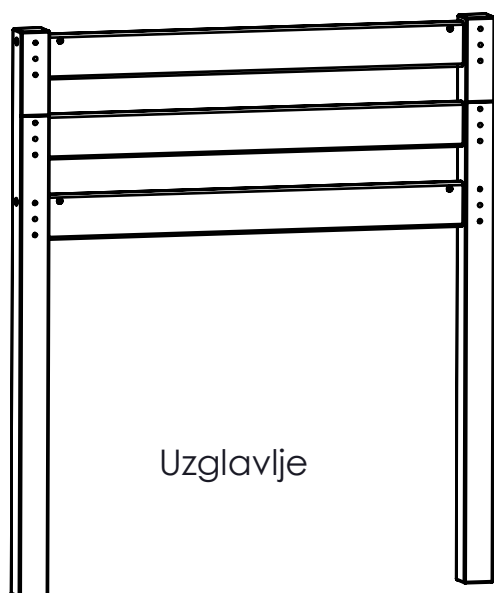

KORAK 4

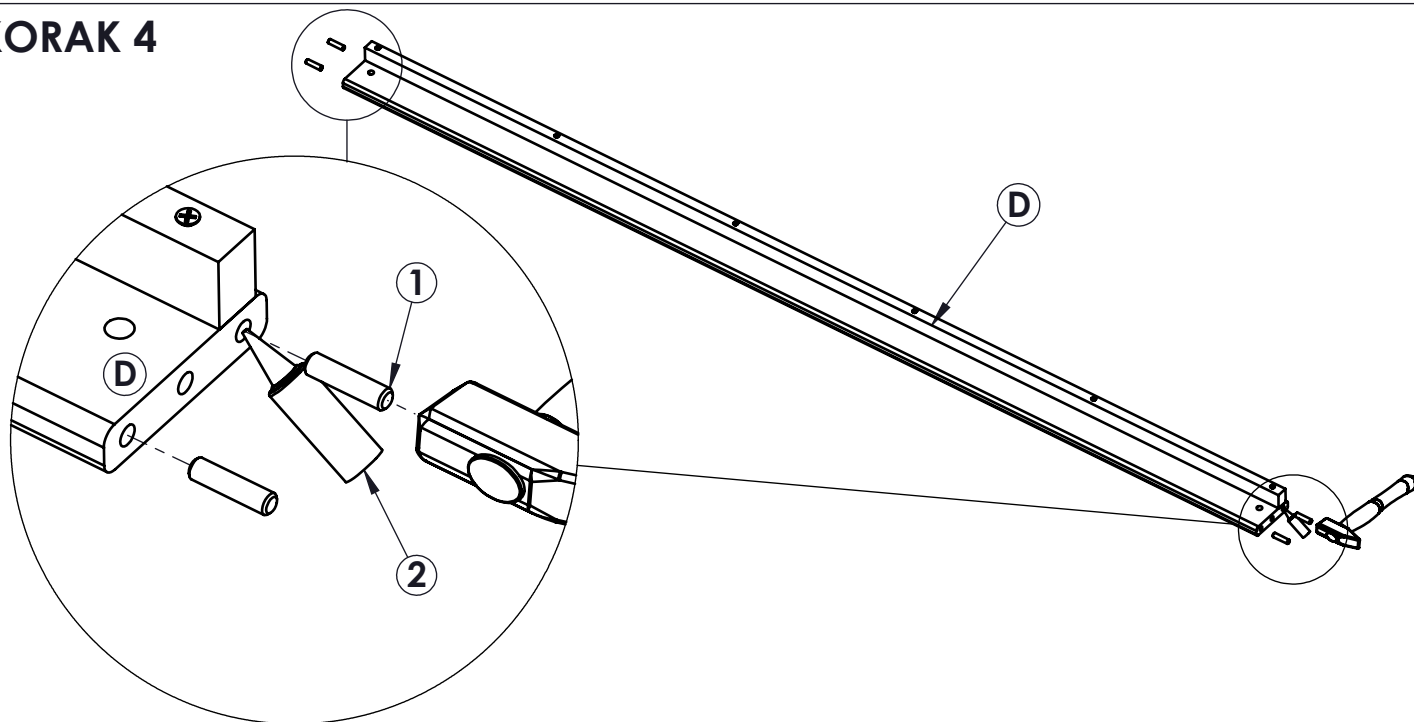


KORAK 5

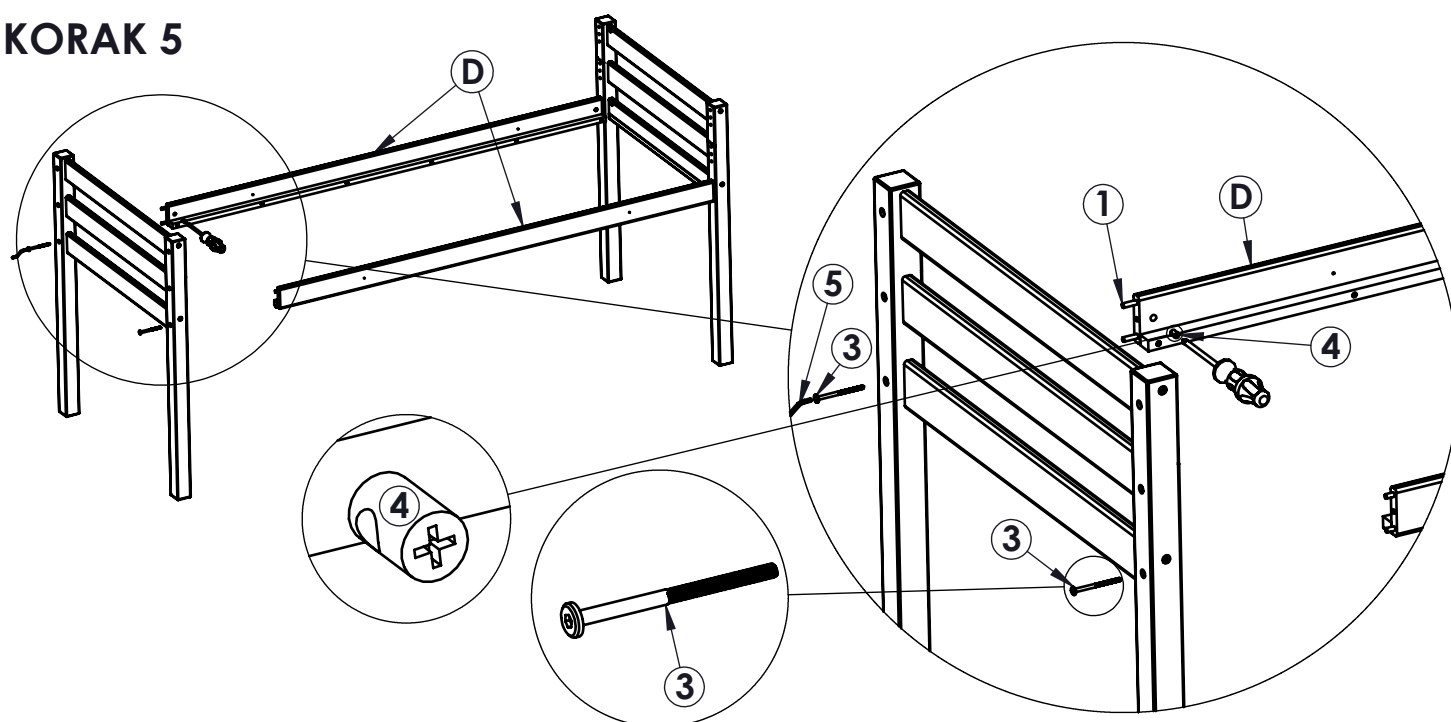


Ne stezati do kraja, radi montaže ograde


KORAK 6

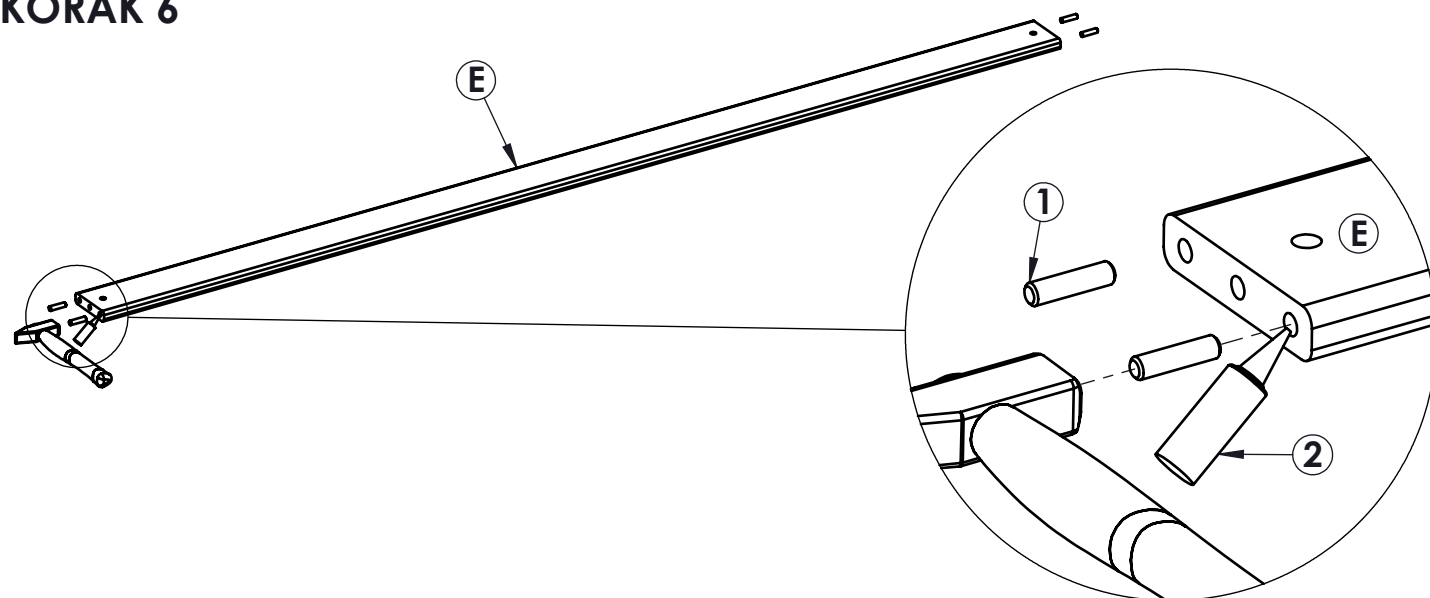


KORAK 7

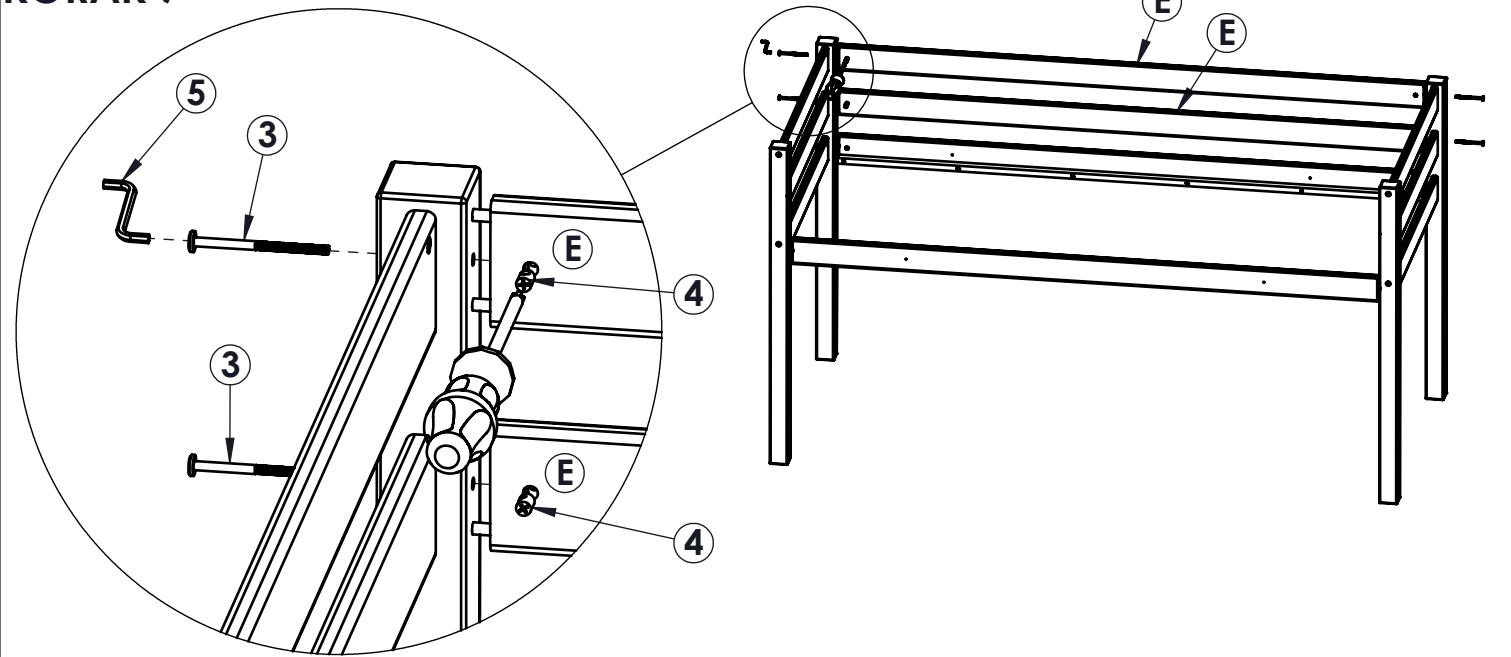


KORAK 8

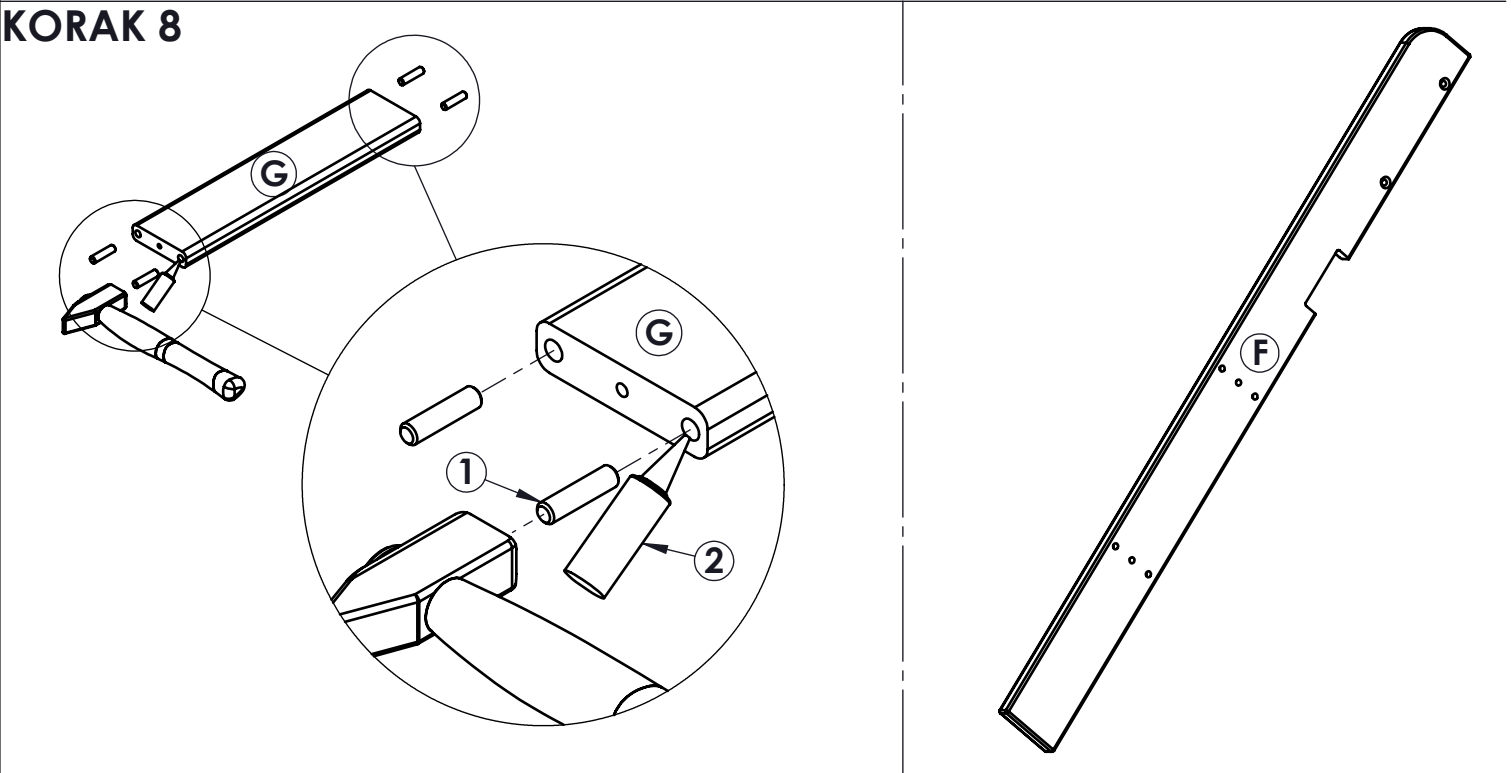


KORAK 9

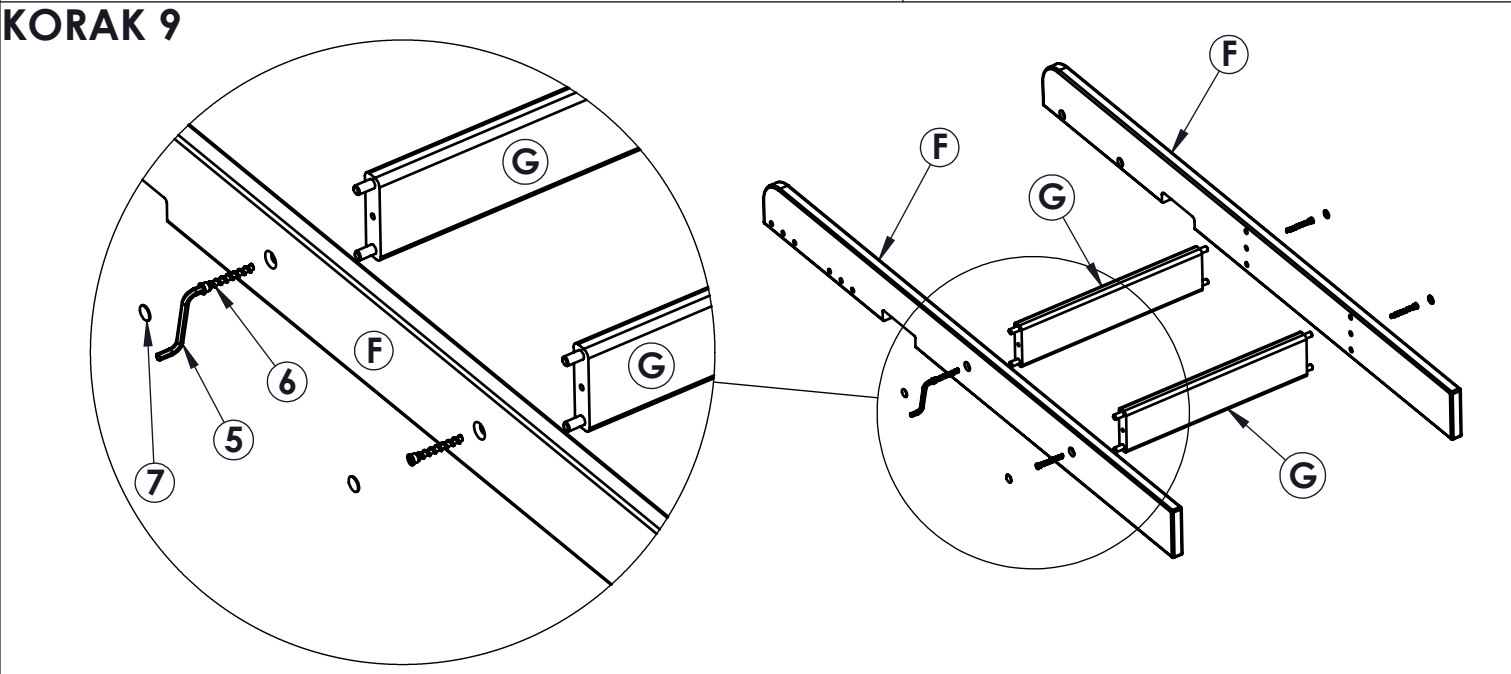


KORAK 10

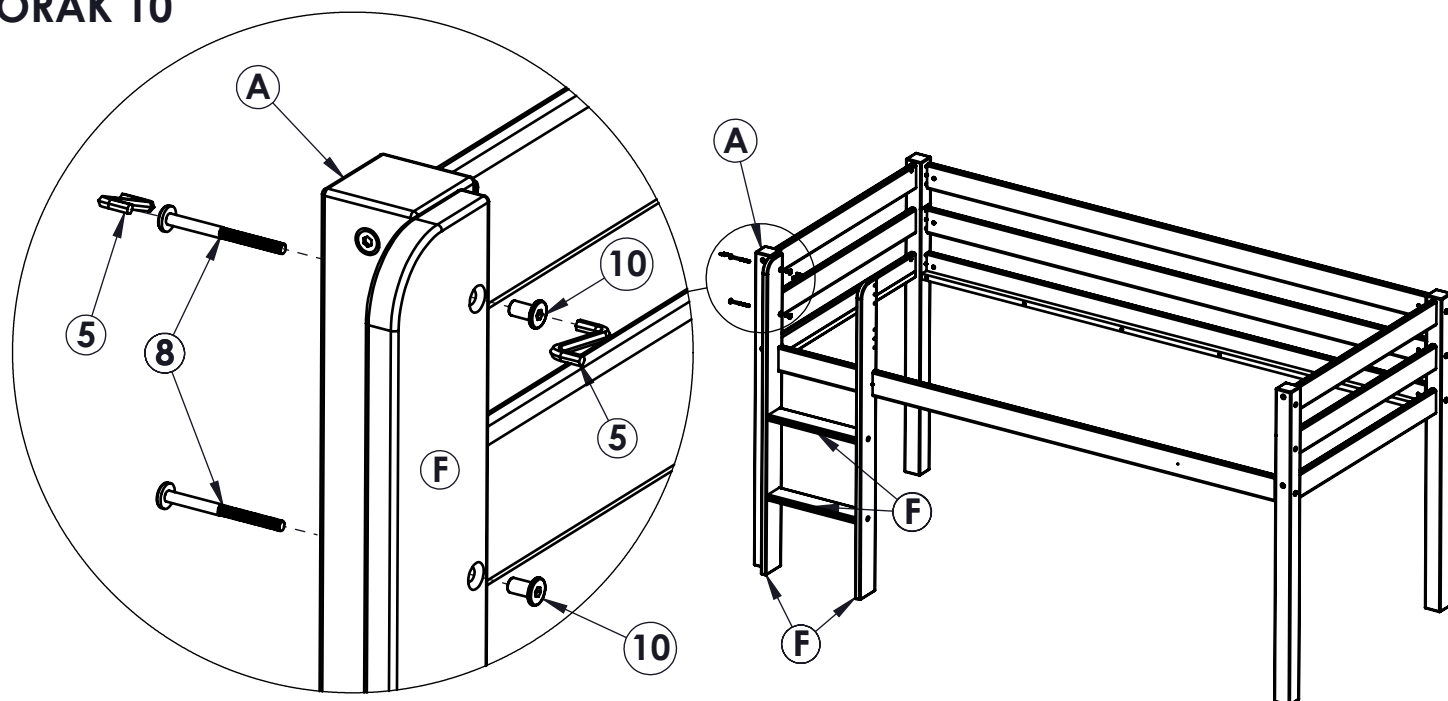


KORAK 11

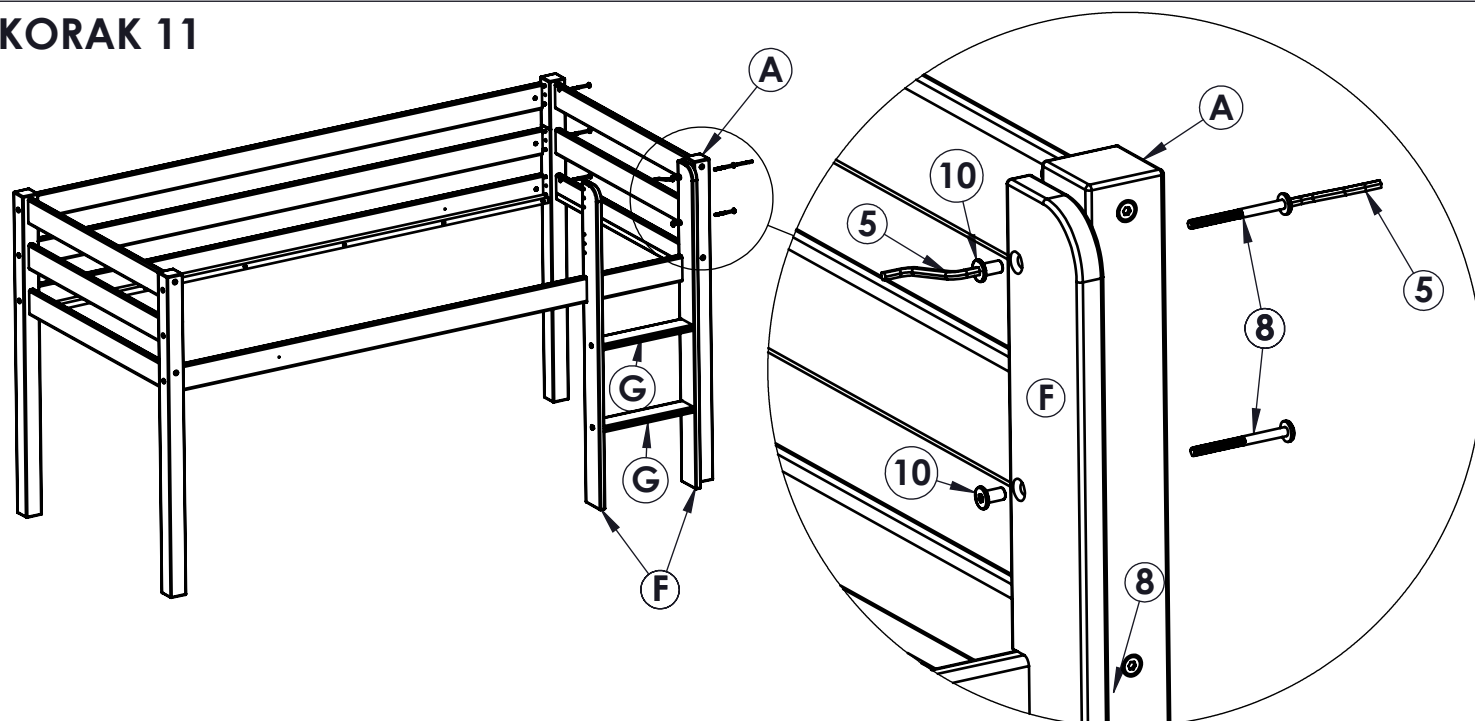

KORAK 12

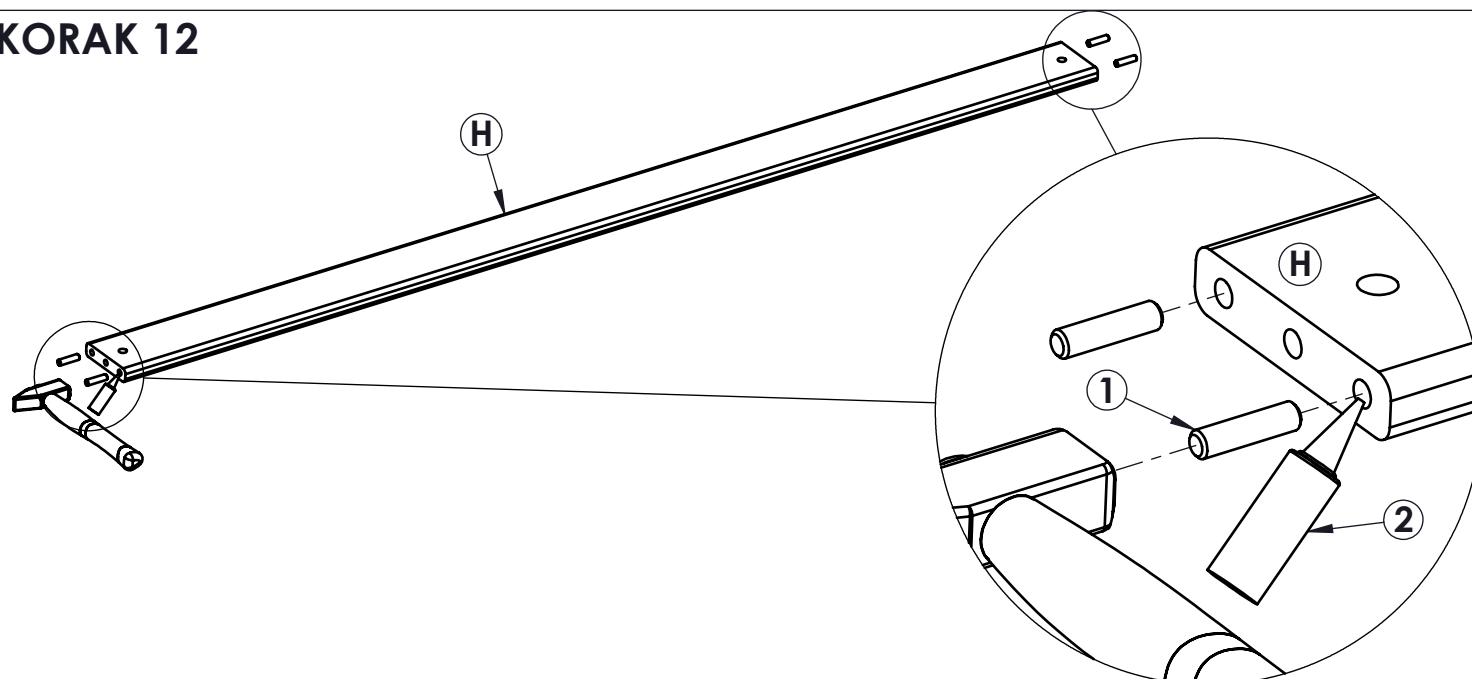


KORAK 13

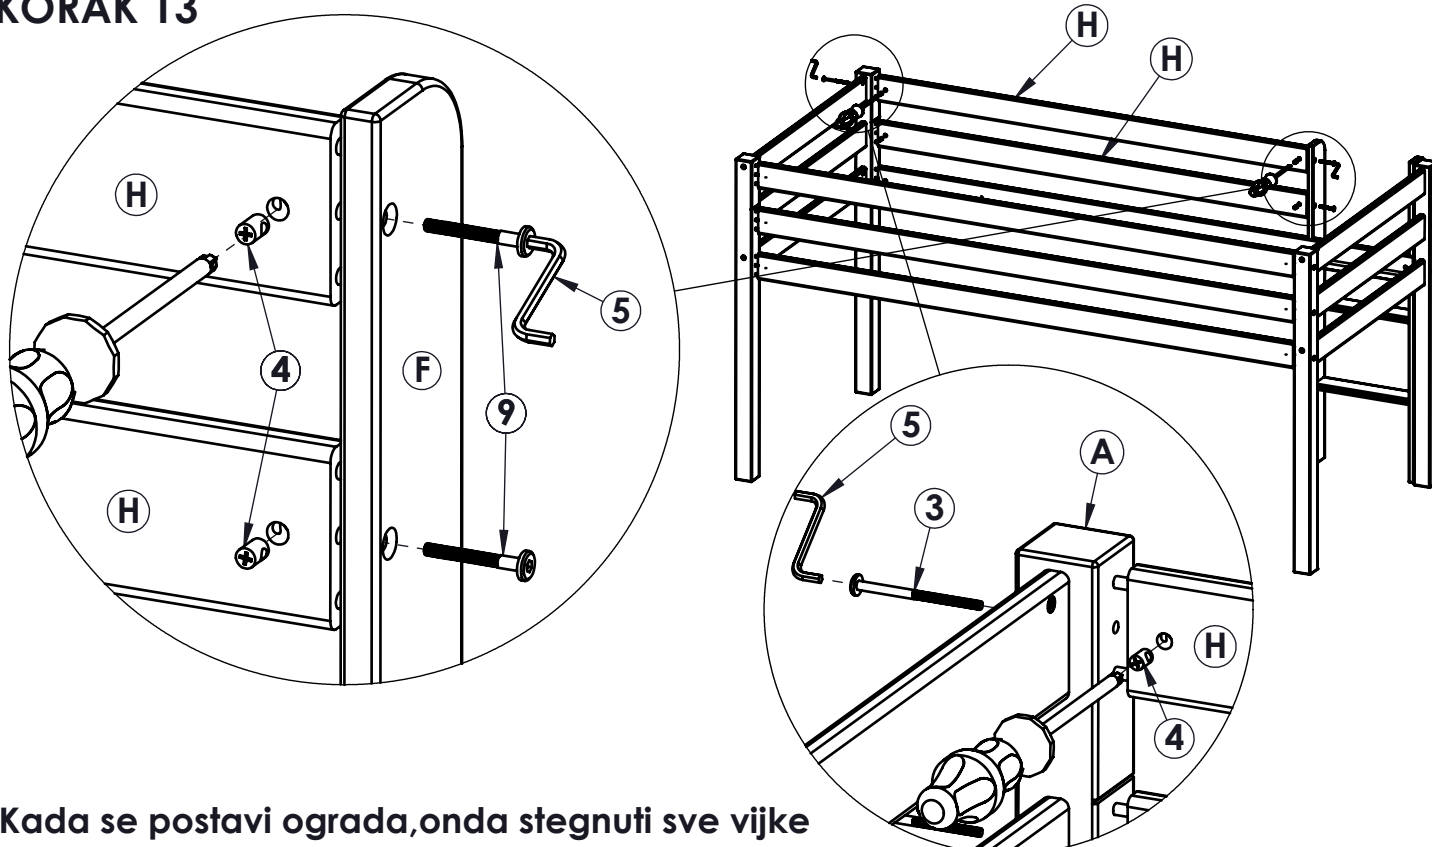


Kada se postavi ograda, onda stegnuti sve vijke

KORAK 14

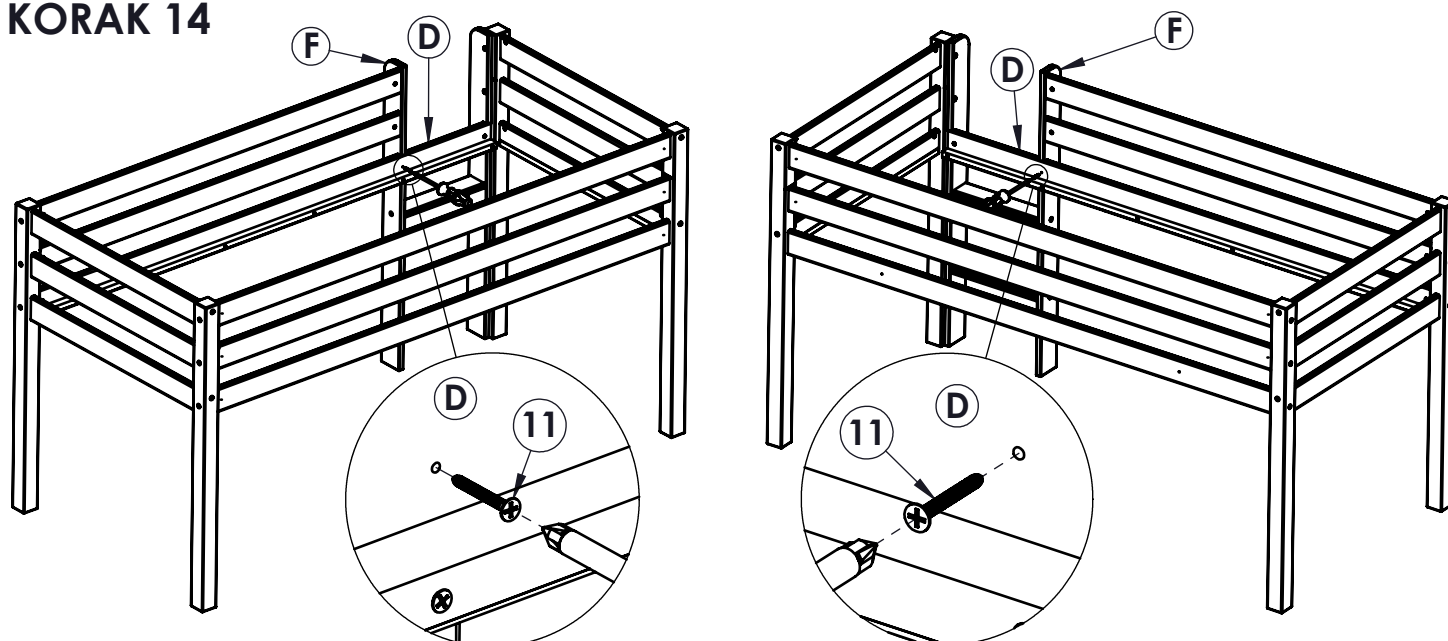

KORAK 15

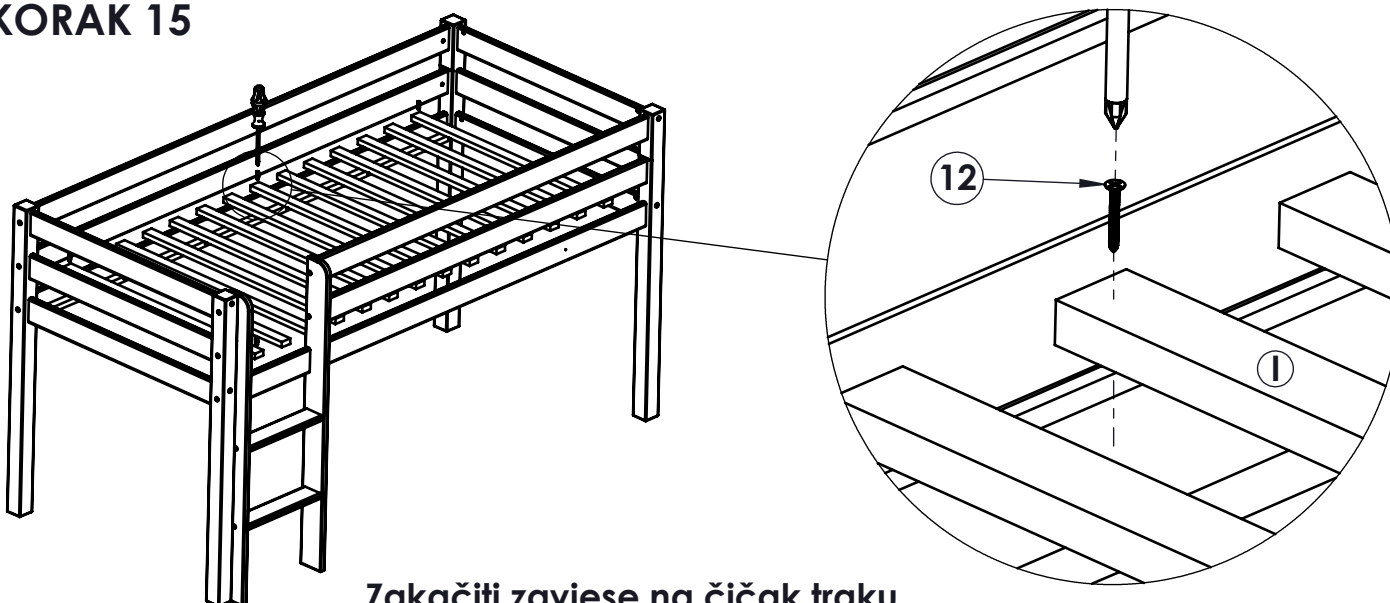

Zakačiti zavjese na čičak traku