


AMBYENTA


...kroz život zajedno...

www.ambyenta.com


UPUTSTVO ZA MONTAŽU

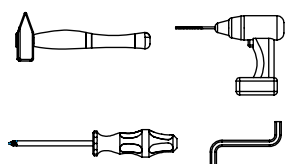

REGAL " ARON "

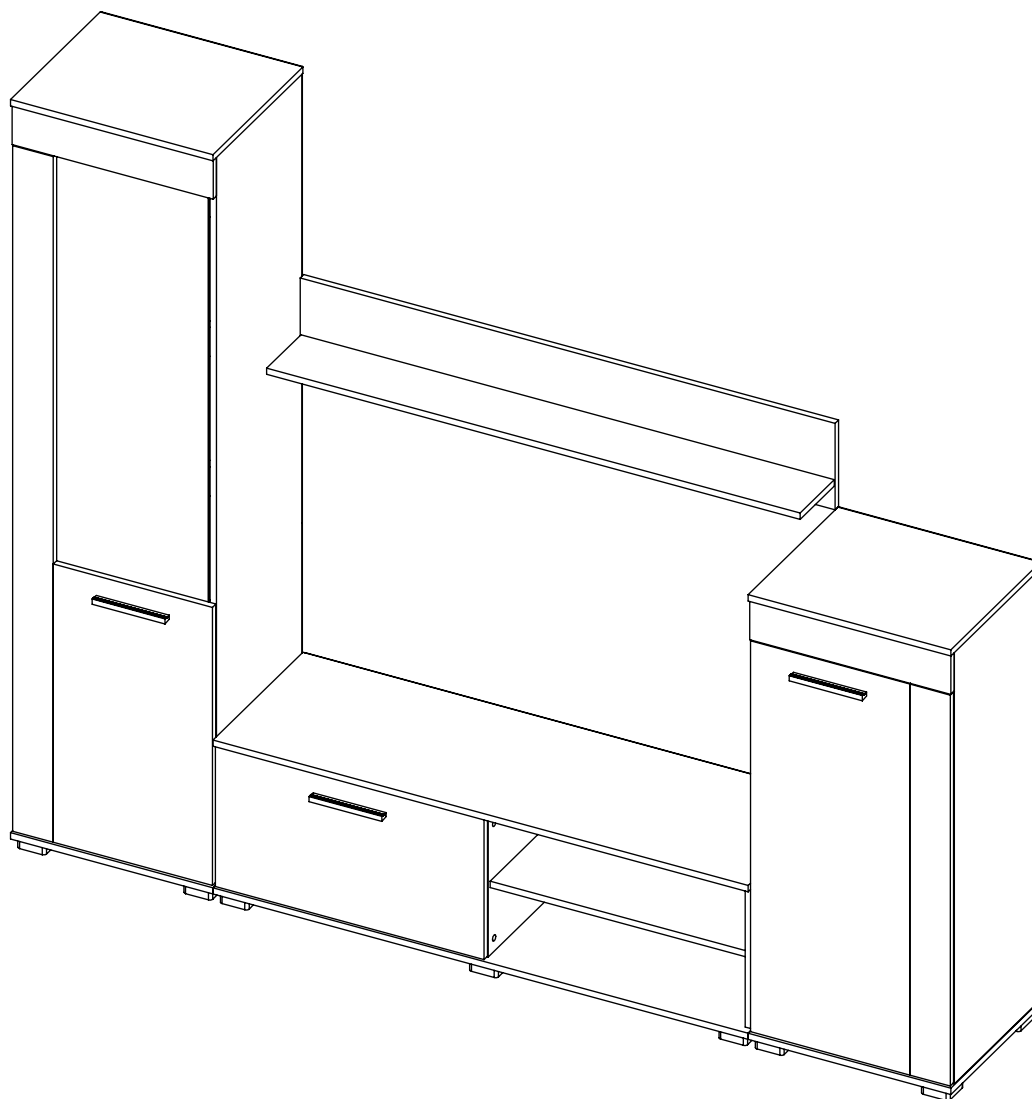

1 Drvena tipla $\varnothing 8 \times 32$ 60 kom	2 Drvena tipla $\varnothing 8 \times 52$ 6 kom	3 Podloška za staklo 4 kom	4 Vijak iveral 3x16 4 kom	5 Vijak iveral 4x16 50 kom	6 Vijak iveral 4x25 28 kom	7 Vijak iveral 4x30 6 kom	8 Vijak M4x20 6 kom
9 Ručka 3 kom	10 Ekseri 100 kom	11 Pvc matica 30 kom	12 Vijak stezni 30 kom	13 Ekscentar 46 kom	14 Stezač dvostruki 8 kom	15 Nosač polica 20 kom	16 Držač metalni 2 kom
17 Spona ravna 7 kom	18 Spona kriva 2 kom	19 Podloška ravne baglame 7 kom	20 Podloška krive baglame 2 kom	21 Pvc noga 14 kom	22 Ljepilo bočica 3 kom	23 Plinski podizač 2 kom	24 Inbus vijak 5 kom

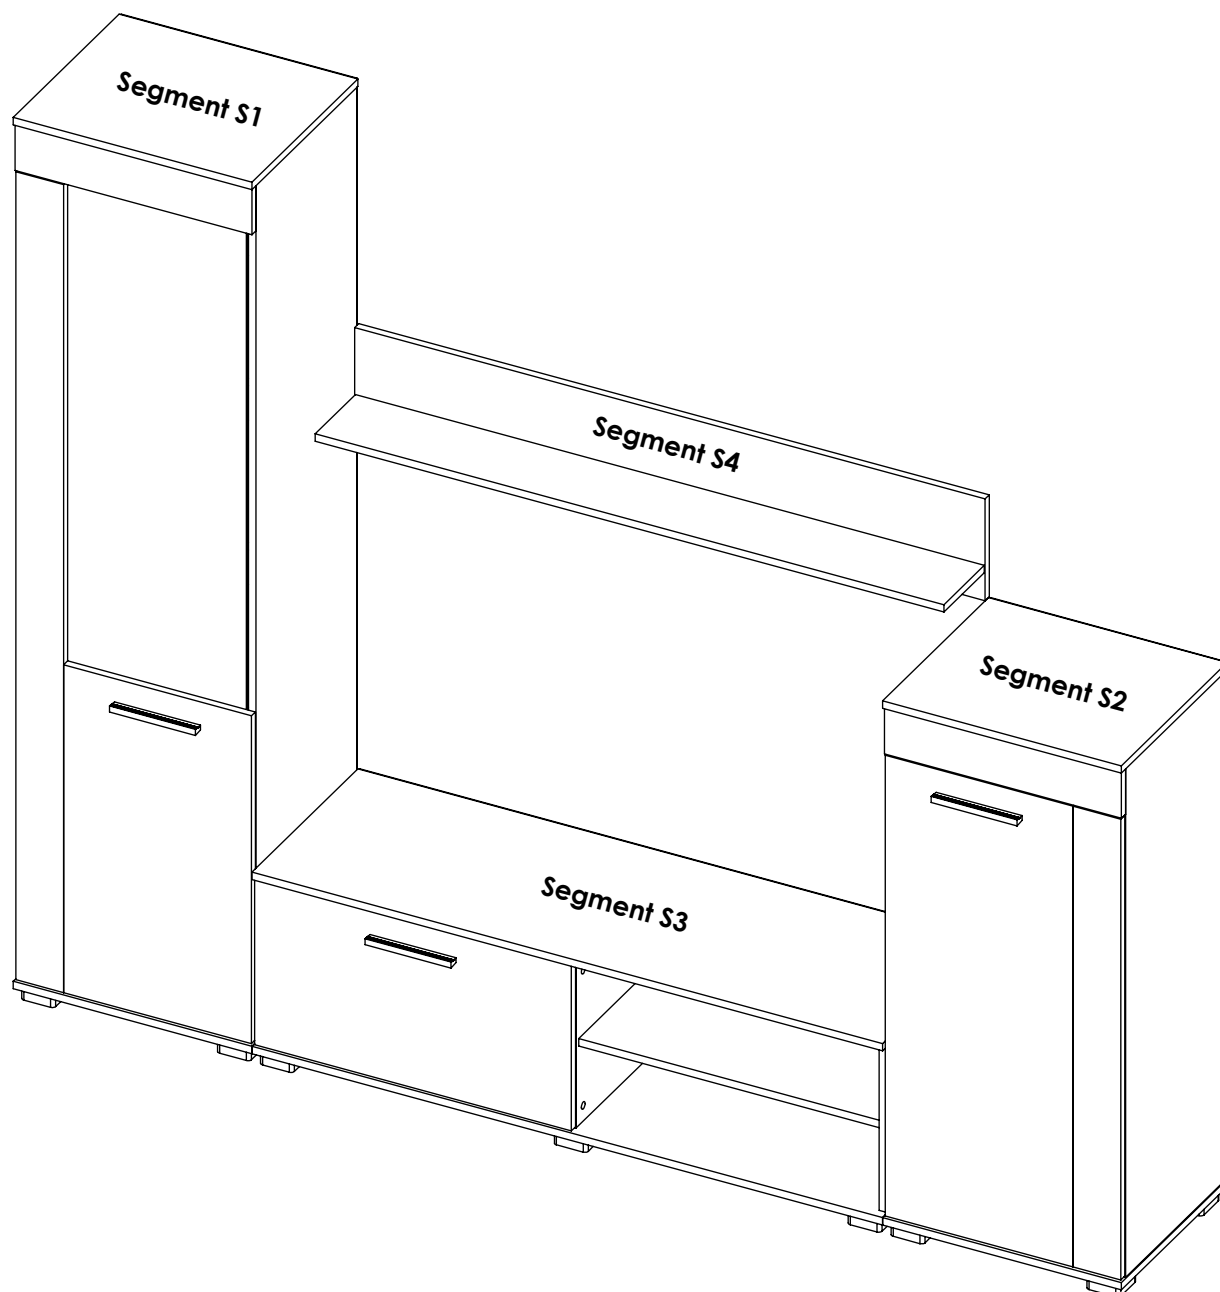

PAKET 1/3



- Bočna stranica lijeva S1..1kom (B)
- Bočna stranica desna S1..1kom (C)
- Pod/Plafon S1..1kom (A)
- Pomična polica S1..3kom (J)
- Fiksna polica S1..1kom (D)
- Vrećica sa okovom..1komplet
- Noge ..14kom
- Pomična polica S3..1kom (G)
- Vrata S3..1kom (F)
- Lajsna vrata S1..1kom (H)
- Lajsna S1..1kom (F)
- Lajsna vrata S2..1kom (G)
- Lajsna S2..1kom (E)

PAKET 2/3




- Bočna stranica lijeva S2..1kom (C)
- Bočna stranica desna S2..1kom (B)
- Vrata S2..1kom (F)
- Vrata S1..1kom (G)
- Bočna stranica lijeva S3..1kom (B)
- Bočna stranica desna S3..1kom (D)
- Pregrada S3..1kom (C)
- Pod/Plafon S2..1kom (A)
- Pomična polica S2..2kom (H)

PAKET 3/3




- Pod/Plafon S3..2kom (A)
- Staklo S1..1kom (I)
- Leđa S3..1kom (E)
- Leđa S2..1kom (D)
- Zidna polica S4..1kom (A)
- Fiksna polica S4..1kom (B)
- Leđa S1..1kom (E)
- Leđa S1..1kom (S)


Montaža Segment S1

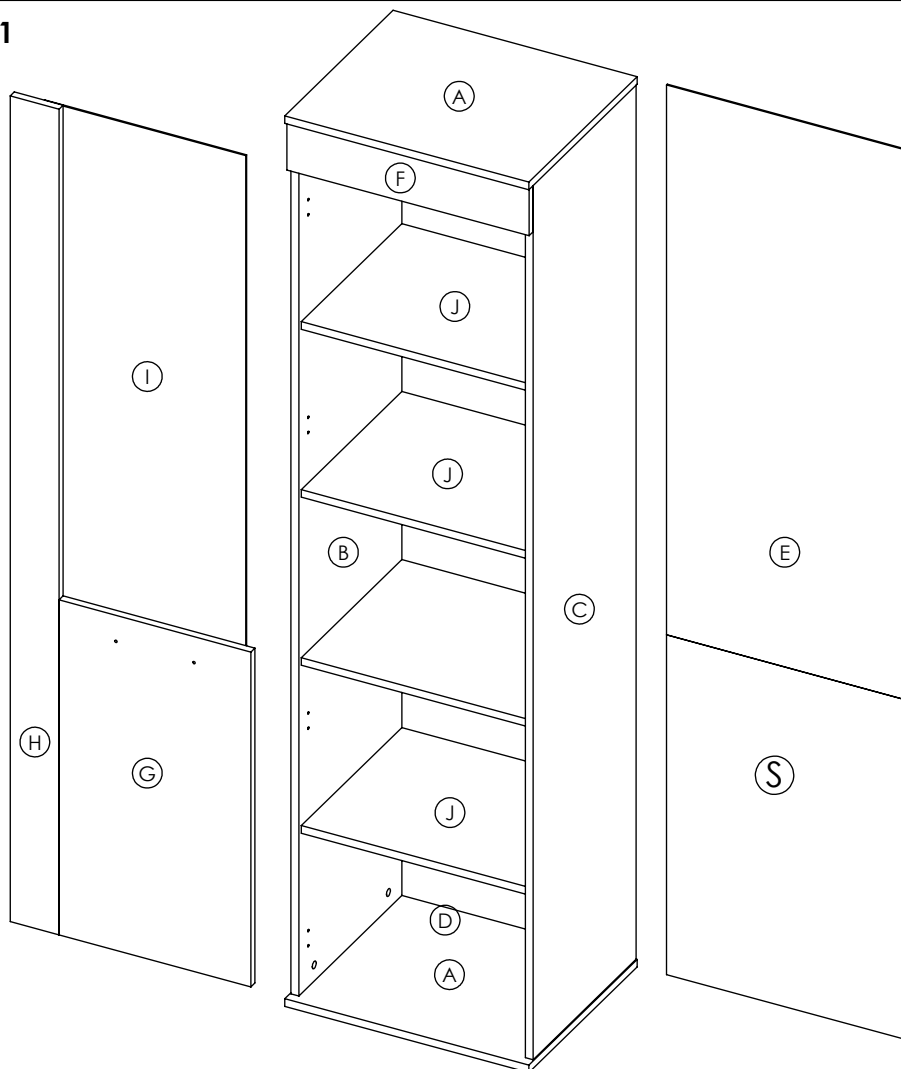

Korak 1

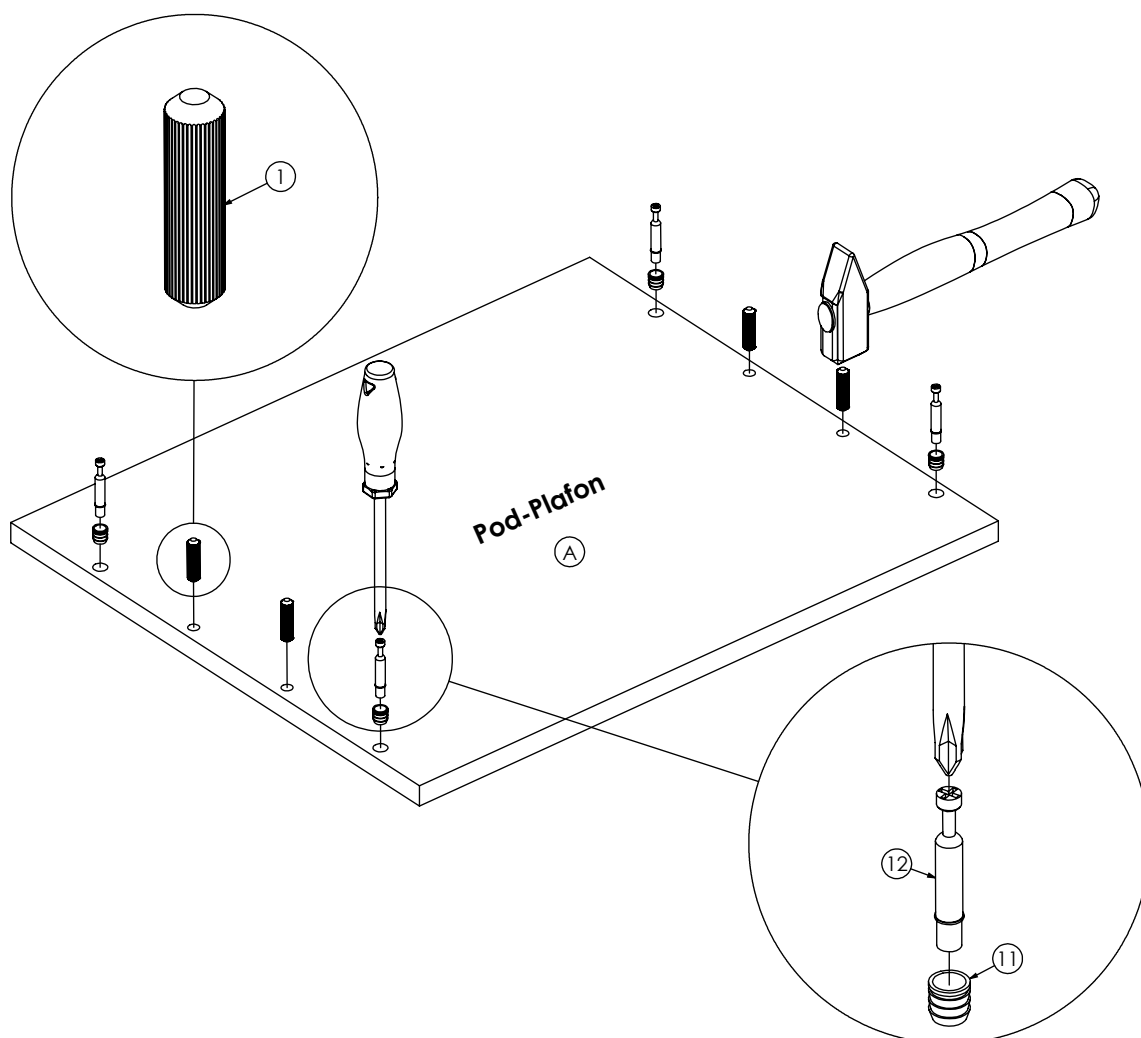


Korak 2

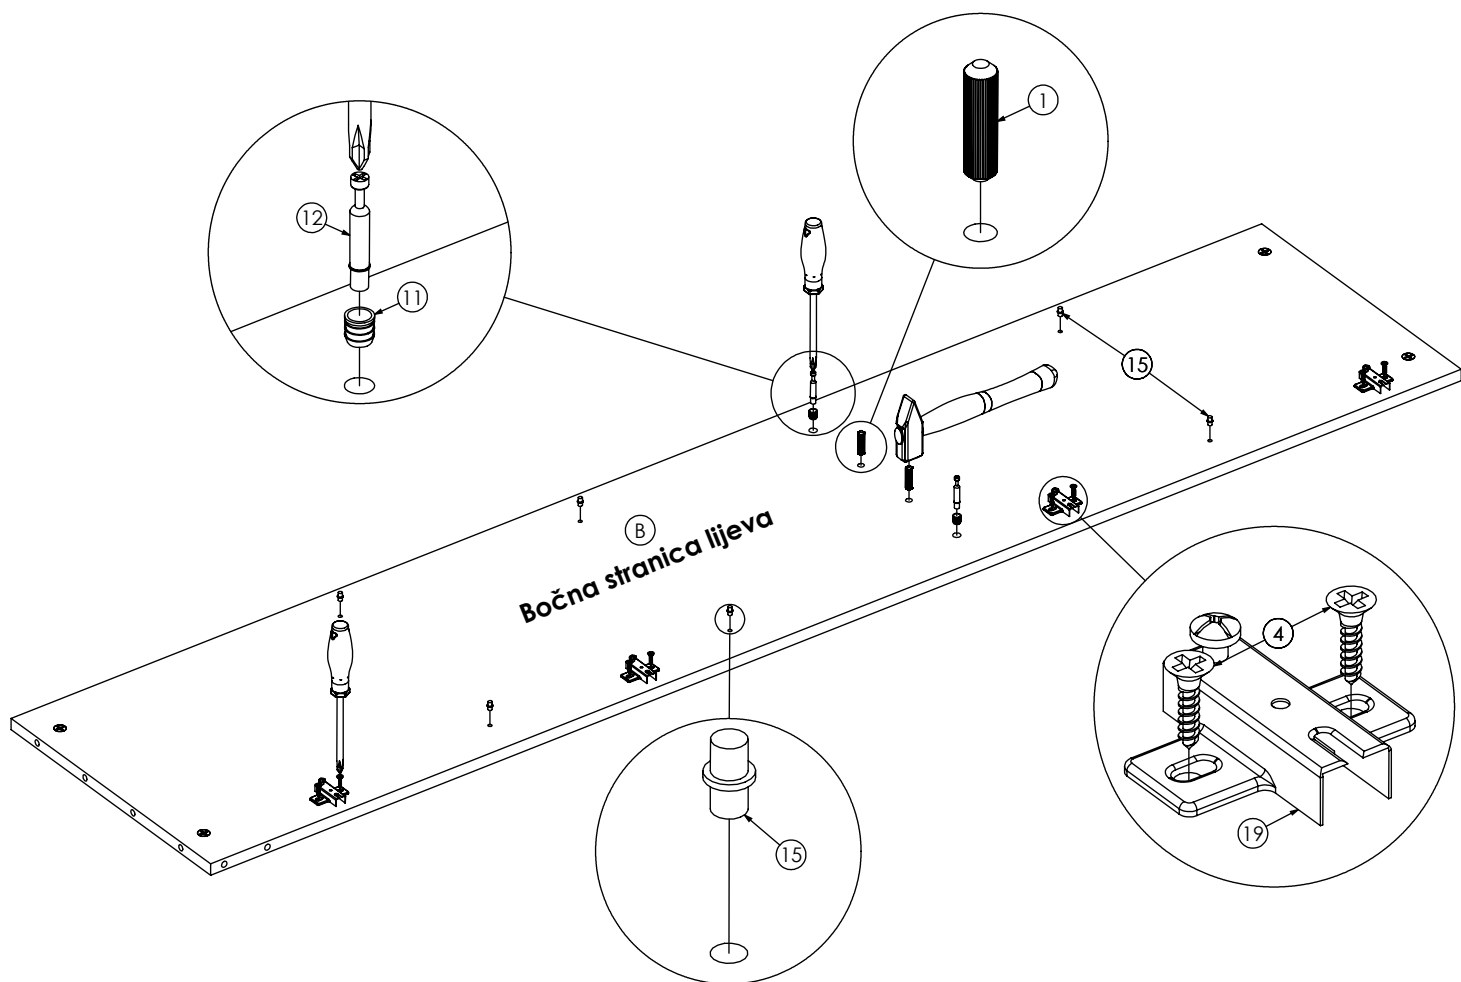


Korak 3


Napomena
Na isti način postaviti okov na desnoj bočnoj stranici.

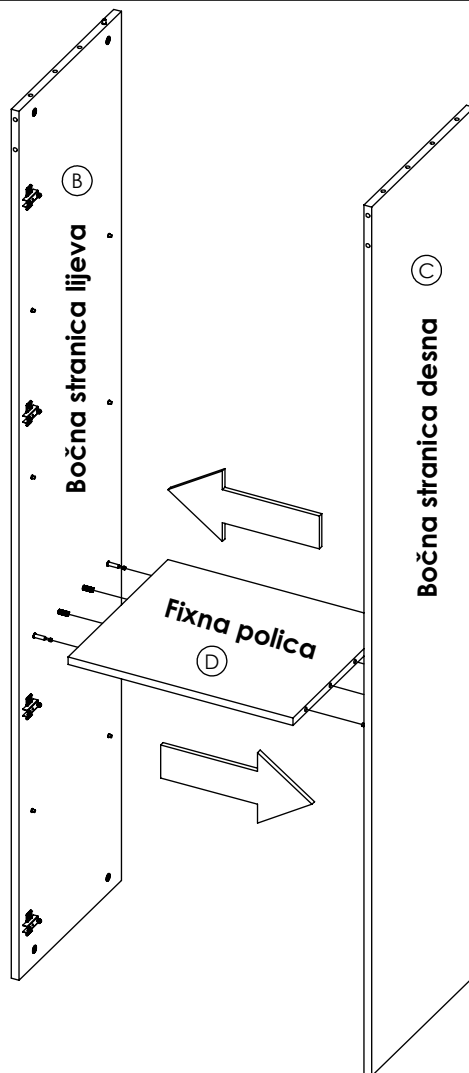

Korak 4

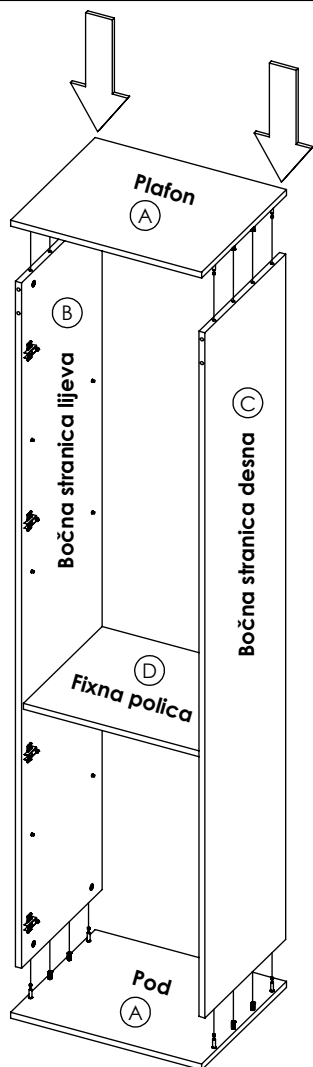


Korak 5

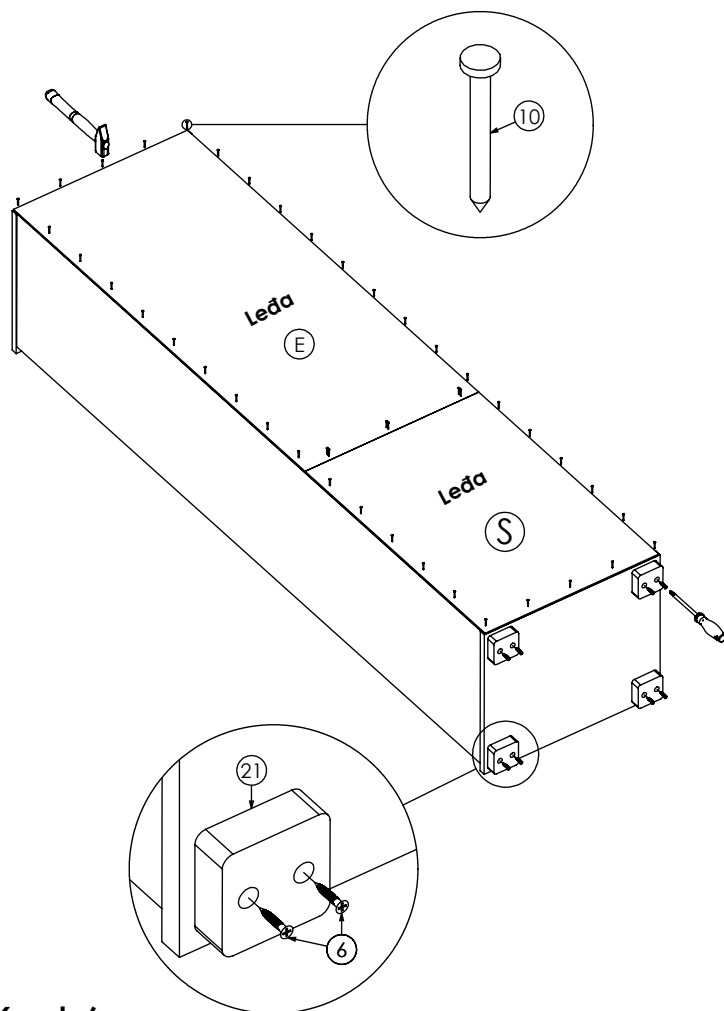

Korak 6




Korak 7

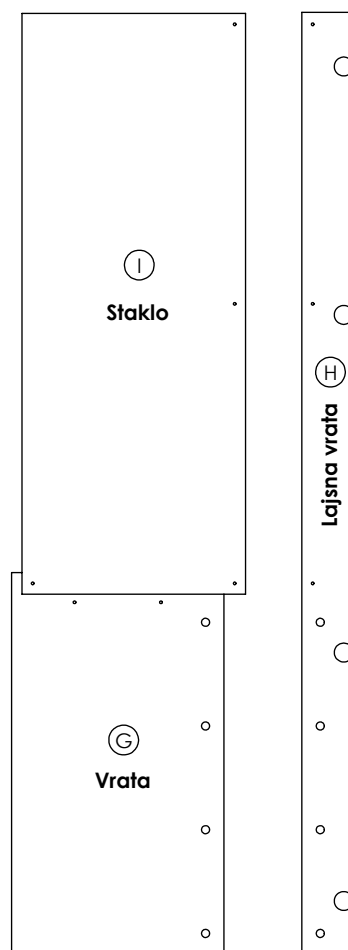

Korak 8


Montaža vrata

Spojiti vrata sa lajsnom kako je prikazano.

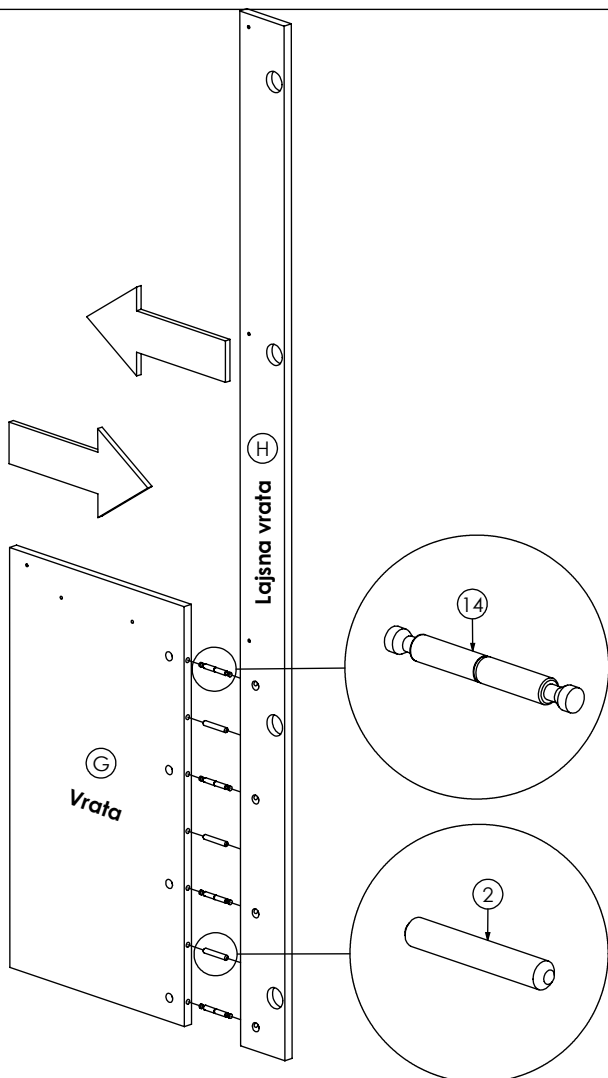


Korak 9

U navedenom koraku zaključati excentre.

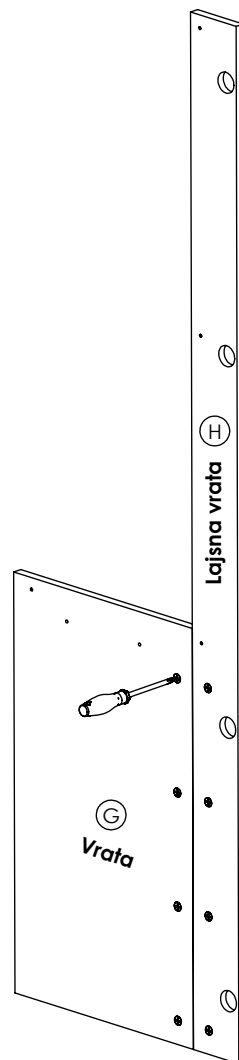


Korak 10

Obavezno koristiti podlošku za staklo.

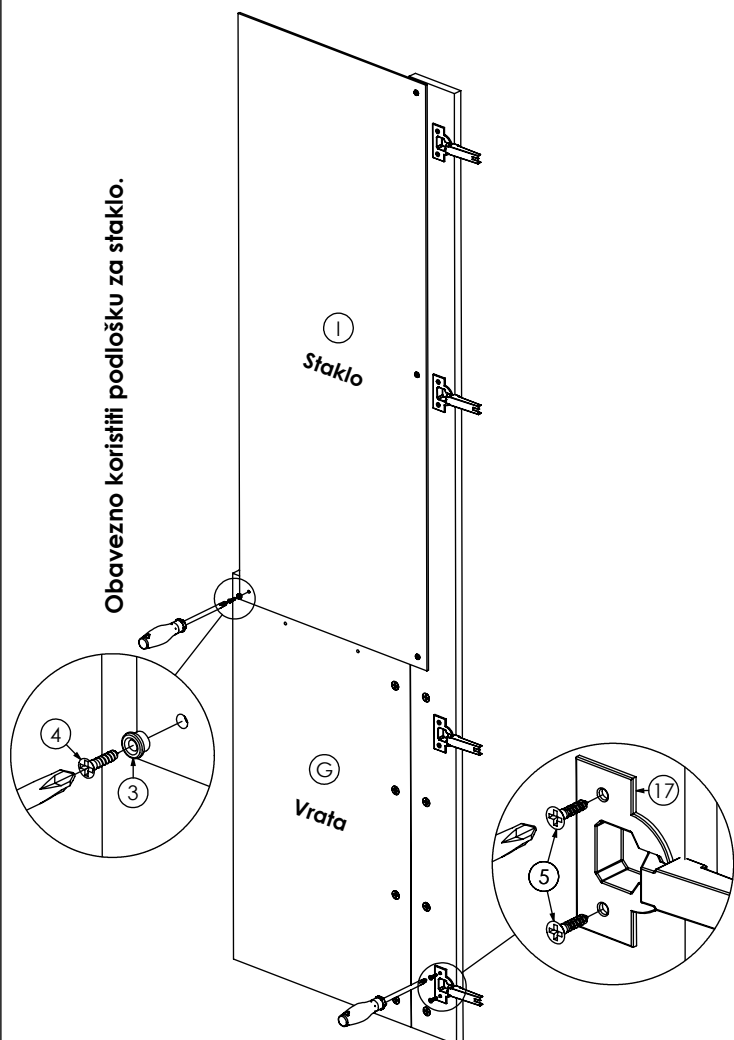


Korak 11

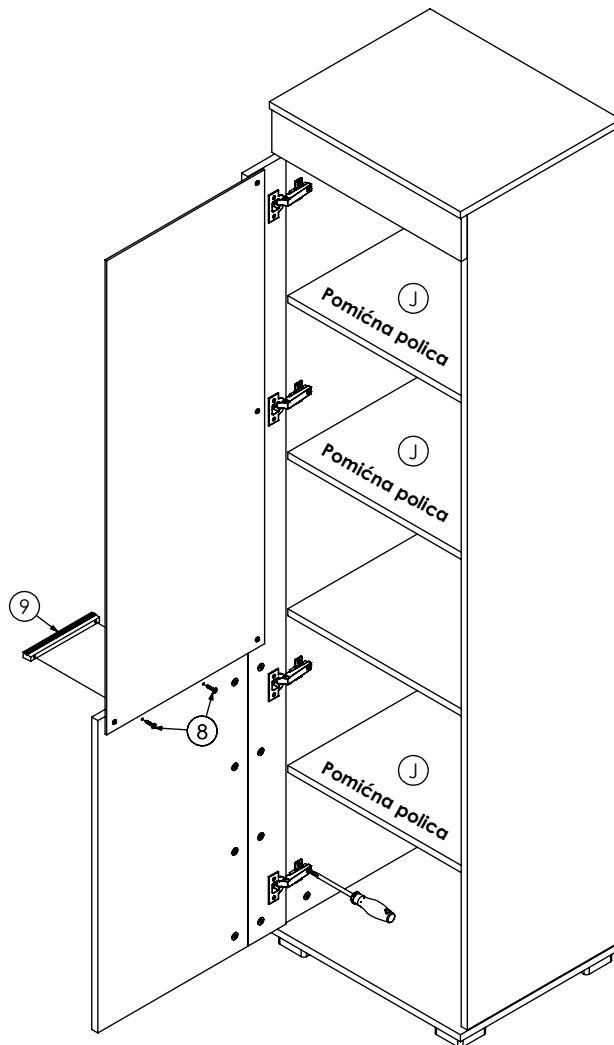


Korak 12


Montaža Segment S2

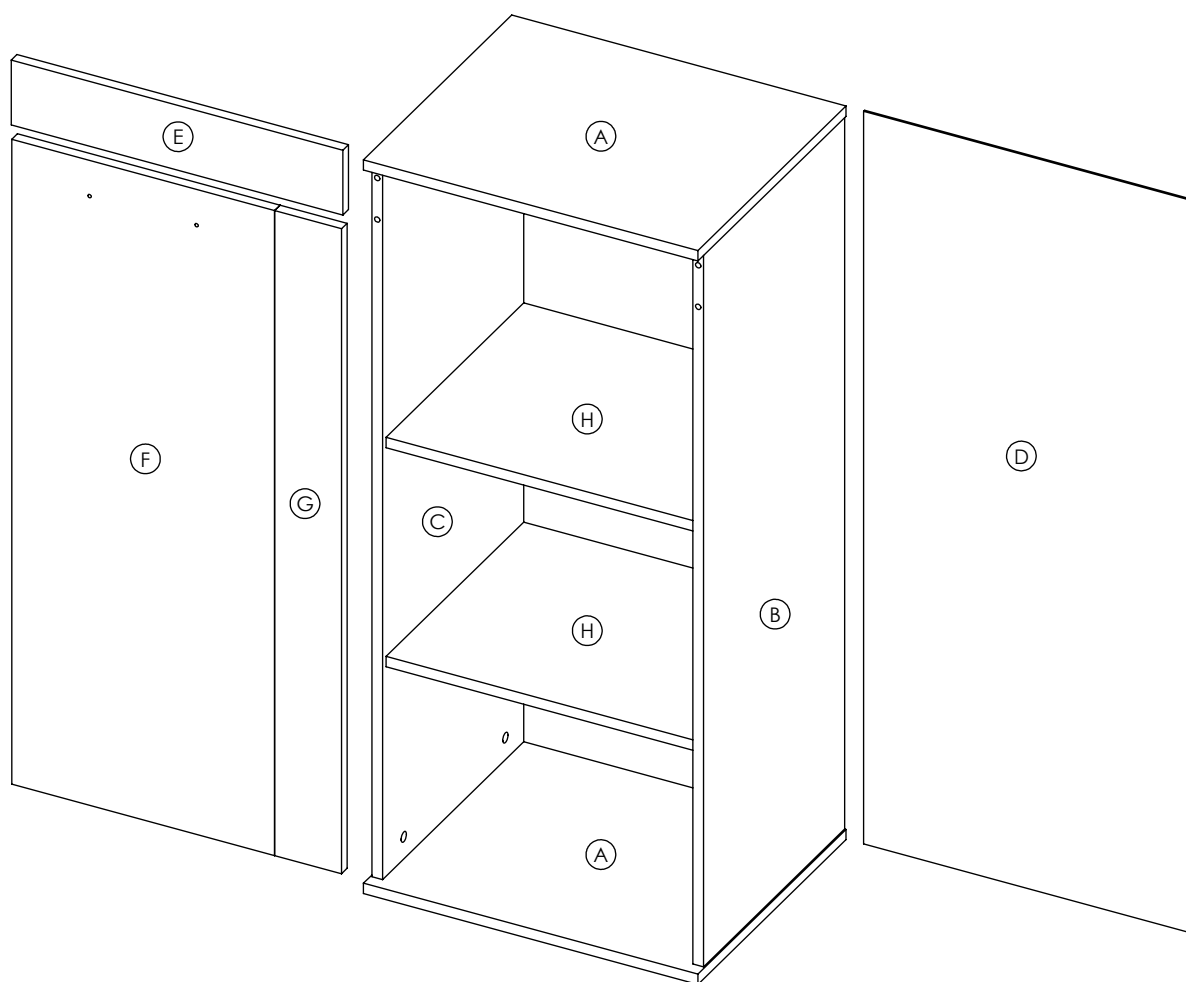


Korak 1

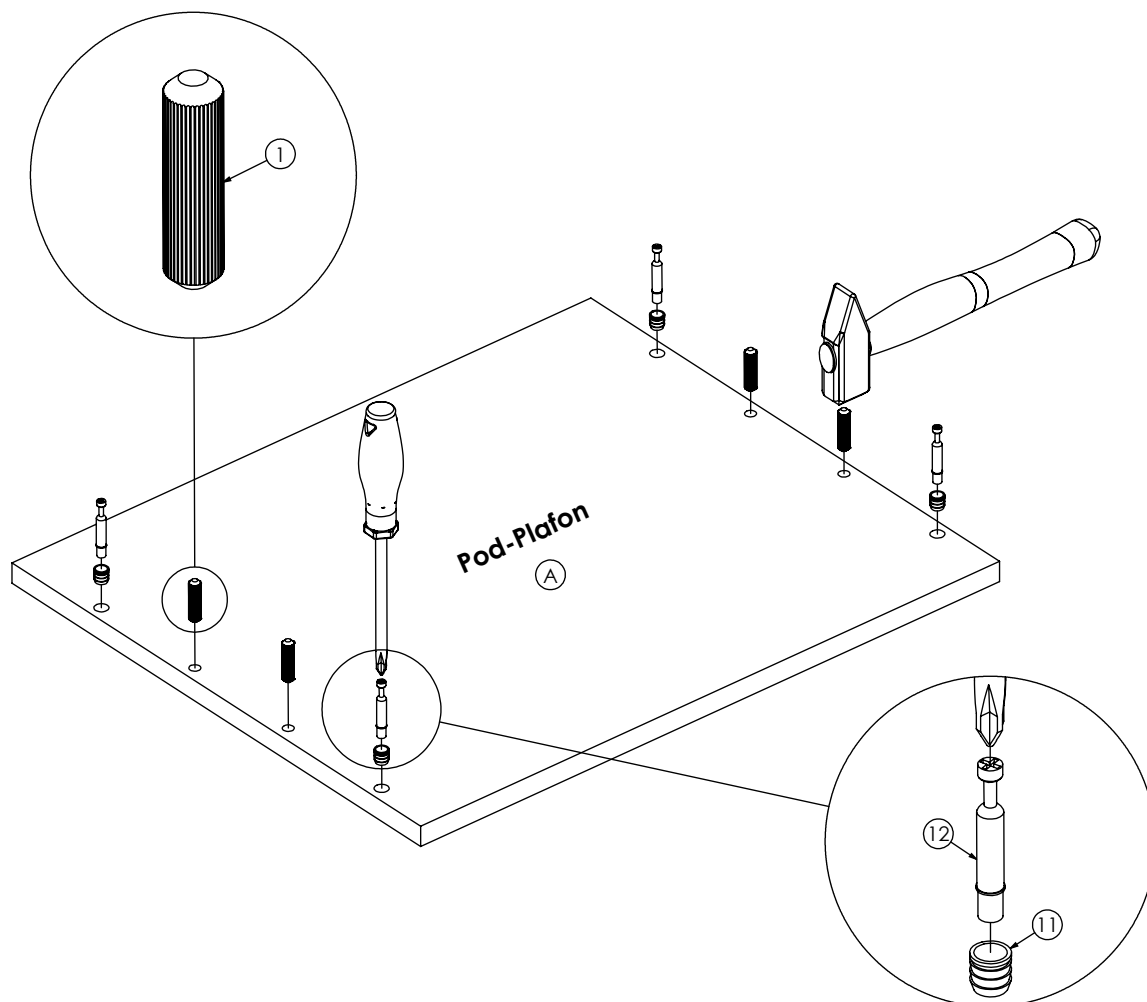


Korak 2

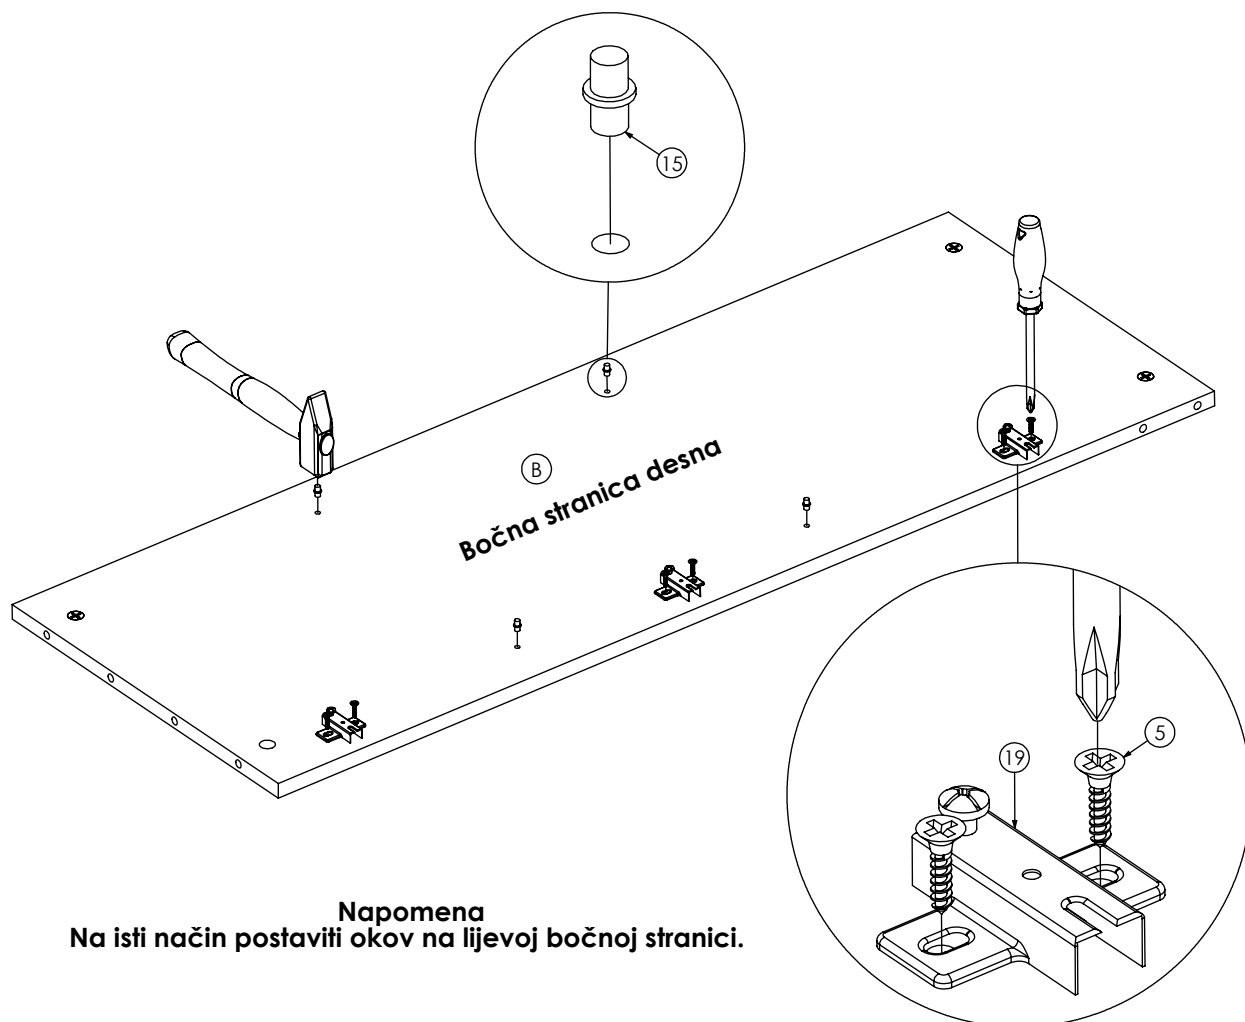


Korak 3

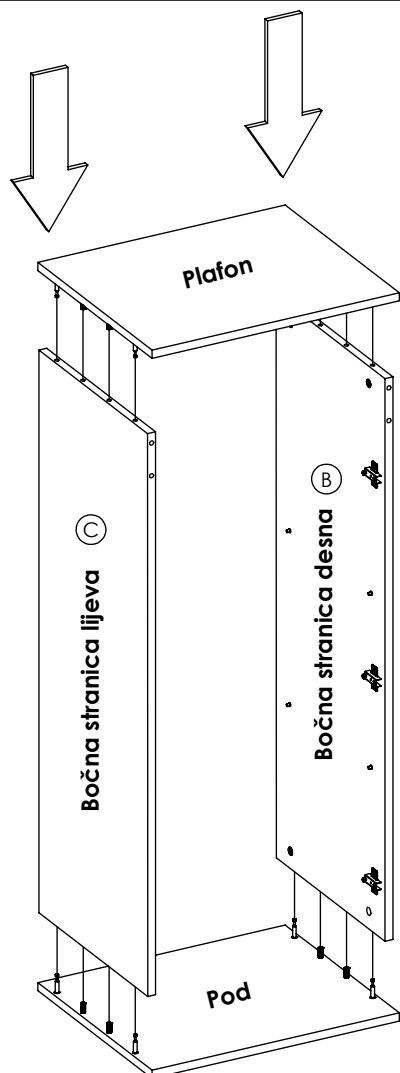


Korak 4

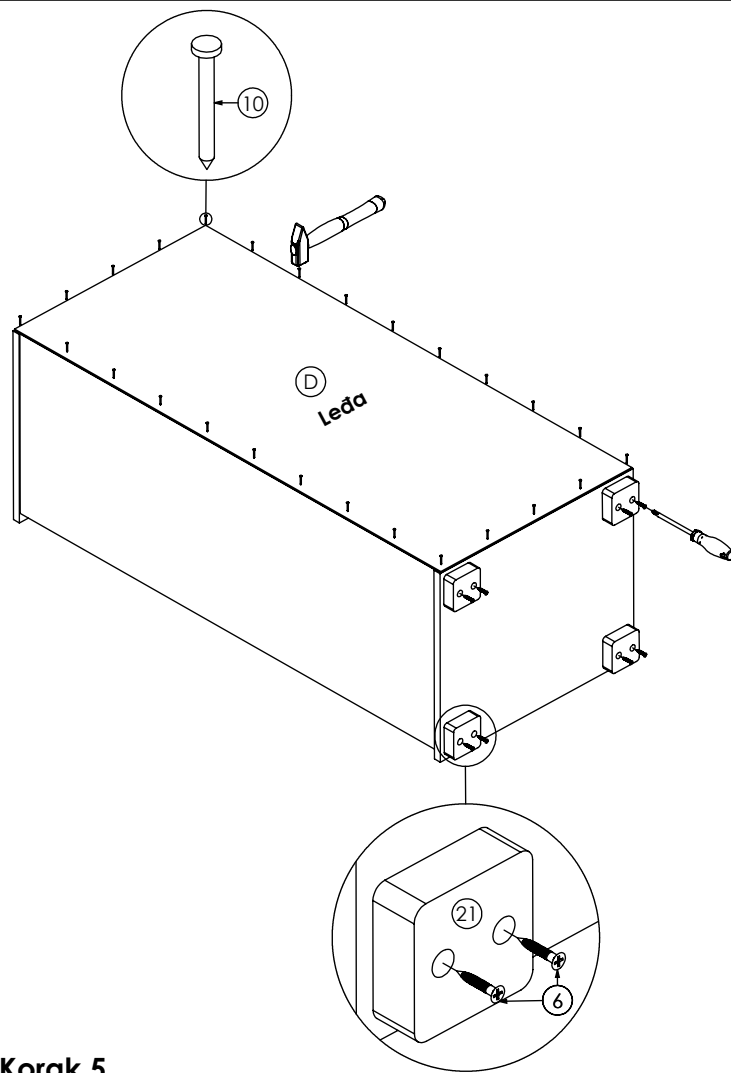

Korak 5

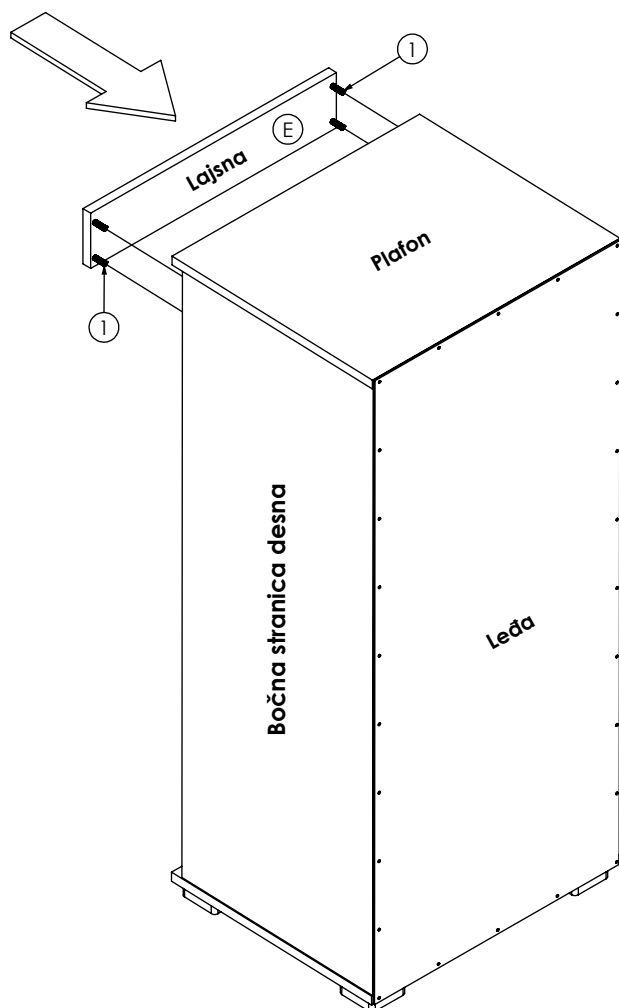


Korak 6

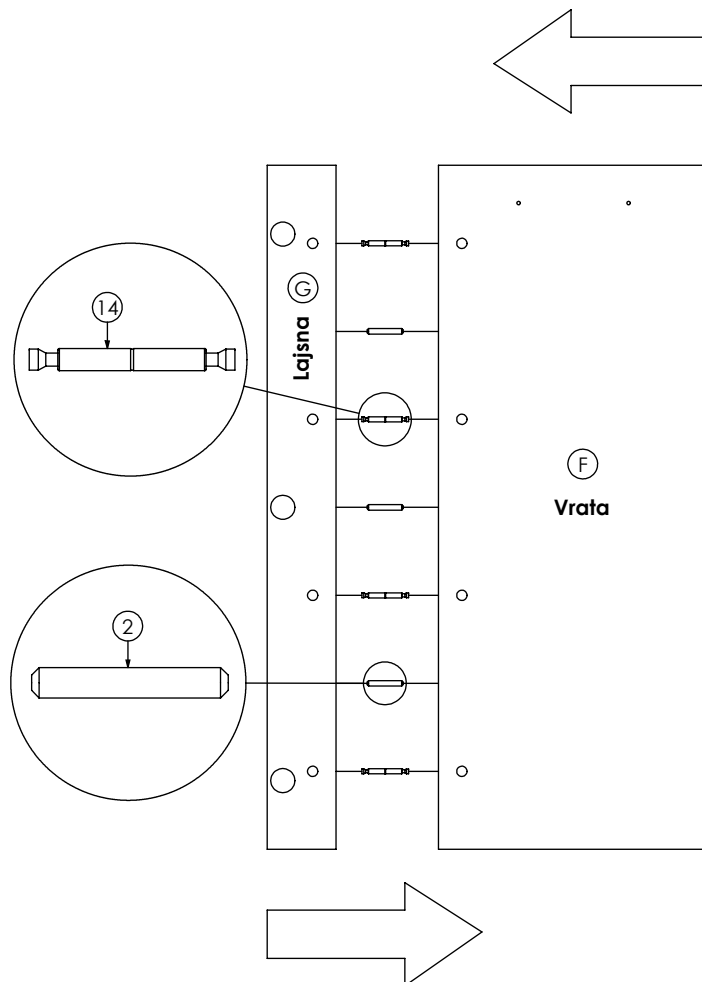


Korak 7

Montaža vrata

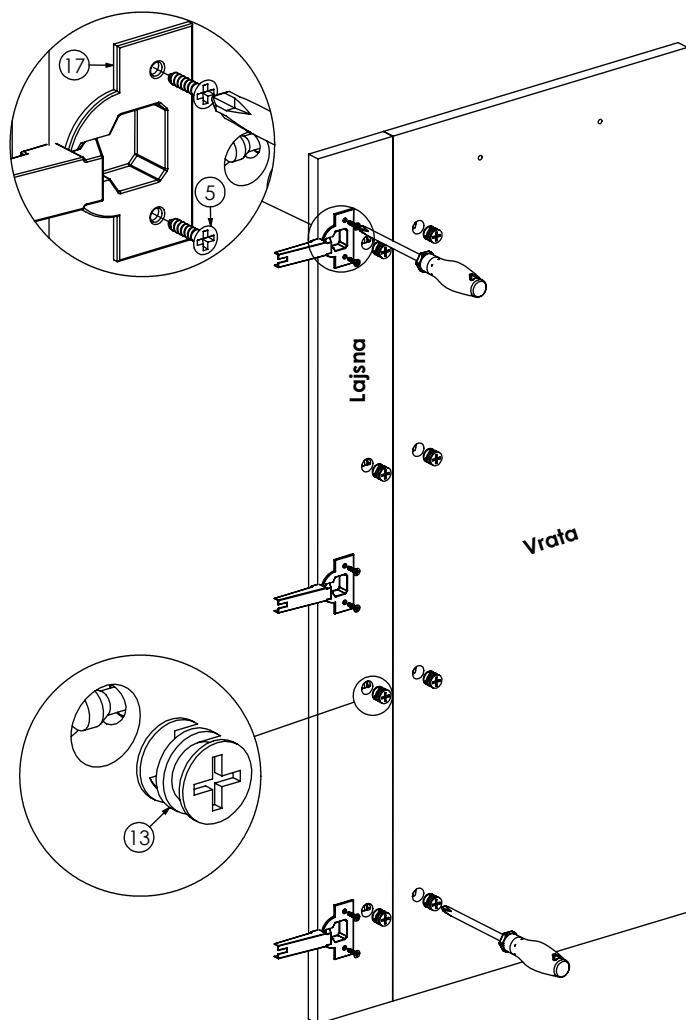


Korak 8

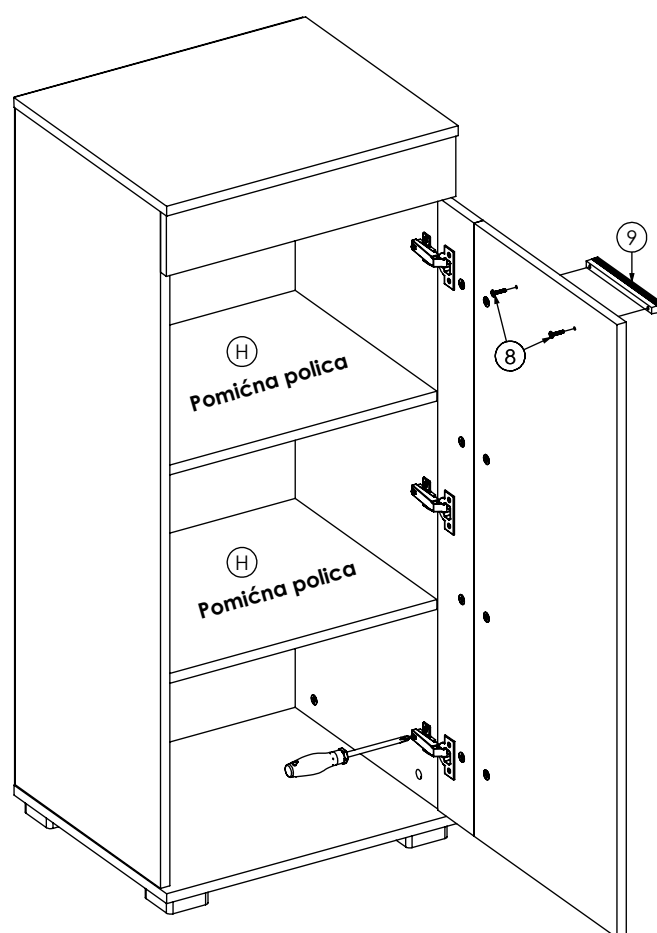


Korak 9


Montaža Segment S3

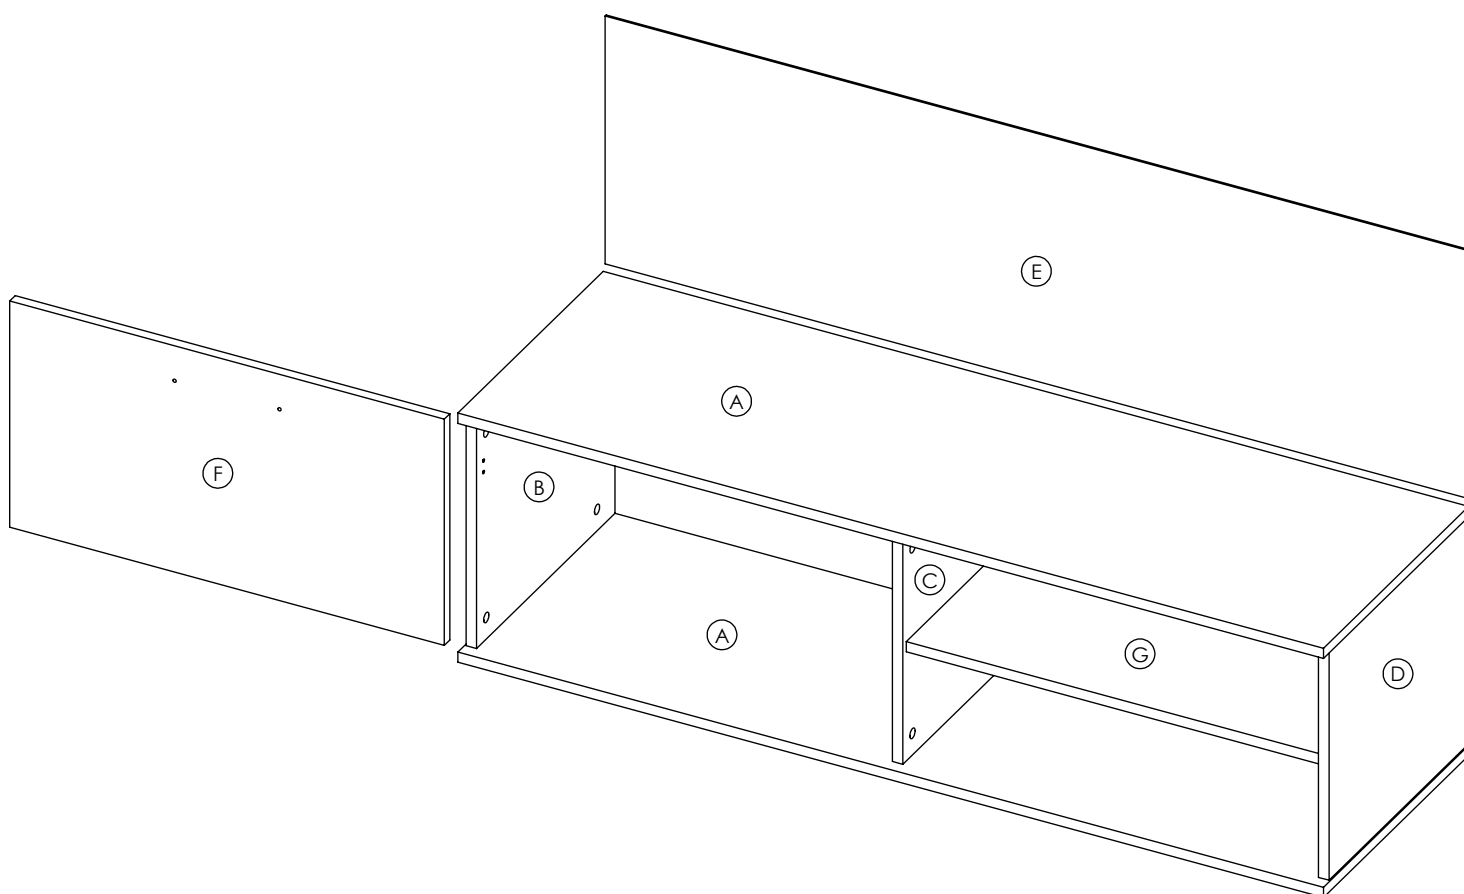

Korak 1

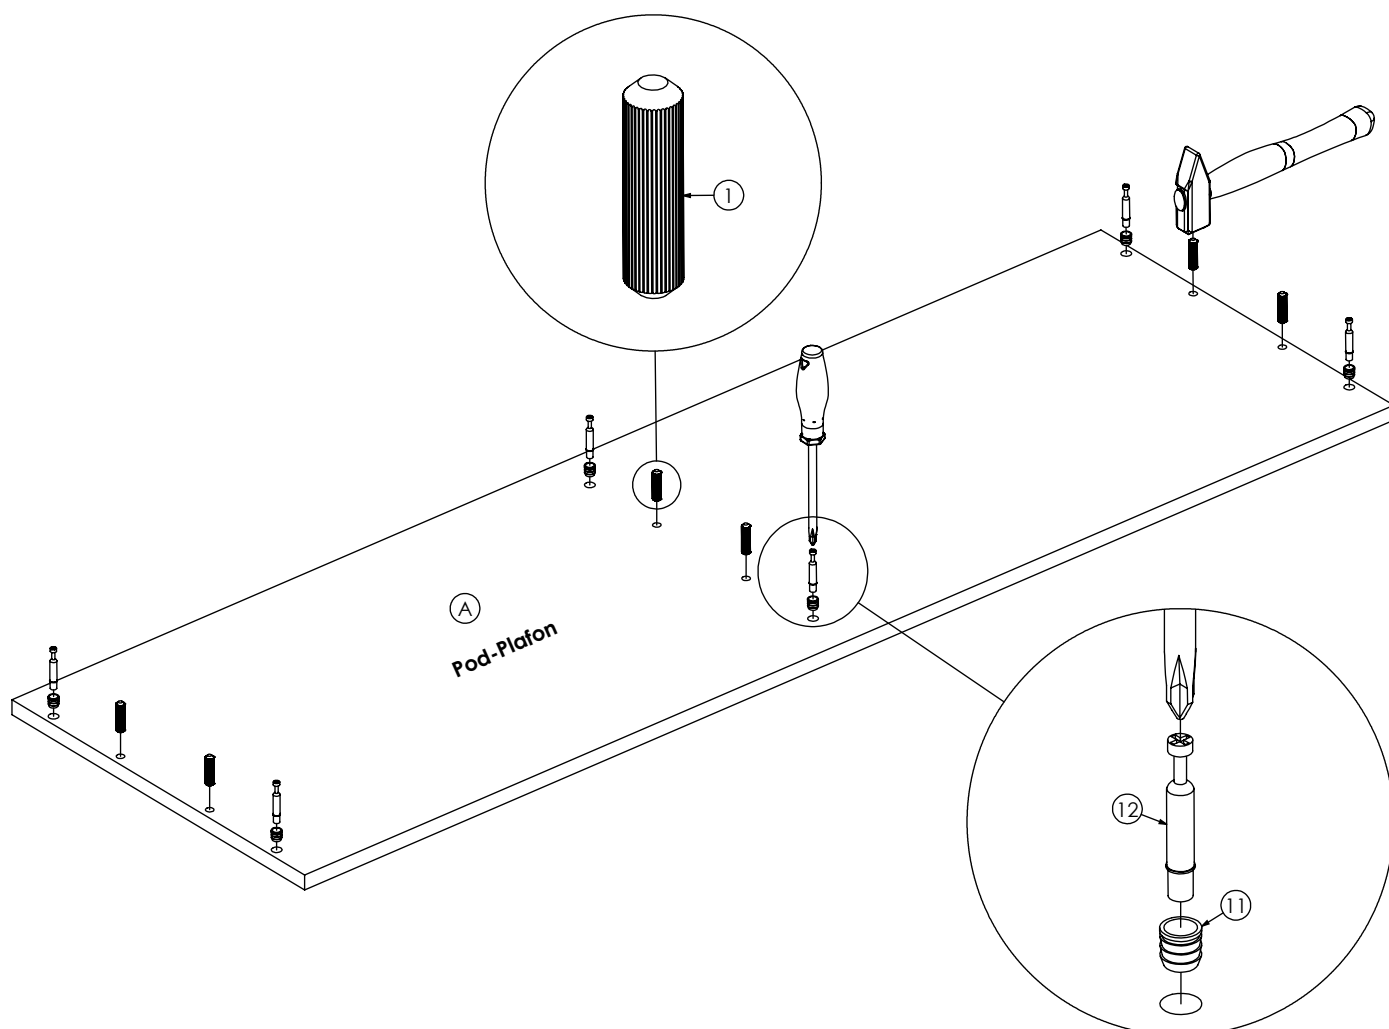


Korak 2

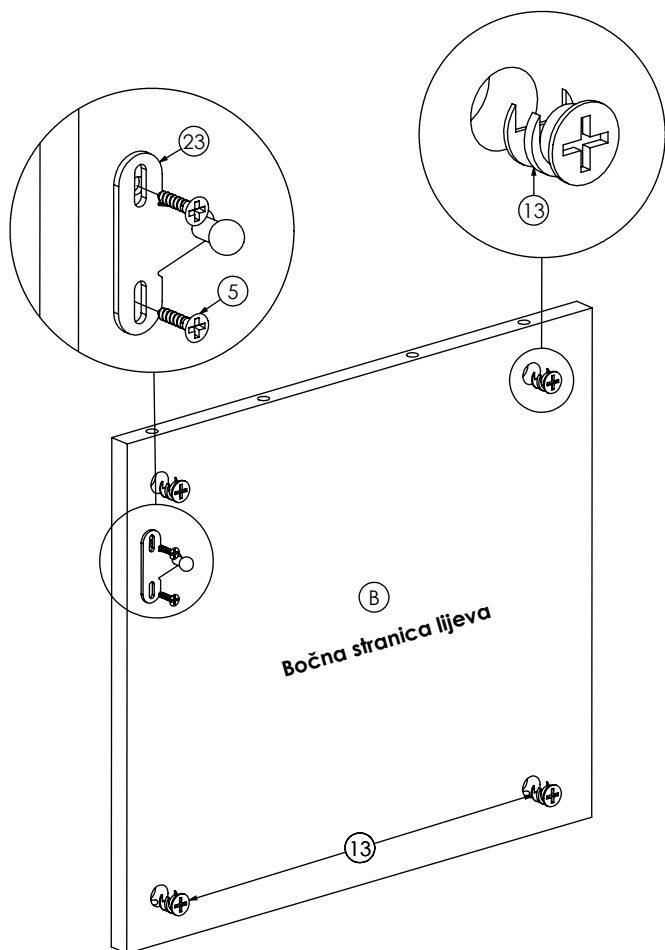


Korak 3


Napomena
Na isti način postaviti okov na desnoj bočnoj stranici.

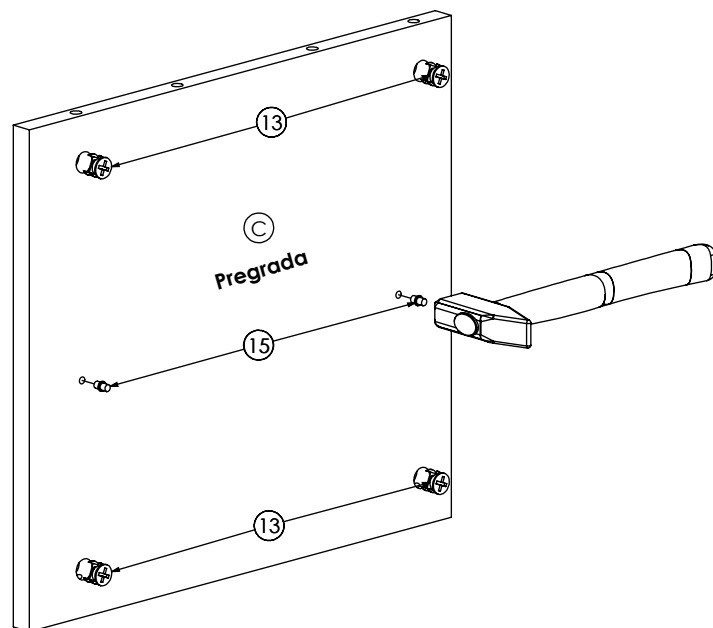


Korak 4

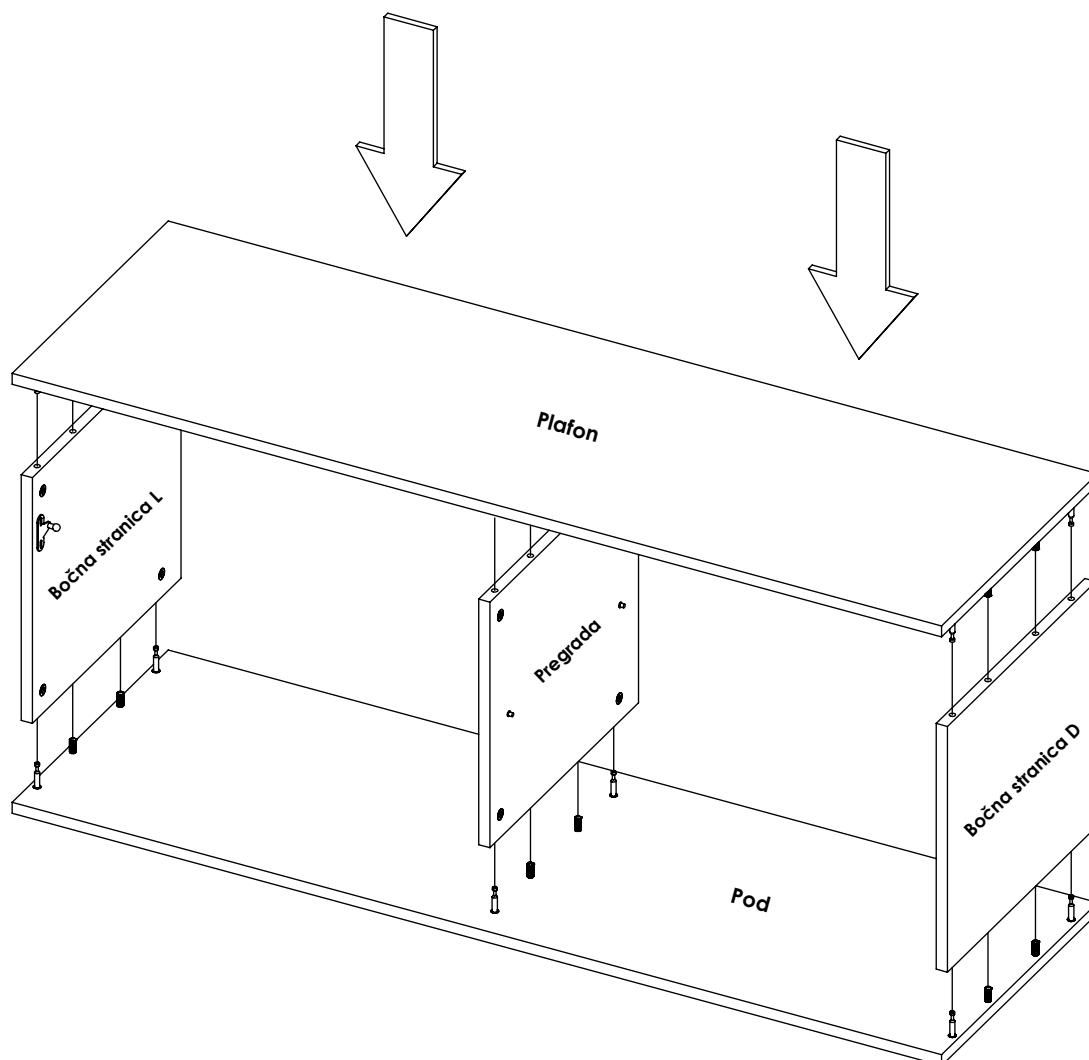

Korak 5

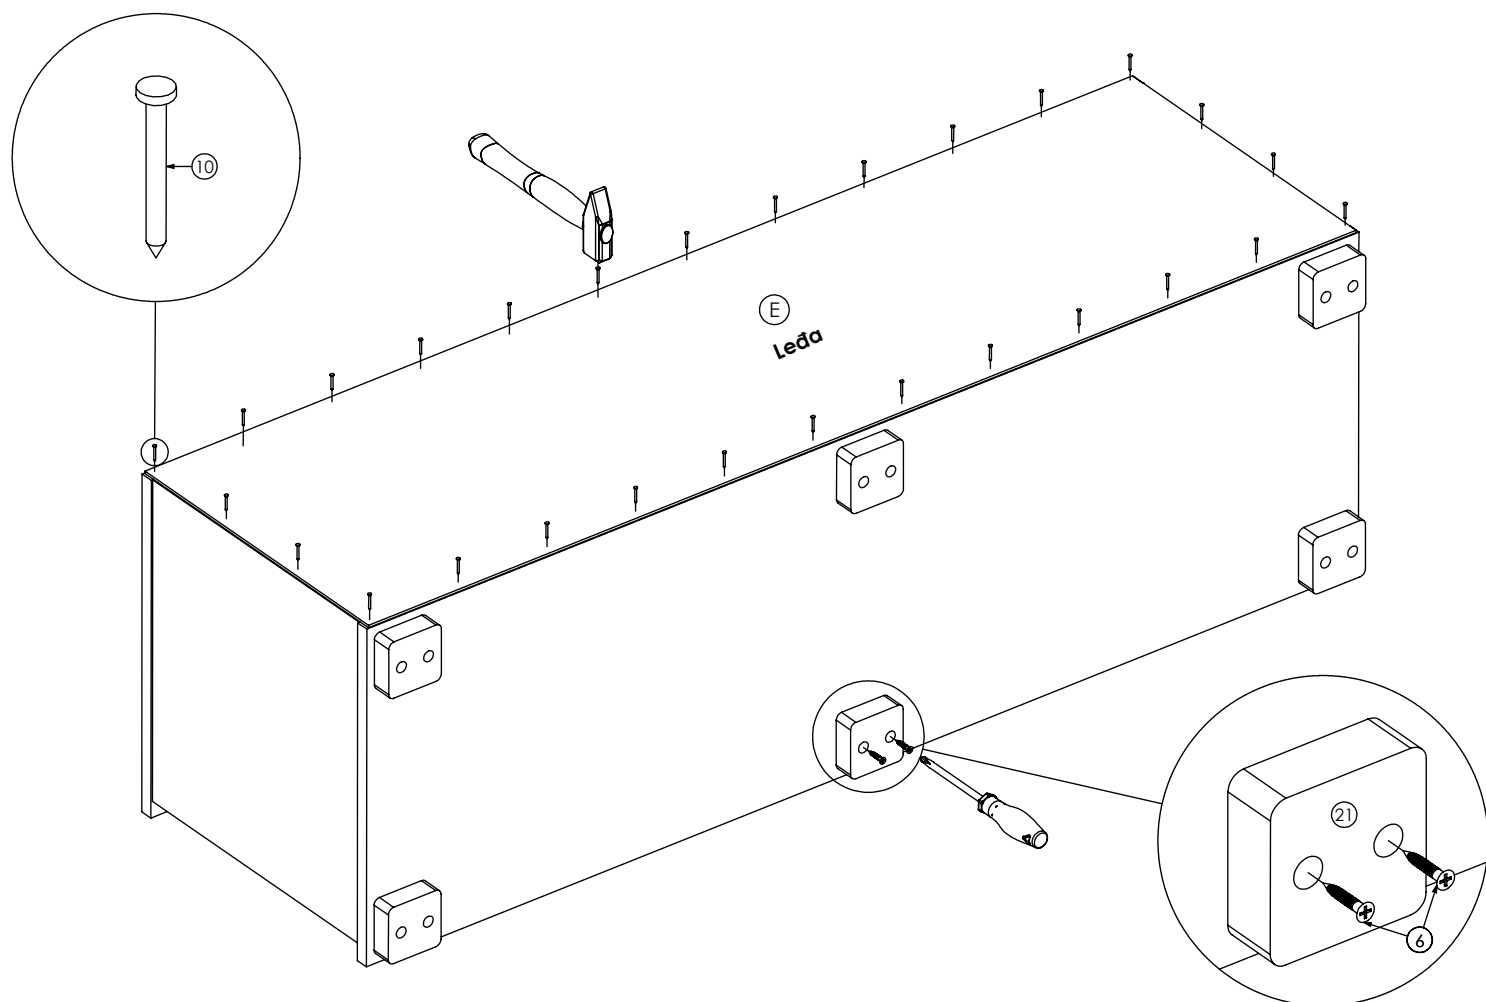


Korak 6

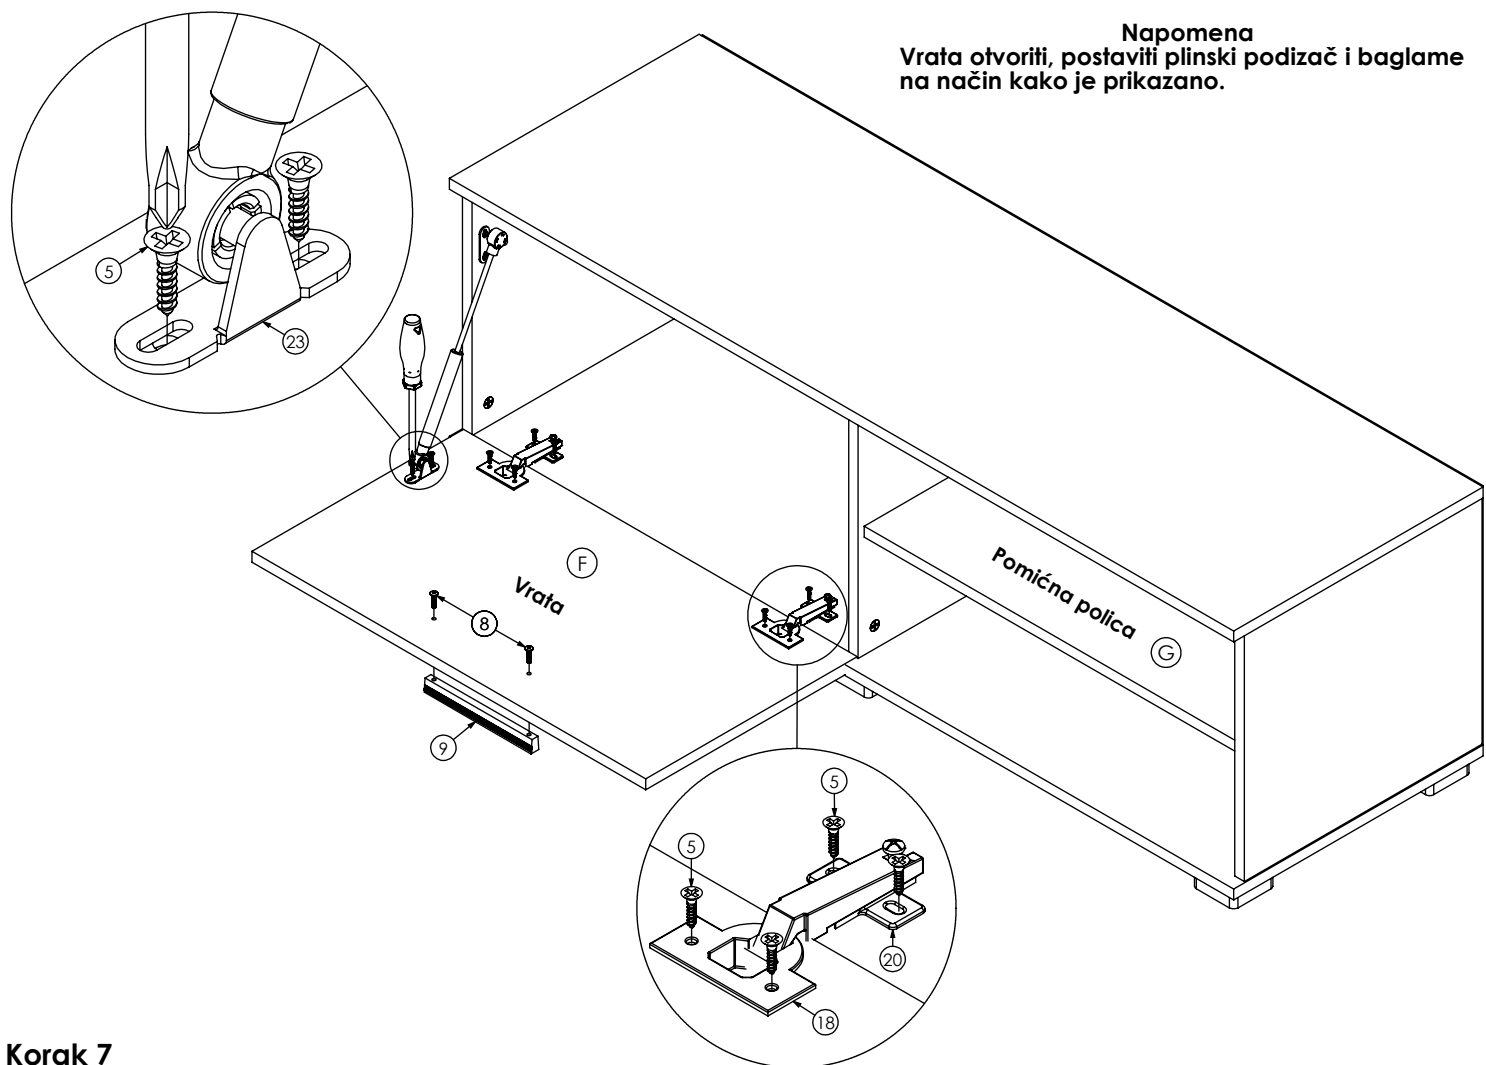


Korak 7


Montaža Segment S4

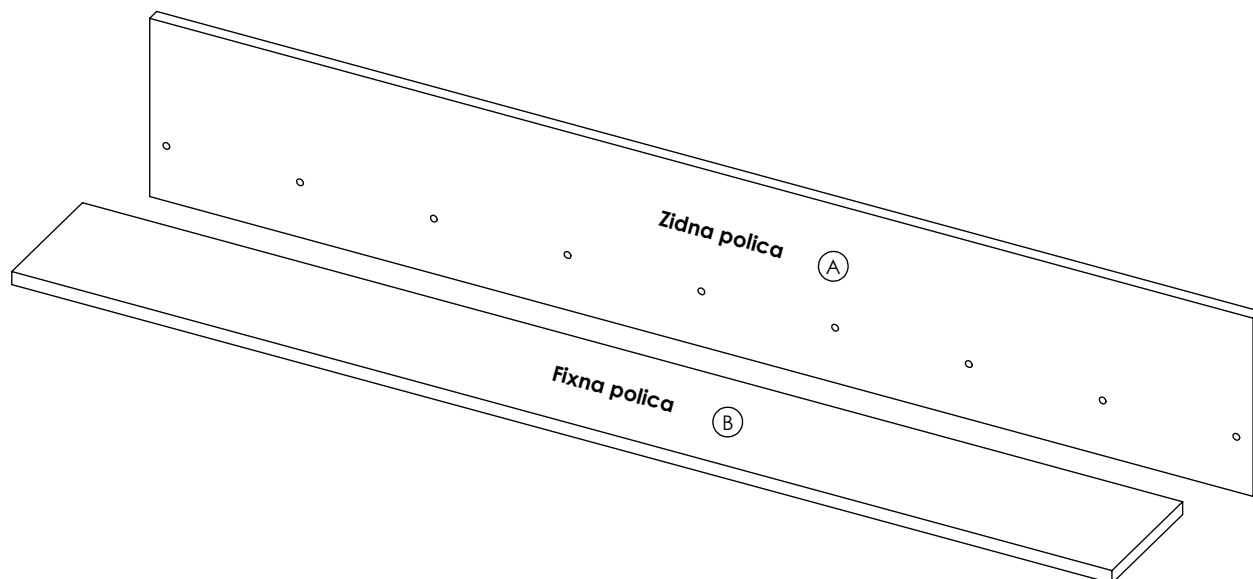

Korak 1

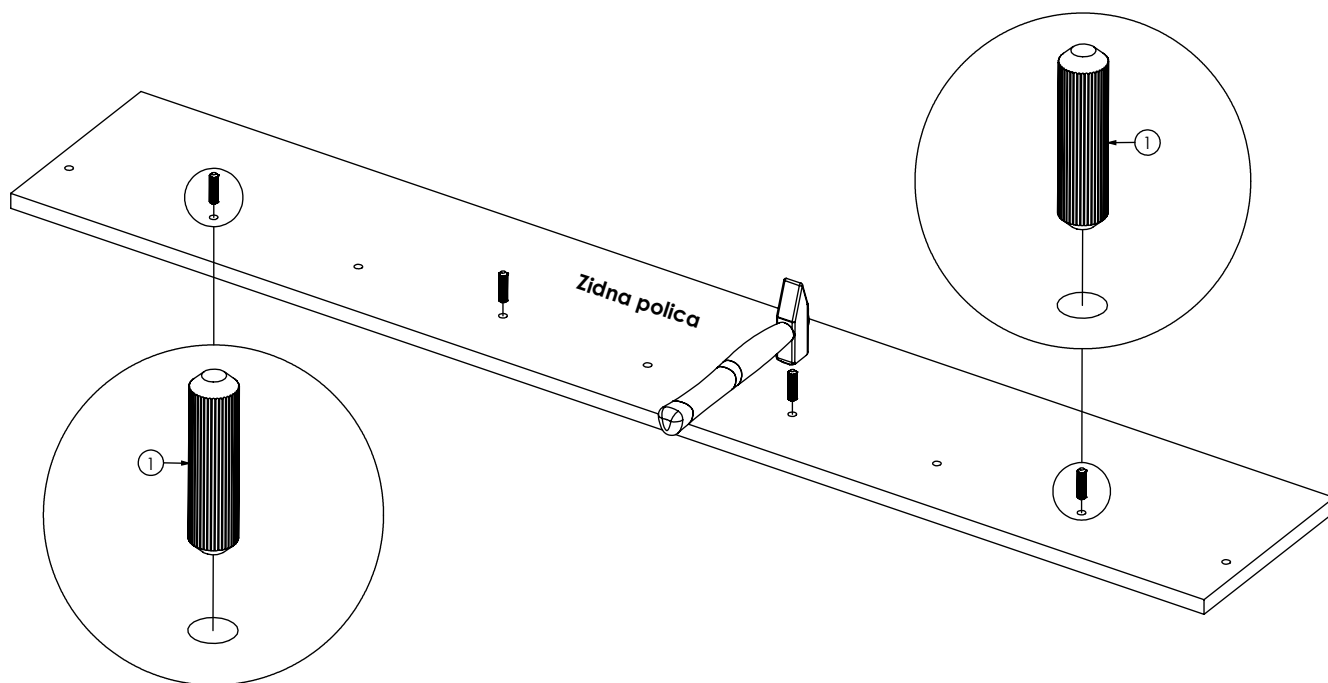

Korak 2

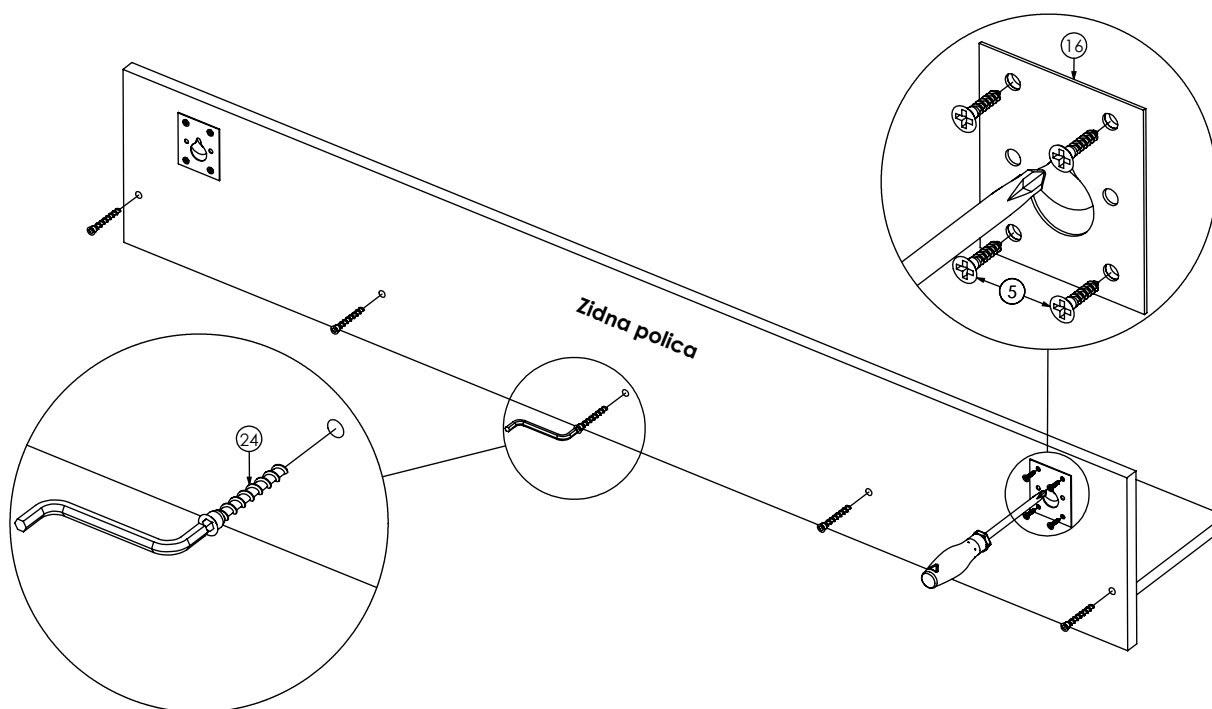

Korak 3