



AMBYENTA

...kroz život zajedno...


www.ambyenta.com

UPUTSTVO ZA MONTAŽU

PREDSOBLJE "VERRA"

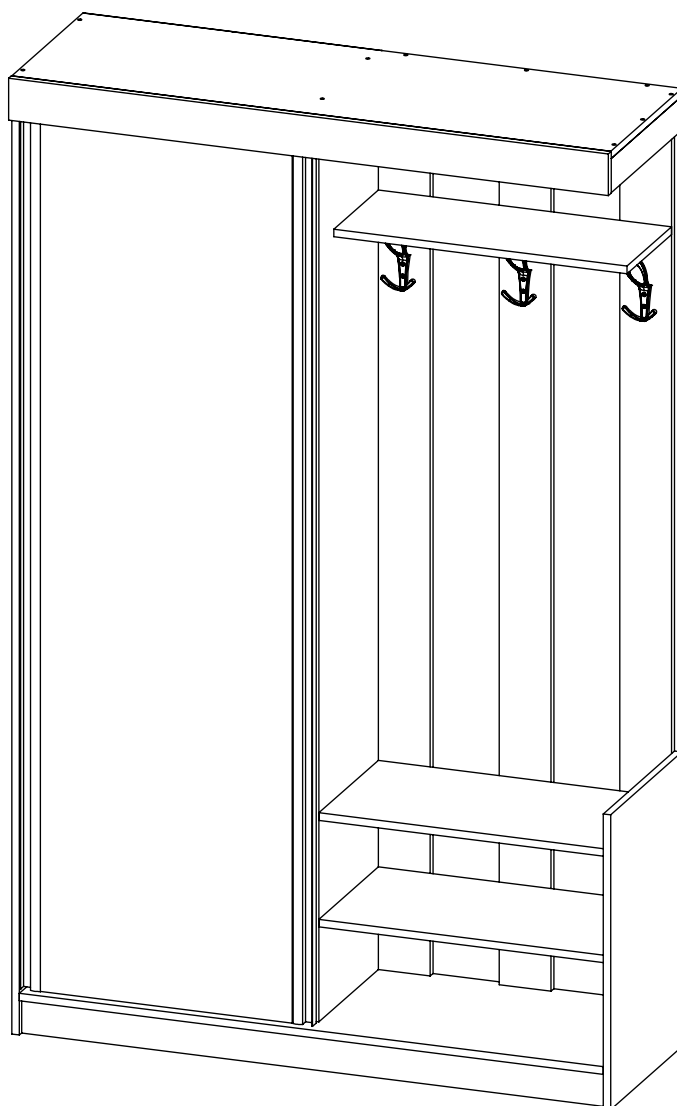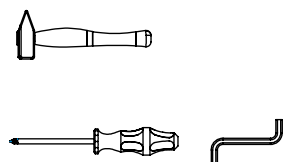

1 Drvena tipla Ø8x30 24 kom	2 Vijak iveral 4x16 20 kom	3 Vijak iveral 4x30 4 kom	4 Vijak 3.9x16 20 kom	5 Vijak inbus 6.3X50 29 kom	6 Ekseri 48 kom	7 Nosač polica 8 kom	8 Stopica sa ekserom 5 kom
9 Kutnik metalni 2 kom	10 Donji točkić 2 kom	11 Gornji točkić 2 kom	12 Garderobni izvlakač 1 kom	13 Ljepilo bočica 2 kom	14 Ekscentar 12 kom	15 Stezni vijak 12 kom	16 Kapica pokrivna 12 kom
17 Kapica pokrivna 24 kom	18 Jednodijelna šina 2 kom	19 Rukohvat 2 kom	20 Vješalica 3 kom	21 Leđna letva 1 kom	22	23	24

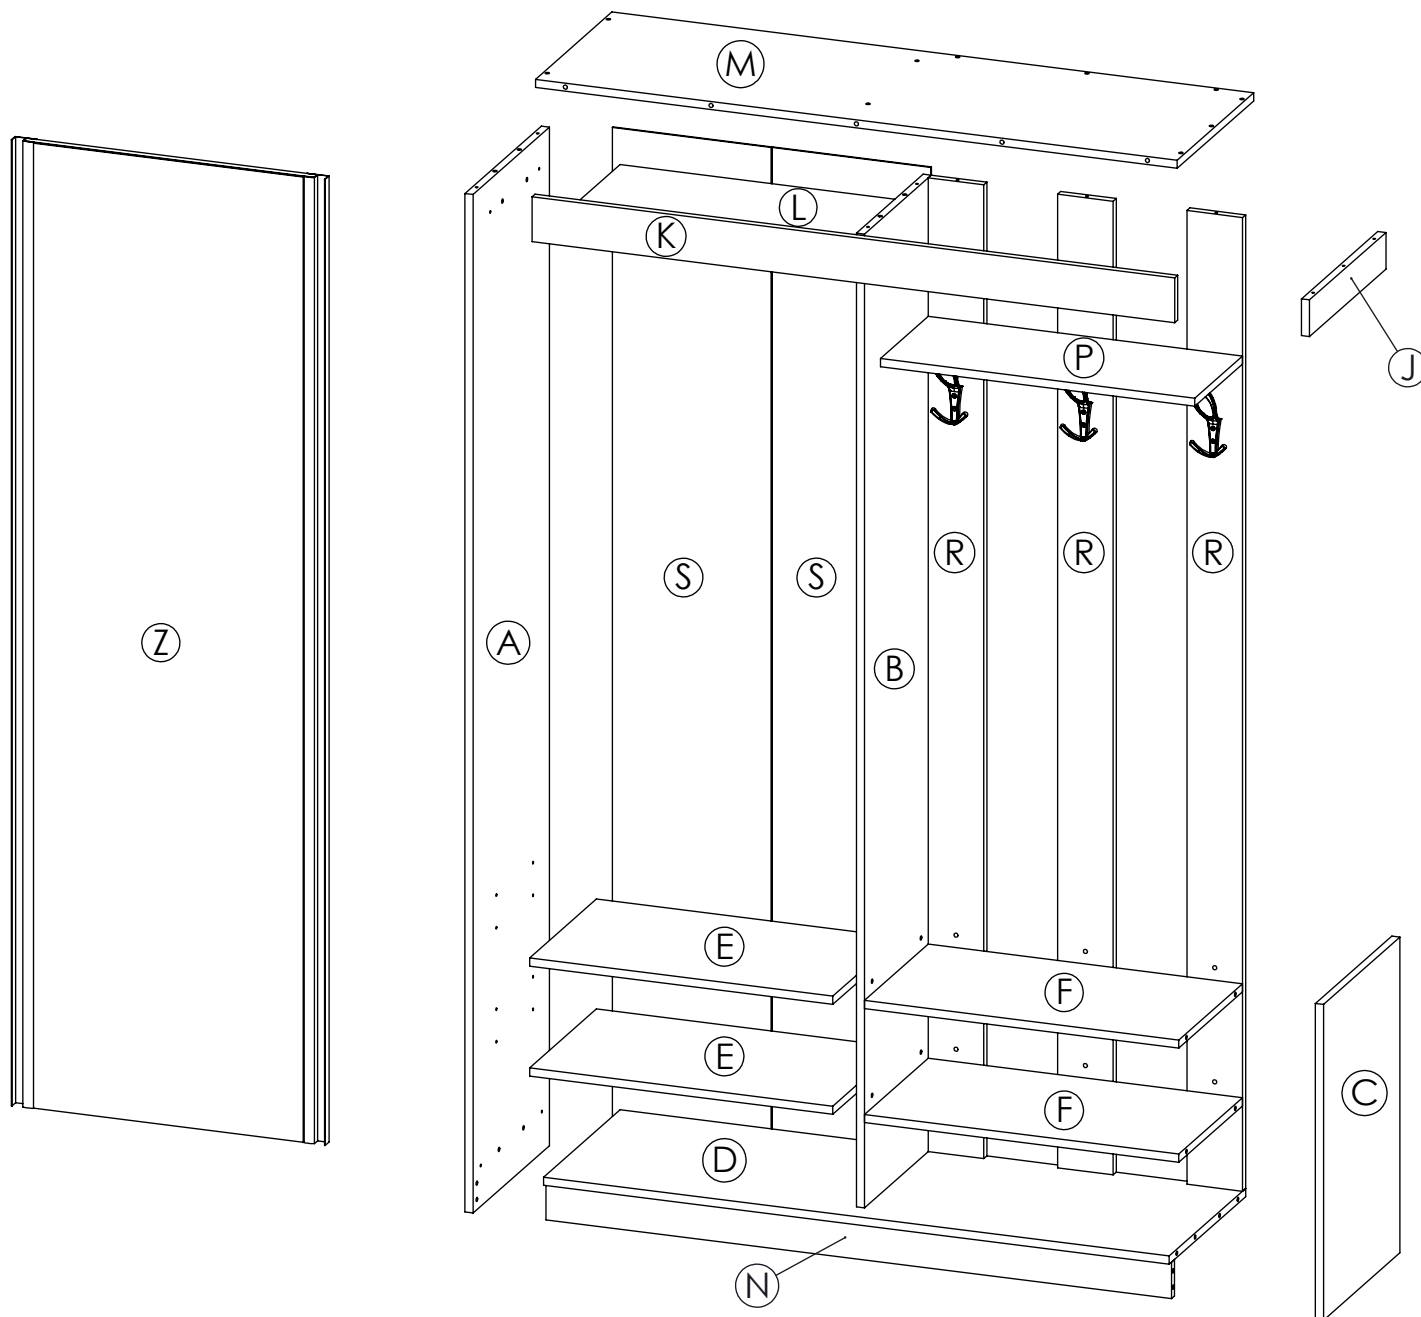

PAKET 1/2




- Bočna stranica lijeva..1kom (A)
- Bočna stranica desna..1kom (C)
- Polica fiksna manja...1kom (P)
- Plafon..1kom (M)
- Gornja lajsna..1kom (K)
- Vrećica sa okovom..1kom
- Garderobni izvlakač..1kom (12)
- Jednodijelna šina..2kom (18)
- Lajsna za vješalica..3kom (R)
- Pod..1kom (D)
- Polica fiksna gornja..1kom (L)
- Leđa..2kom (S)
- Srednja stranica..1kom (B)


PAKET 2/2




- Vrata sa ogledalom..1kom (Z)
- Pomična polica..2kom (E)
- Polica fiksna donja..2kom (F)
- Bočna stranica desna gornja..1kom (J)
- Leđna letva..1kom (21)

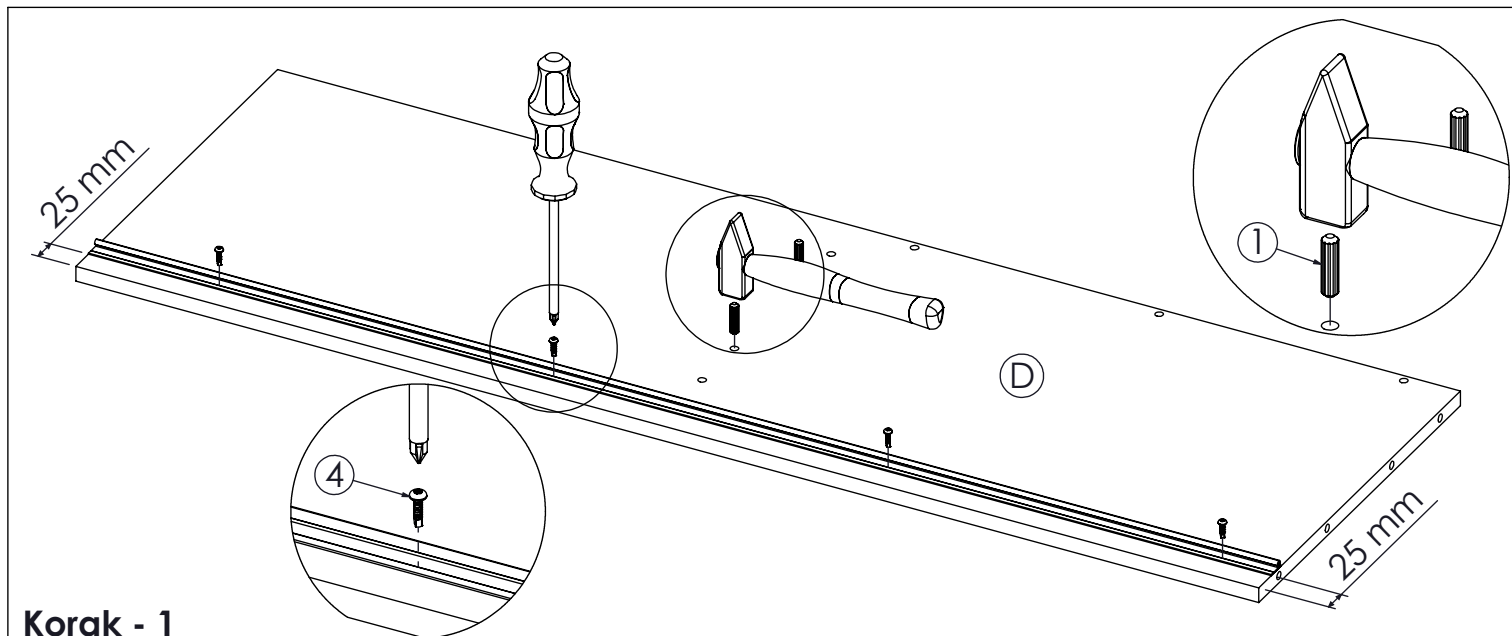


Korak - 1

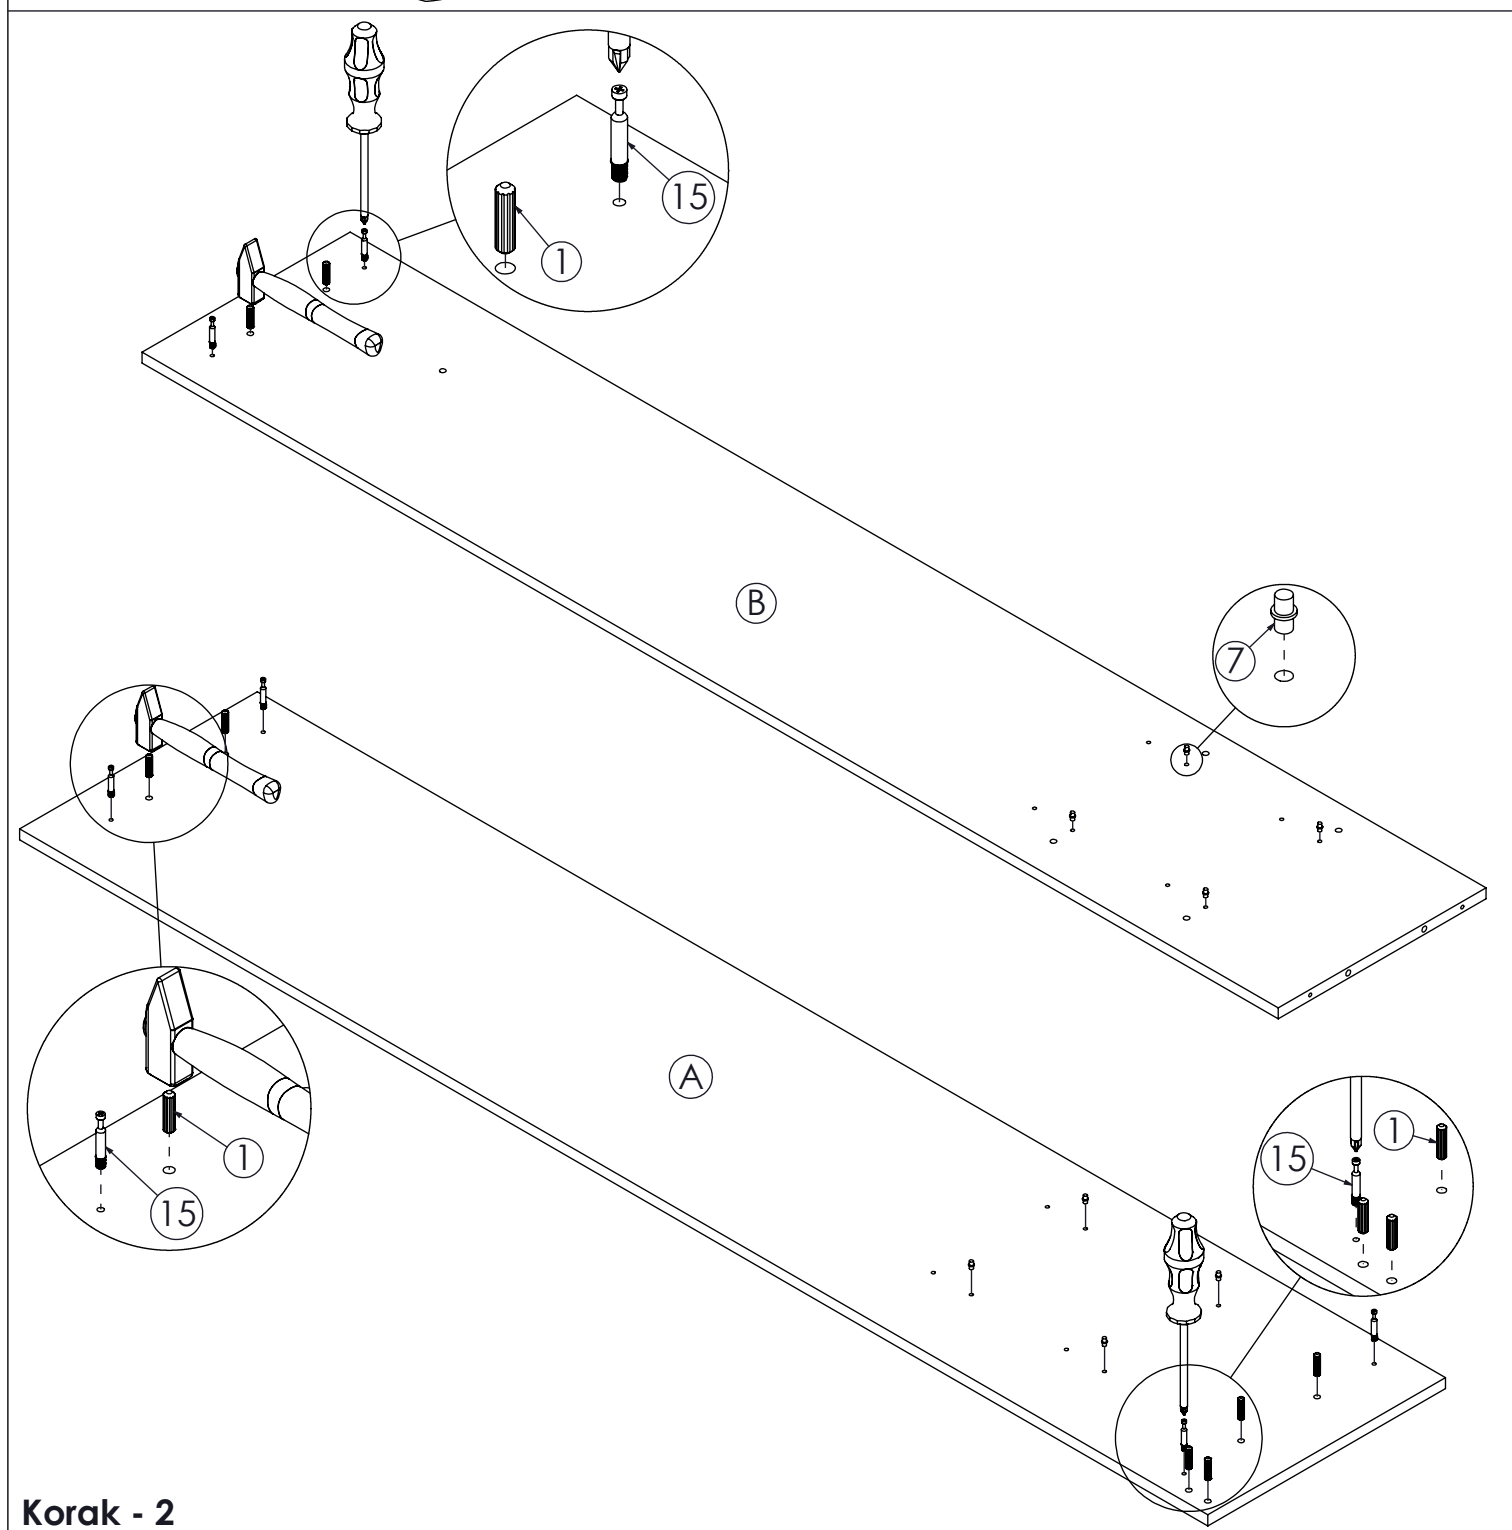


Korak - 2

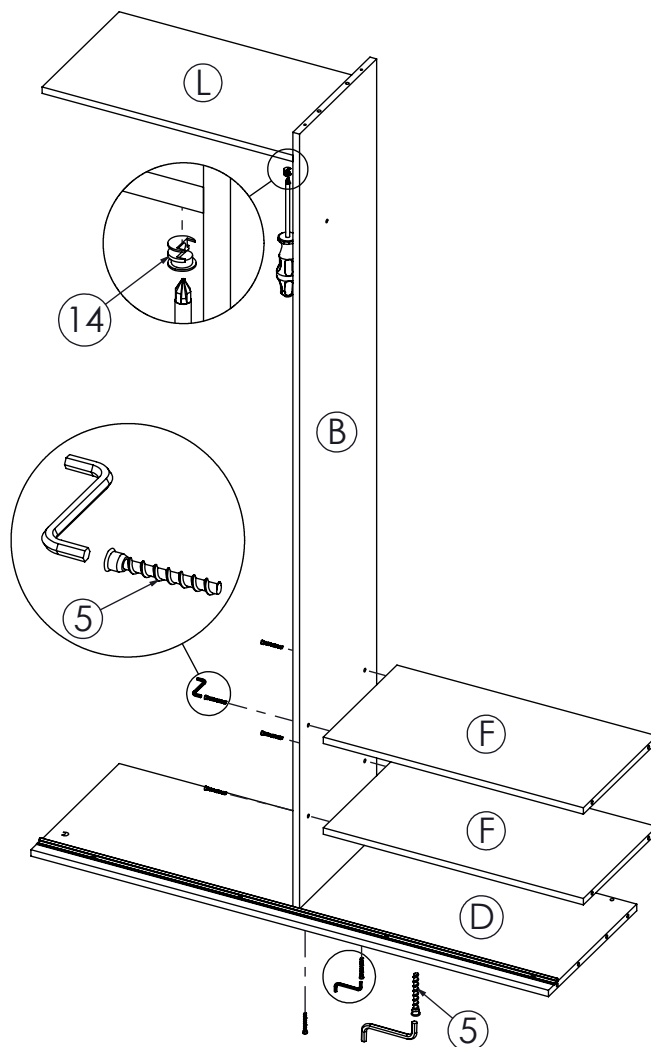


Korak - 3

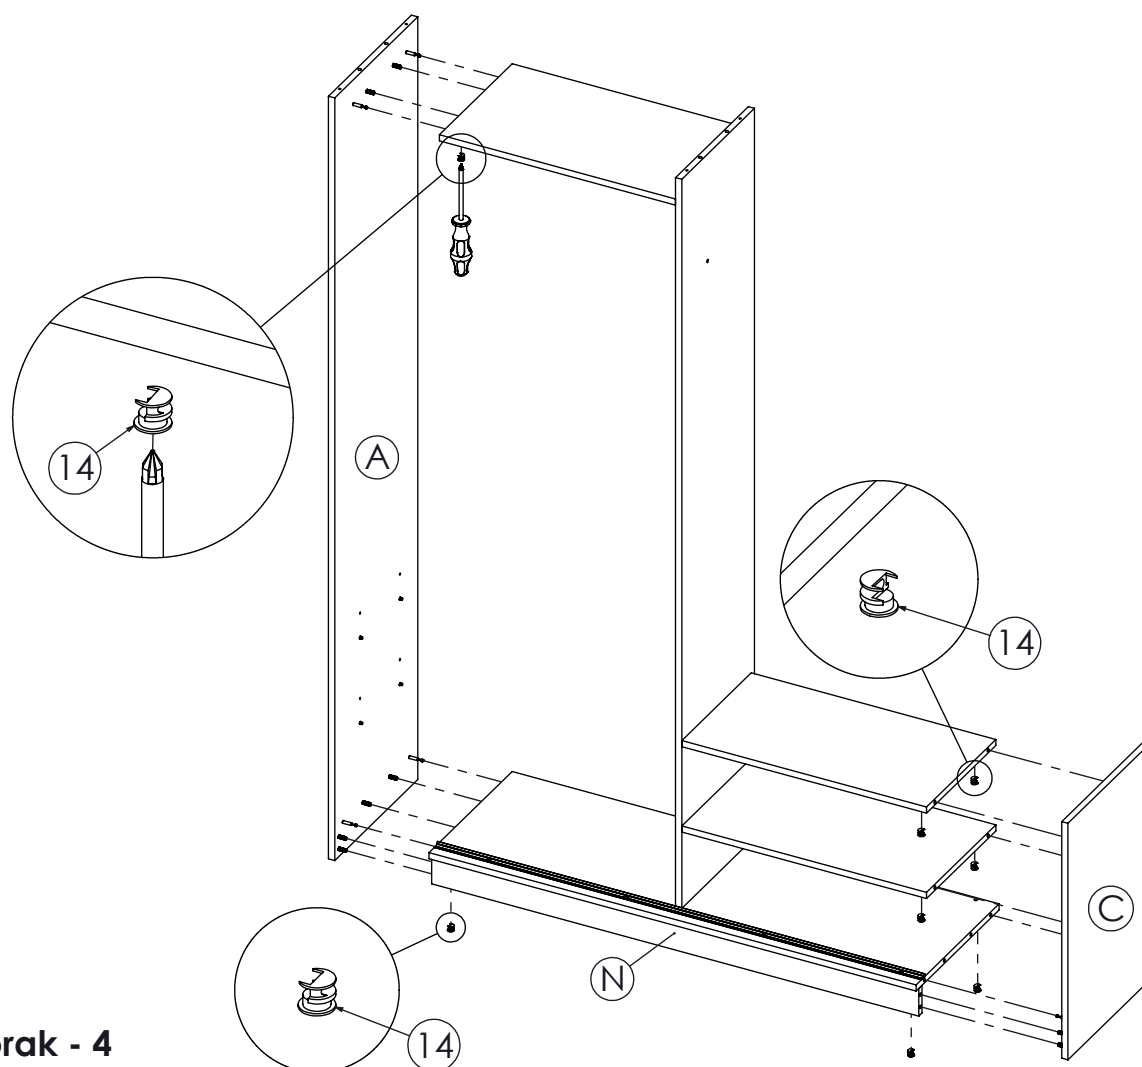


Korak - 4

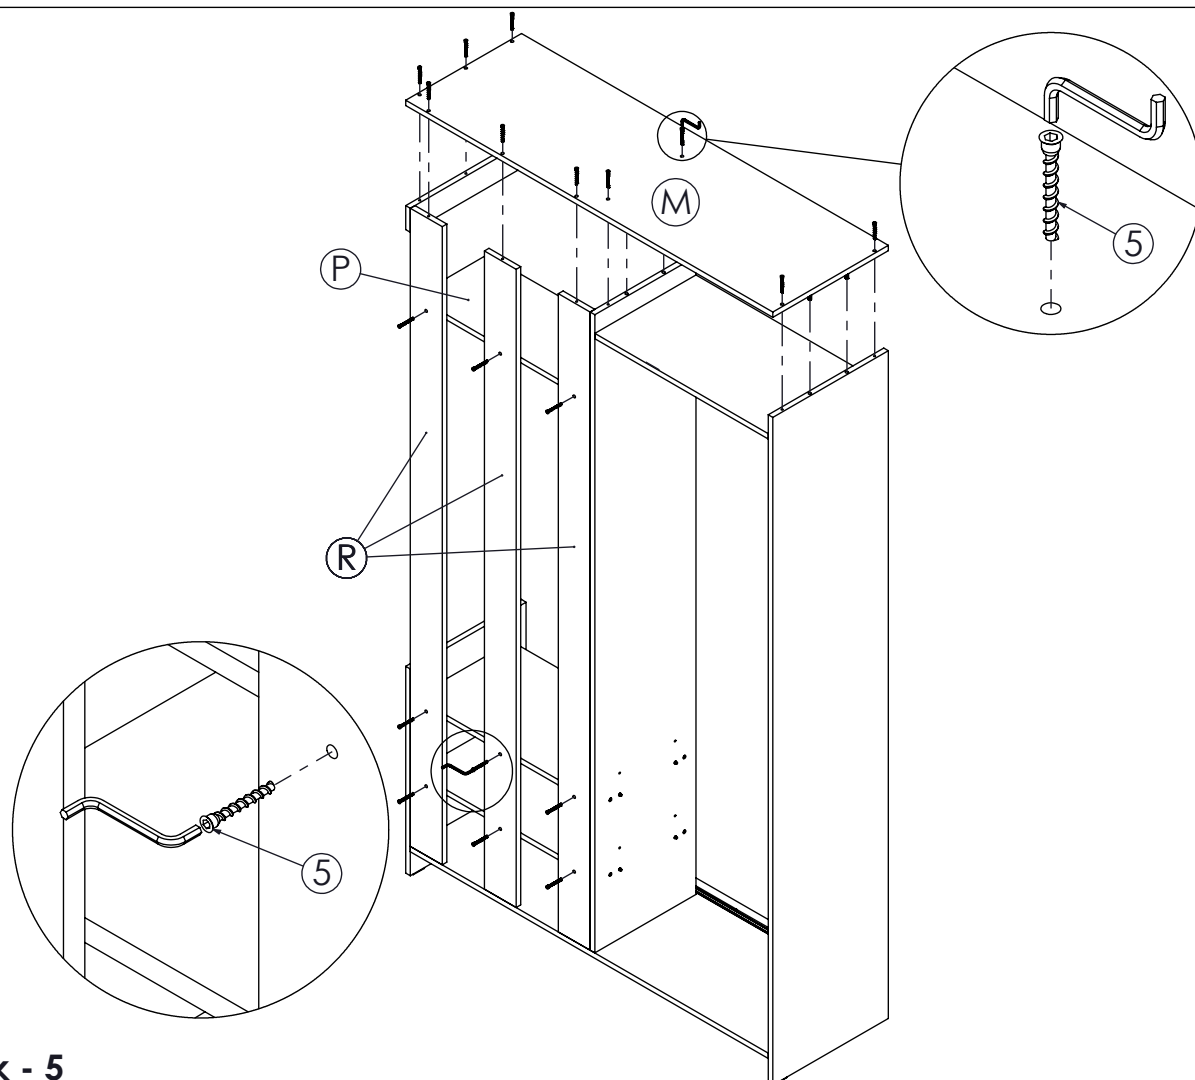


Korak - 5

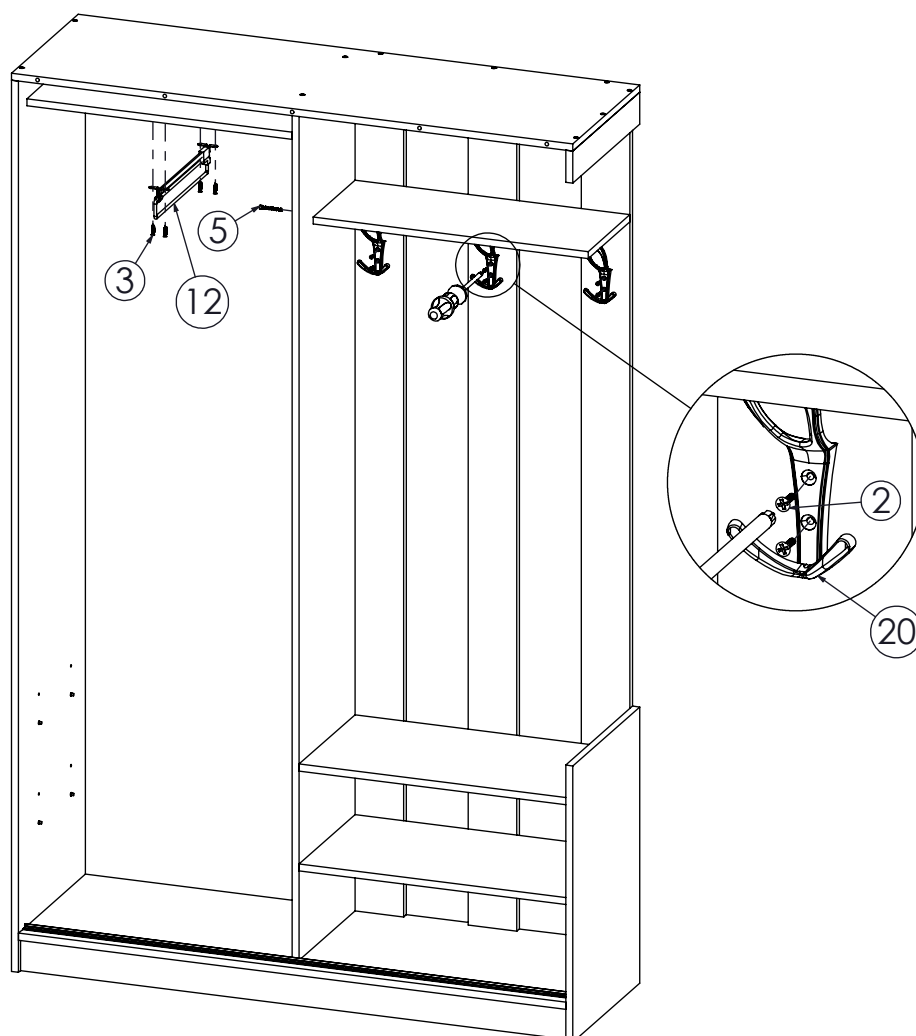


Korak - 6

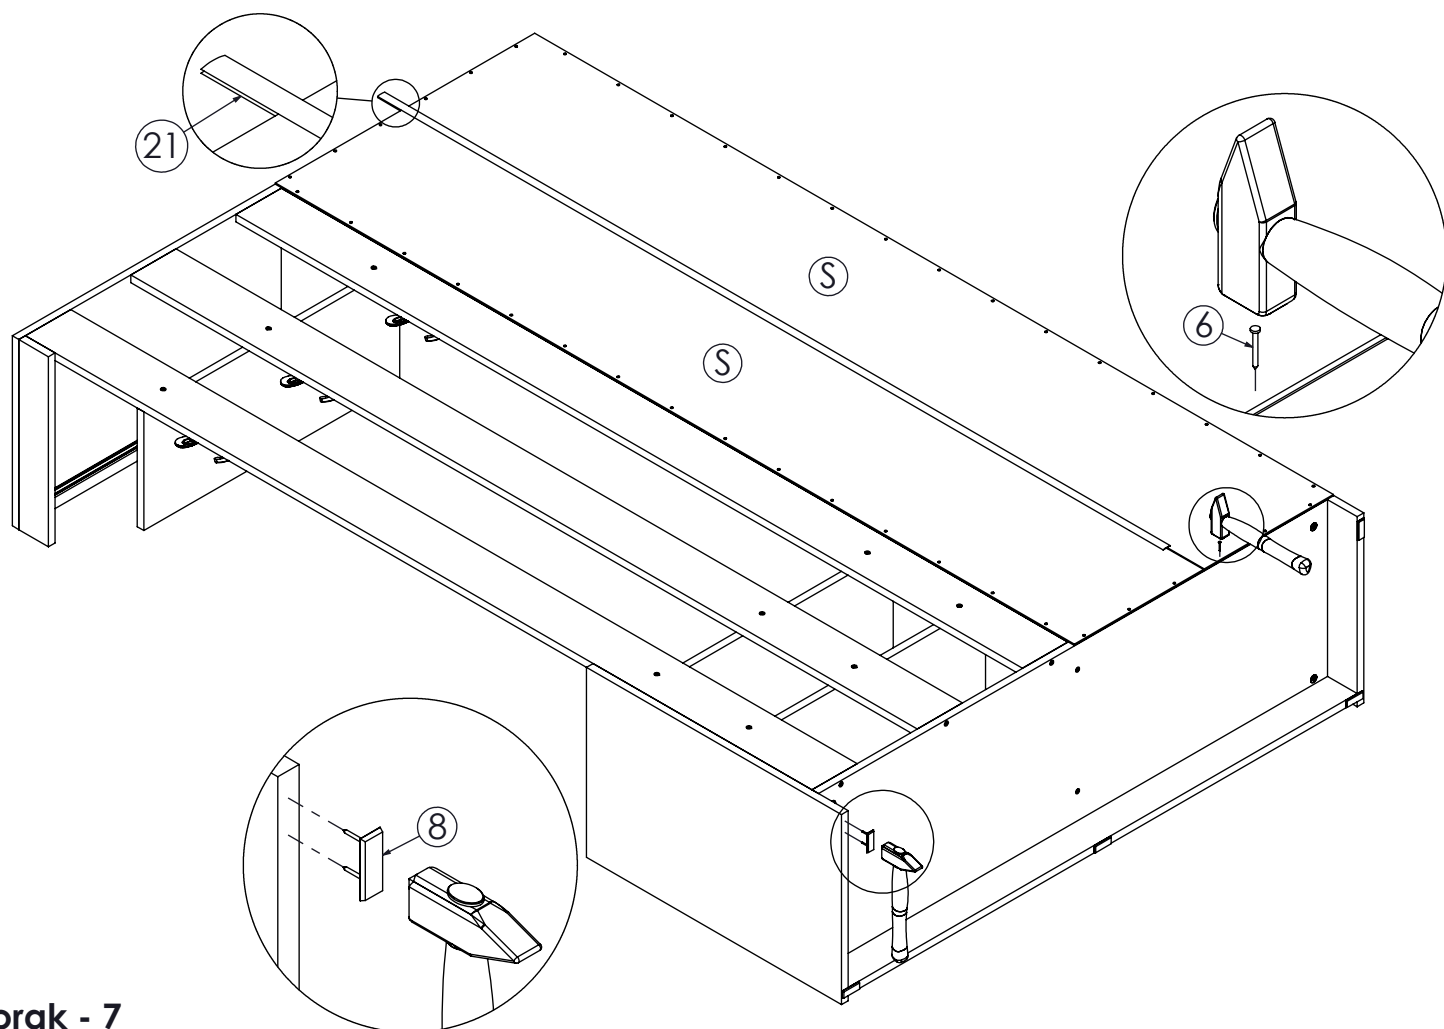

Korak - 7

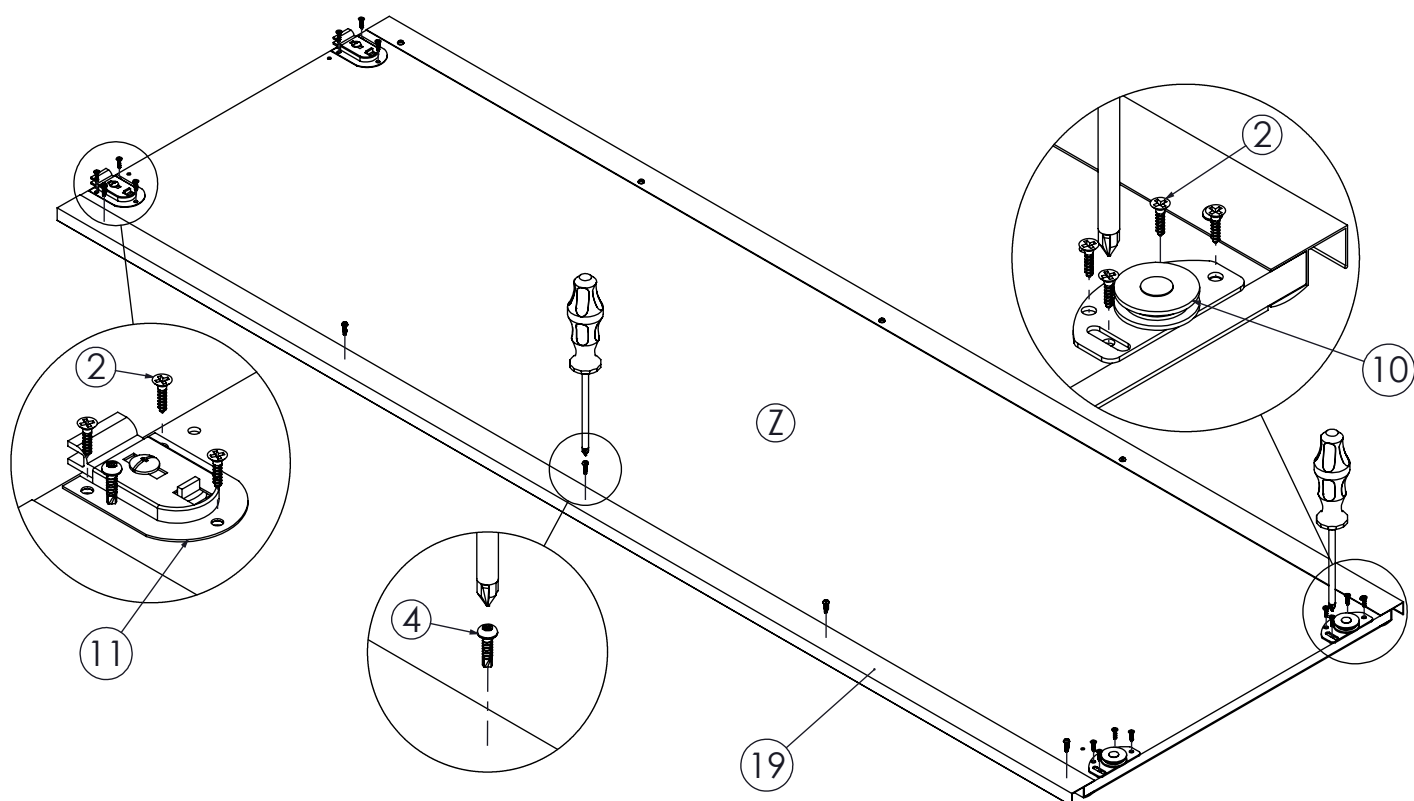

Korak - 8

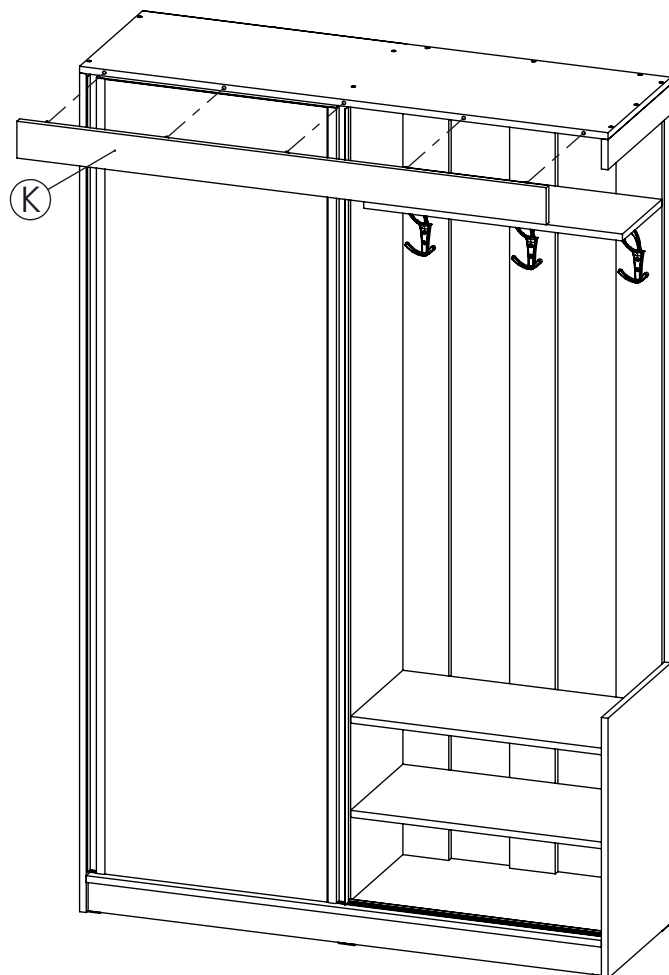

Korak - 9 **Napomena: Prvo postaviti točkiće u donju vodilicu da pravilno ulegnu, zatim gornji mehanizam u gornju vodilicu.**

