


AMBYENTA


...kroz život zajedno...

www.ambyenta.com


UPUTSTVO ZA MONTAŽU

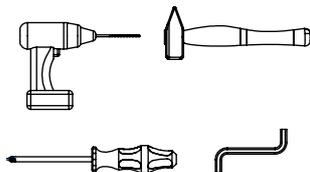

KOMODA "LORA 2"

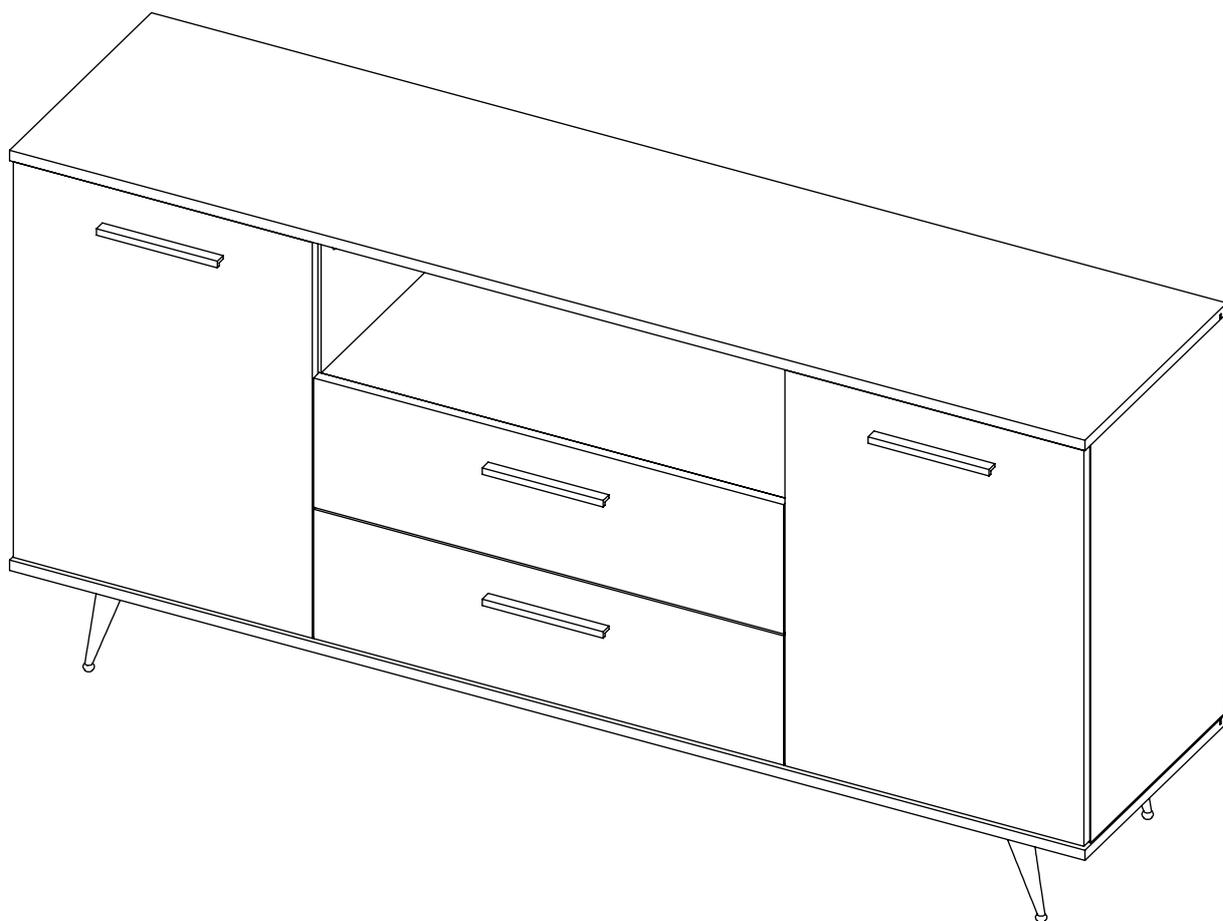

1 Drvena tipla Ø8x30 28 kom	2 Vijak iveral 4x16 44 kom	3 Vijak iveral 4x20 48 kom	4 Vijak M4x20 4 kom	5 Vijak M4x35 4 kom	6 Kapica pokrivna za ekscentar 12 kom	7 Ekscentar 16 kom	8 Stezni vijak 16 kom
9 Nosач polica 8 kom	10 Noga 4 kom	11 Spojka leđa 10 kom	12 Spona ravna 4 kom	13 Podloška 4 kom	14 Ručka 4 kom	15 Pvc kutnik za leđa 22 kom	16 Ljepilo bočica 1 kom
17 Vijak konfirmat 6,3x50 8 kom	18 Ekseri 32 kom	19 Vodilica L-350 mm 2 par	20 Kapica fi 5 8 kom				

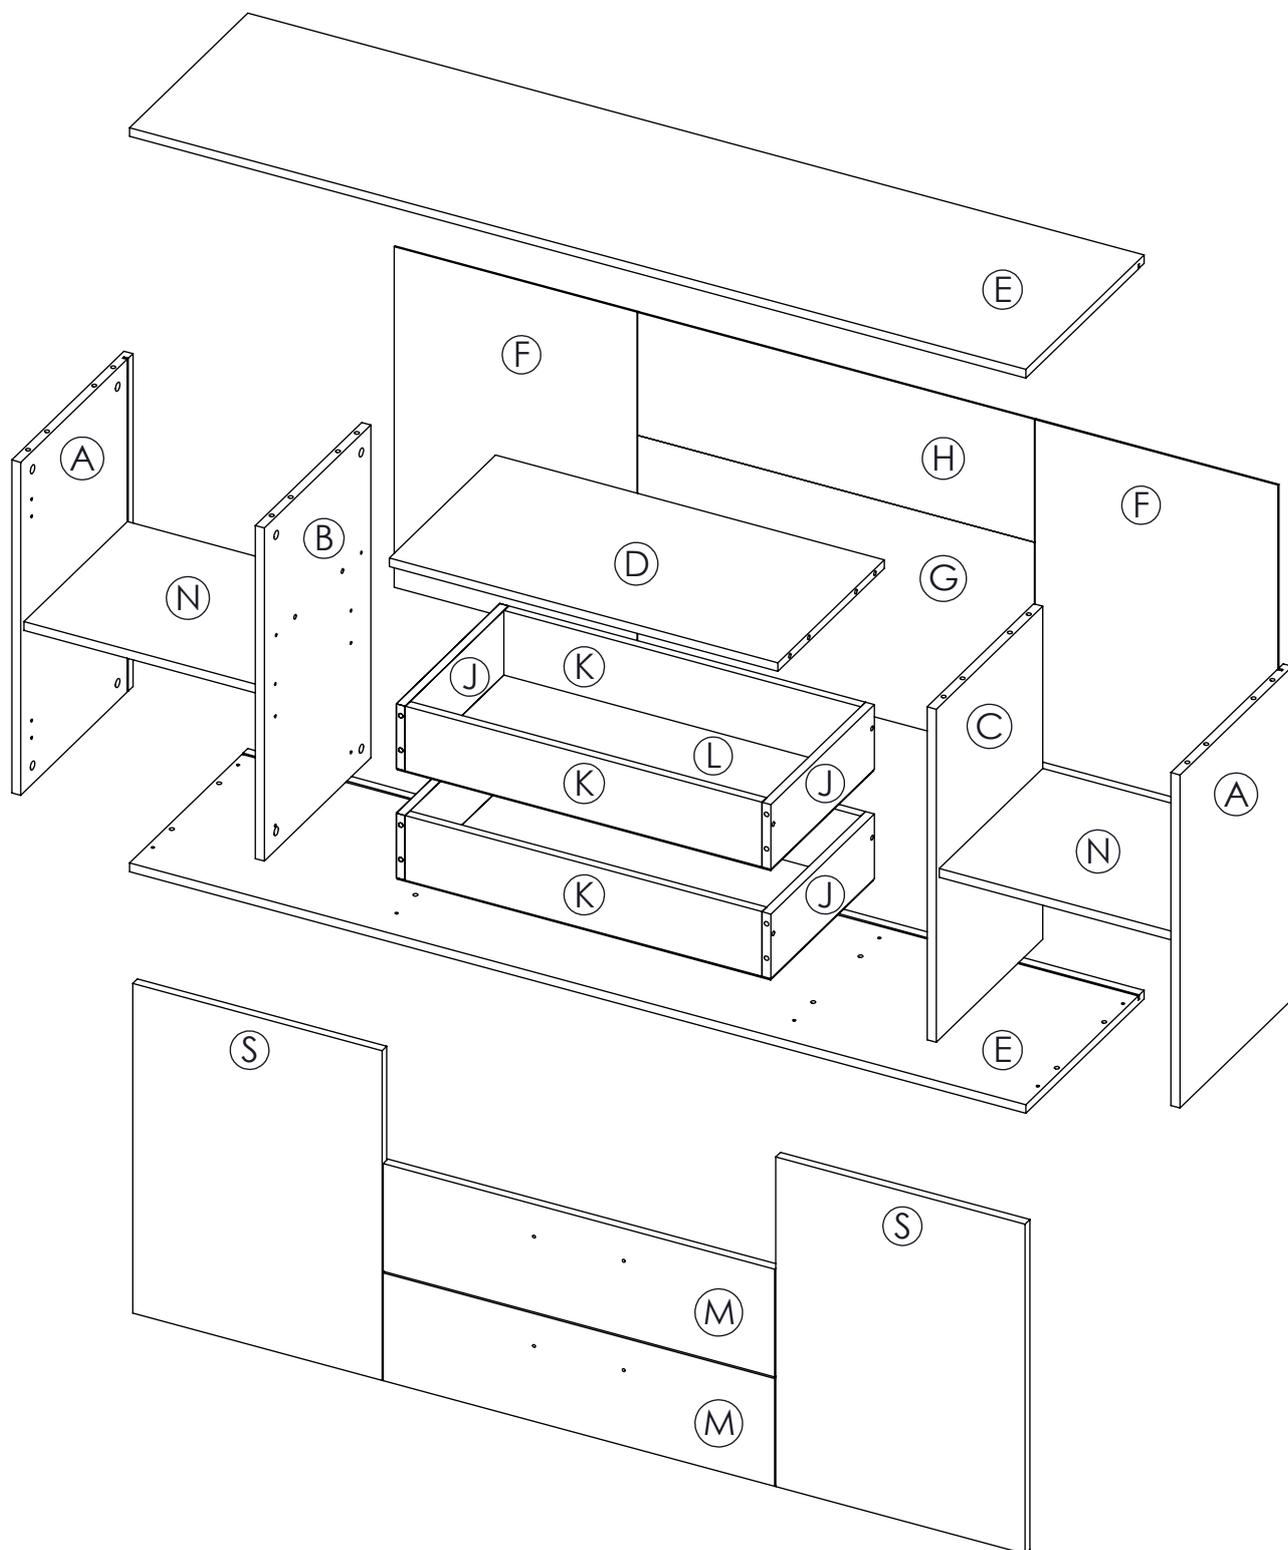

PAKET 1/2






- Pod/plafon..1 kom (E)
- Pod ladice..2 kom (L)
- Leđa srednja donja..1 kom (G)
- Leđa srednja gornja..1 kom (H)
- Fiksna polica..1 kom (D)
- Maska ladice..2 kom (M)
- Korpus ladice P/Z..4 kom (K)
- Pomična polica..2 kom (N)
- Korpus ladice L/D..4 kom (J)
- Vrećica sa okovom..1 kom
- Vodilica L-350 mm..2 par (19)
- Pod/plafon..1 kom (E)


PAKET 2/2




- Vrata..2 kom (S)
- Srednja stranica lijeva..1 kom (B)
- Srednja stranica desna..1 kom (C)
- Bočna stranice..2 kom (A)
- Leđa lijeva/desna..2 kom (F)
- Noga..4 kom (10)

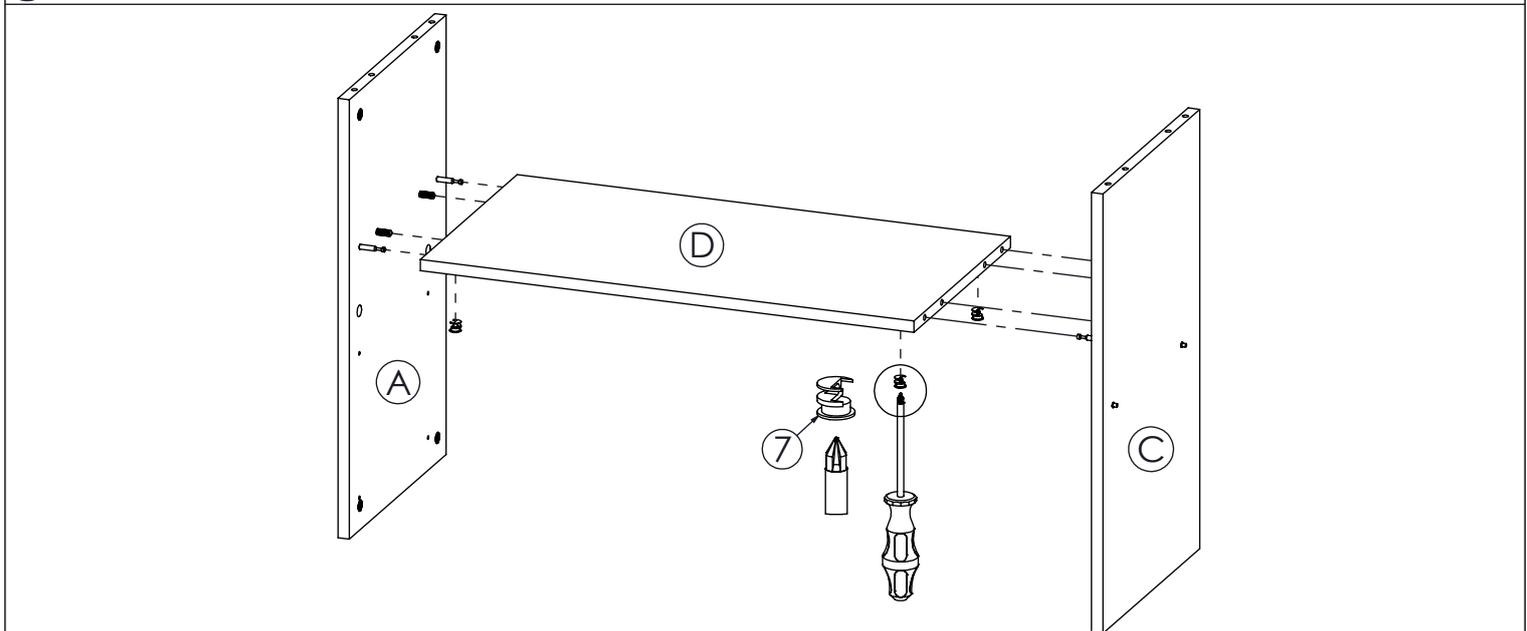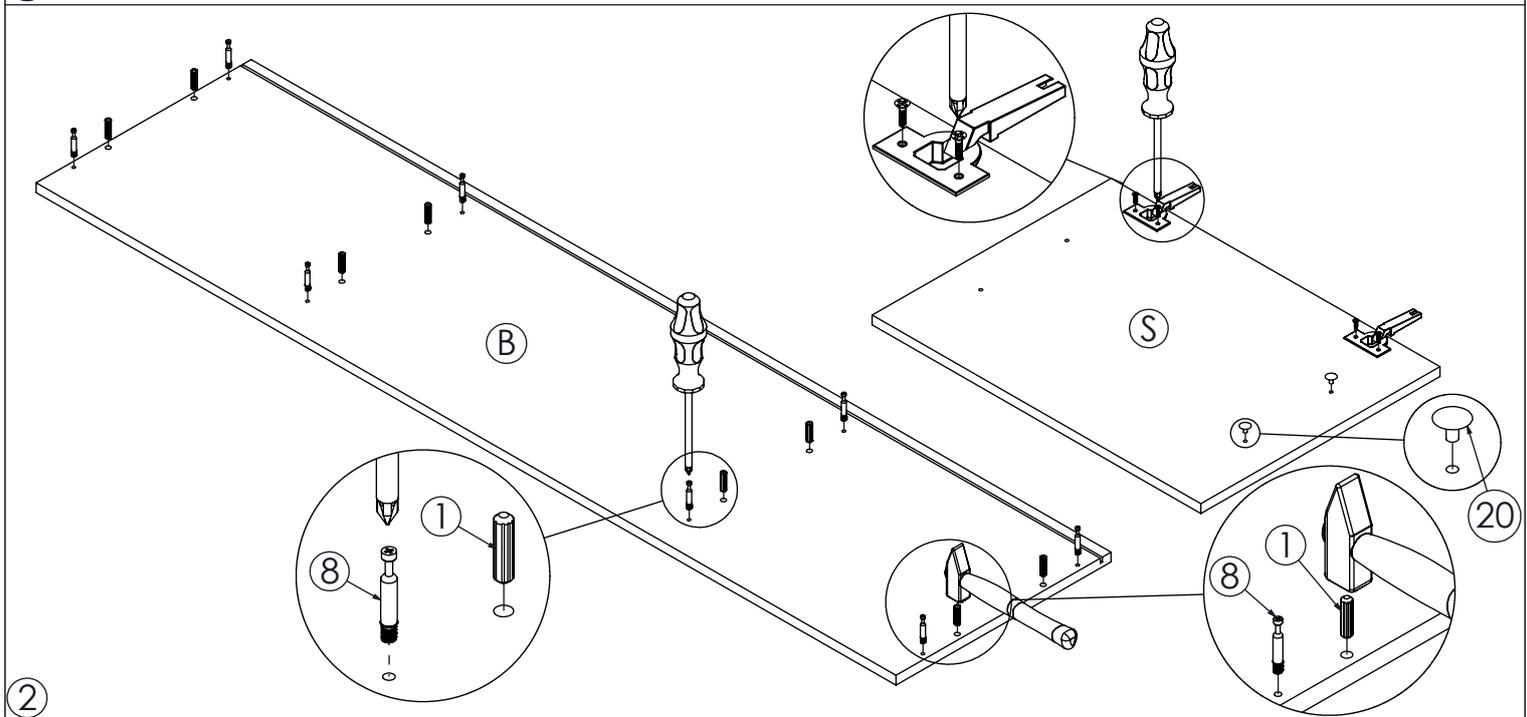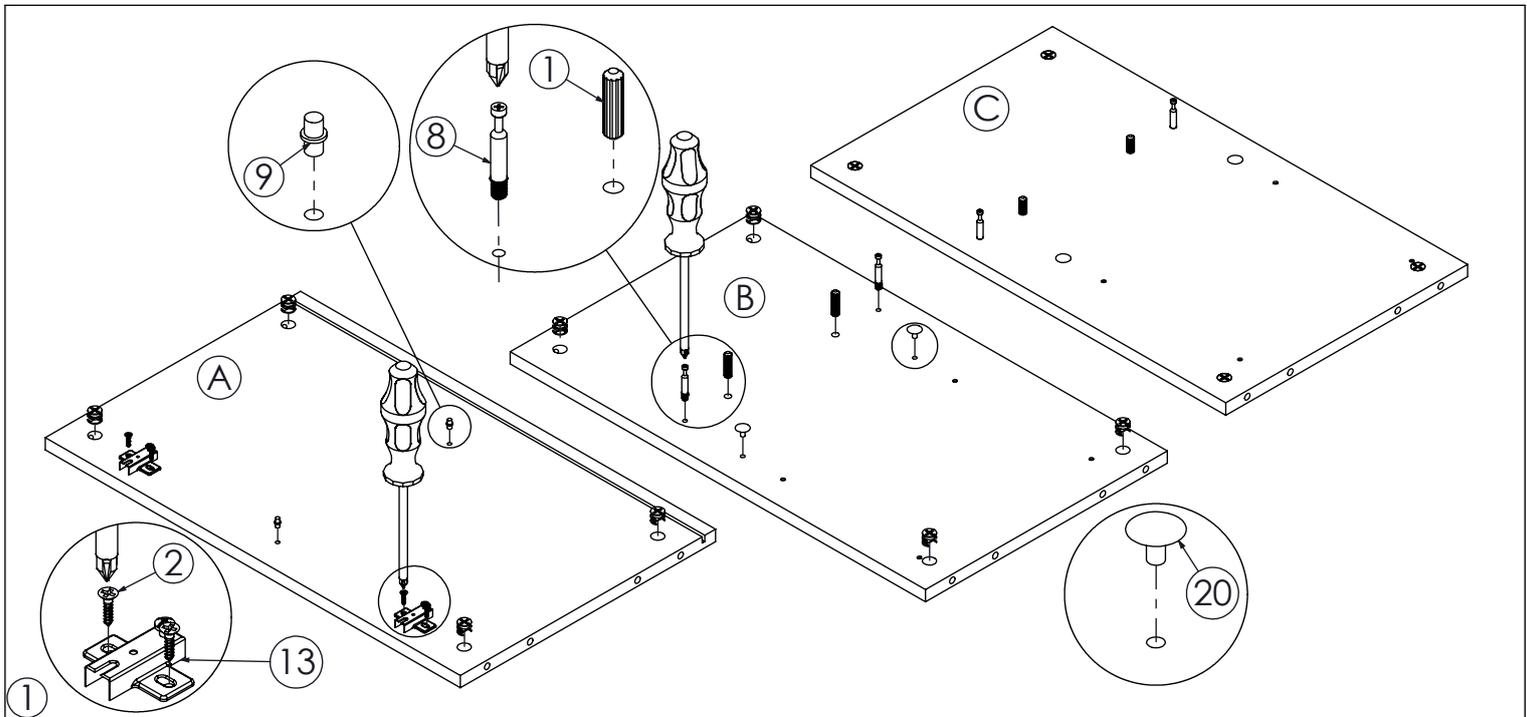


3 Nakon spajanja poda i plafona sa svim ostalim elementima komode, potrebno je dotegnuti ekscentre kako bi se konstrukcija sigurno zaključala.

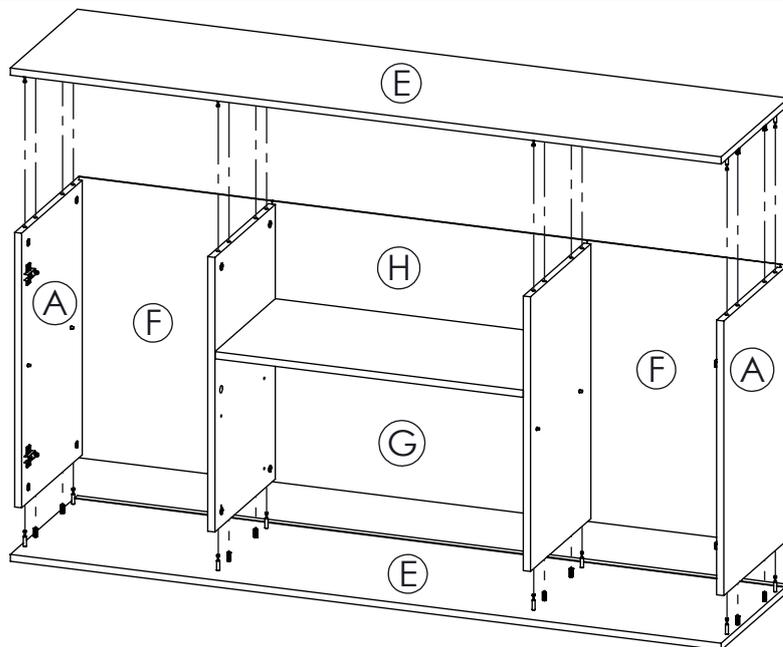


- 4 Nakon spajanja poda i plafona sa svim ostalim elementima komode, potrebno je dotegnuti ekscentre kako bi se konstrukcija sigurno zaključala.

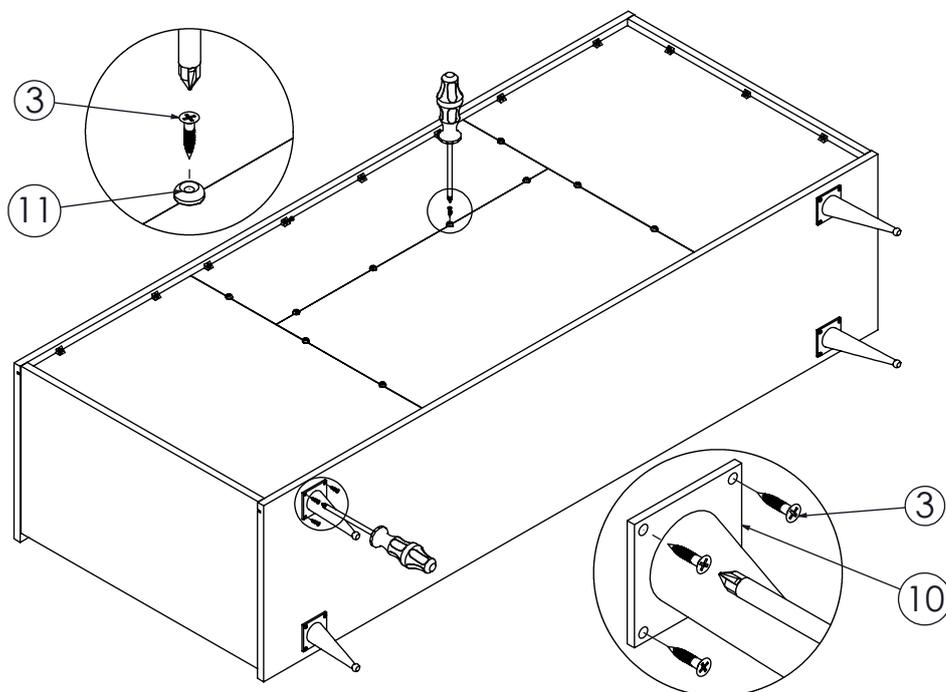


5

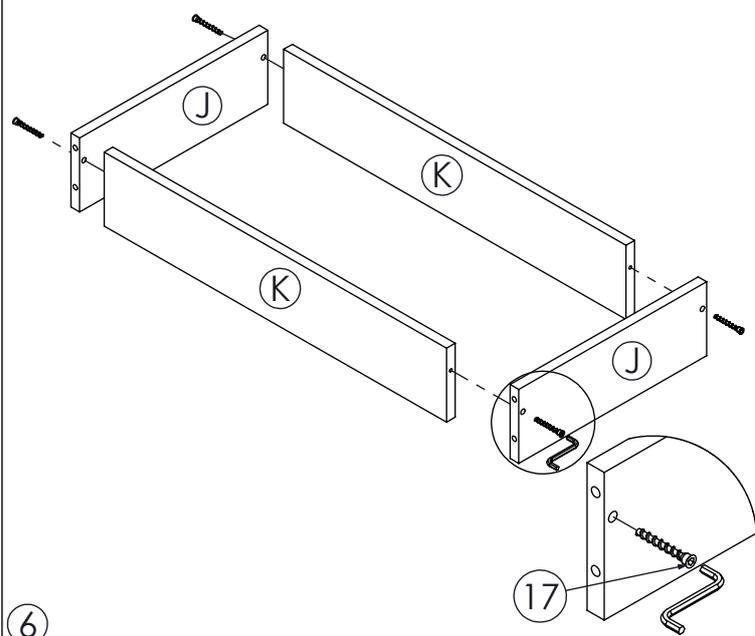


6

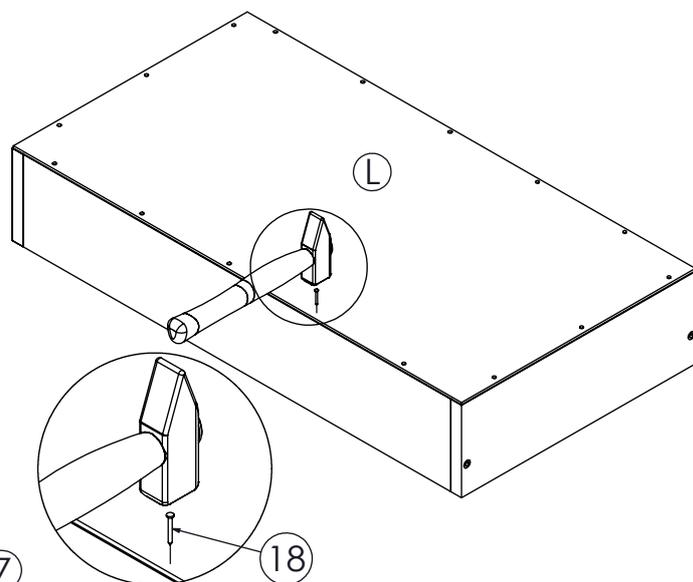

7

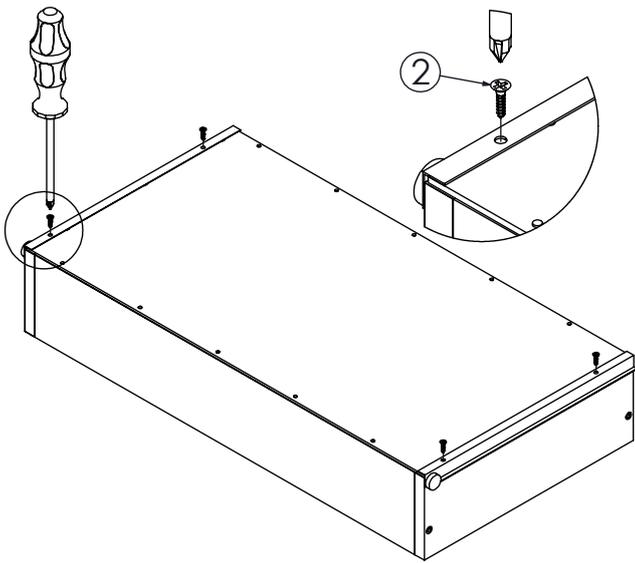


8

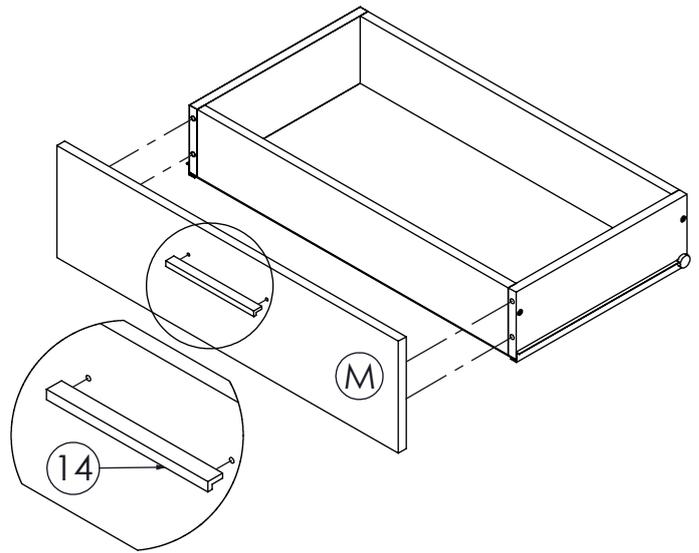


9

Nakon postavljanja maske ladice, izbušiti rupe $\varnothing 5$ mm na prednjem korpusu radi montaže ručke.

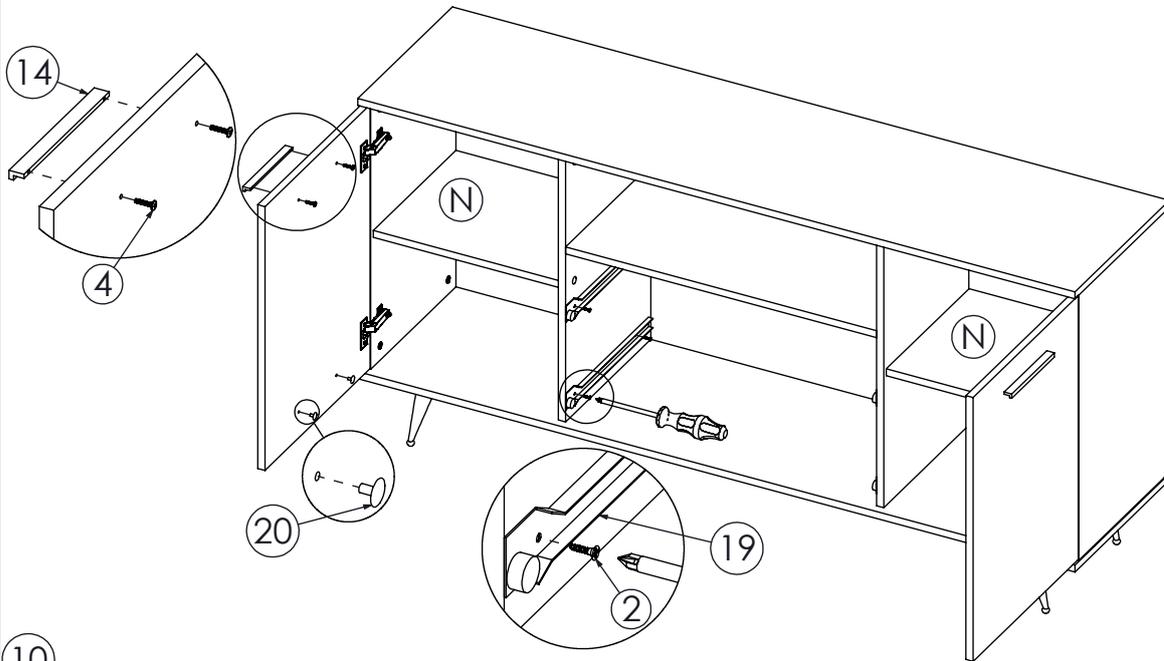

10

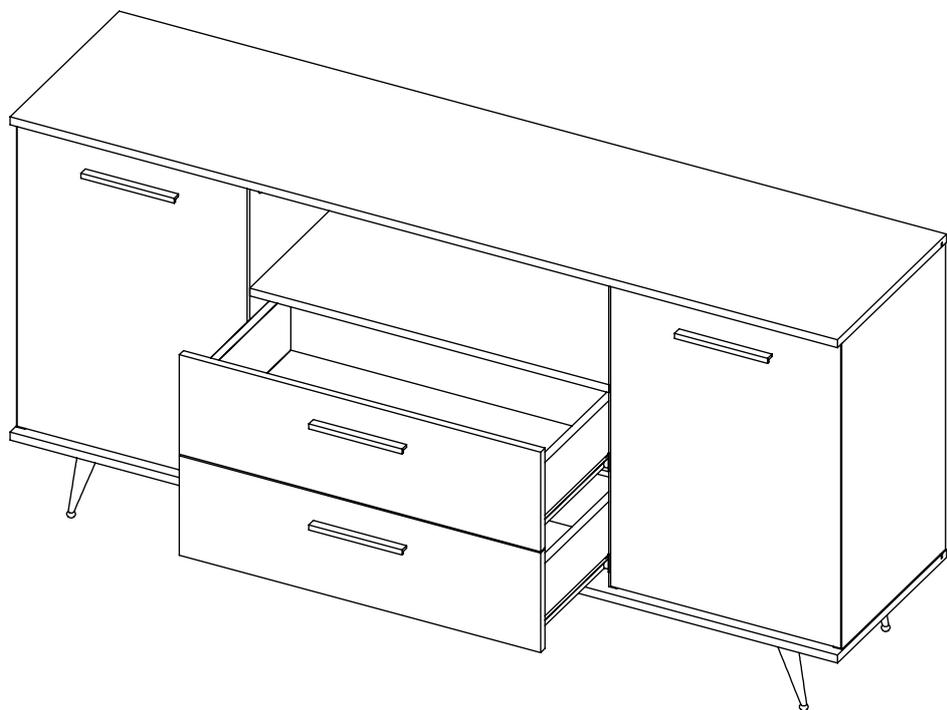

11